
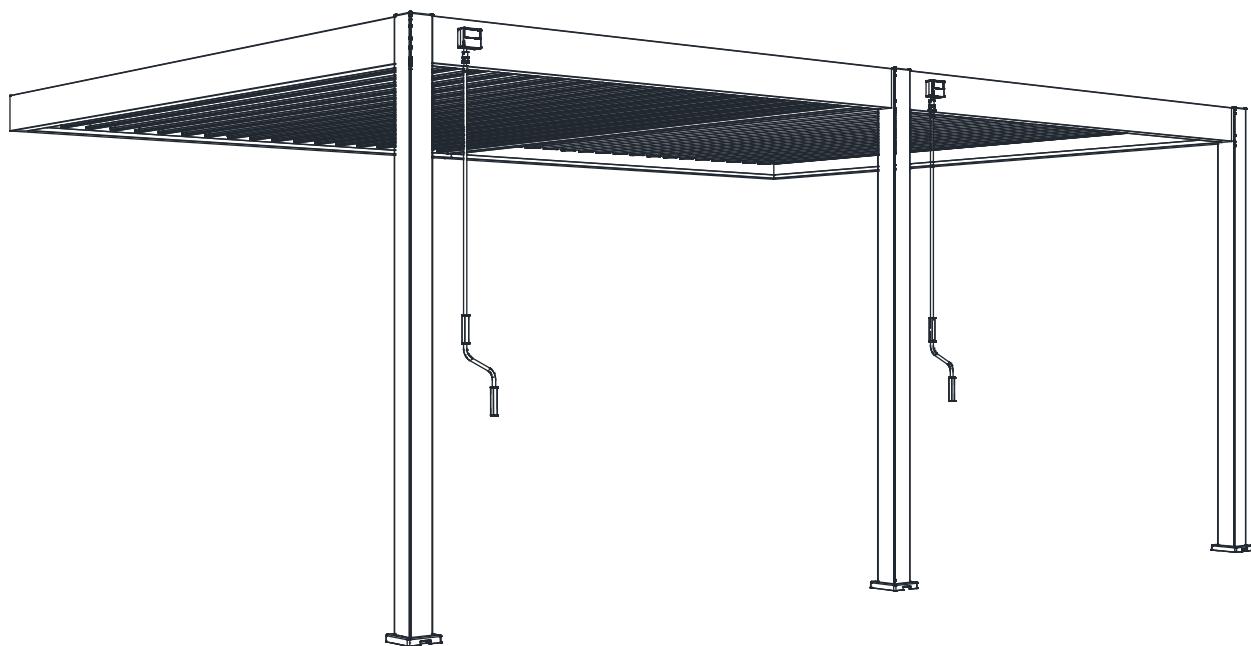

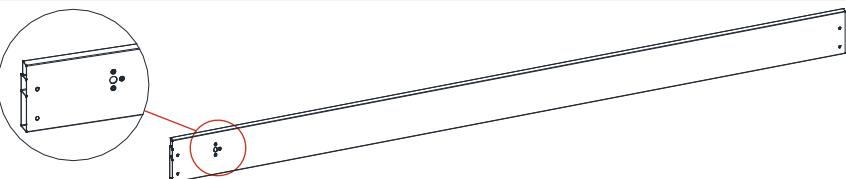
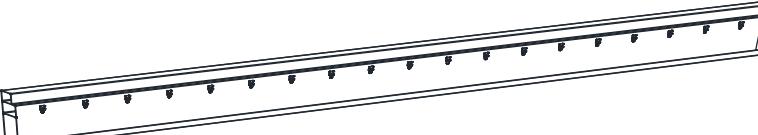
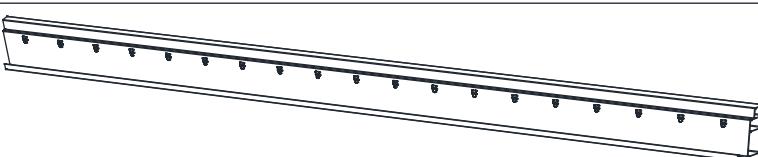




# Installation Guide for Pergola 4m x 6m

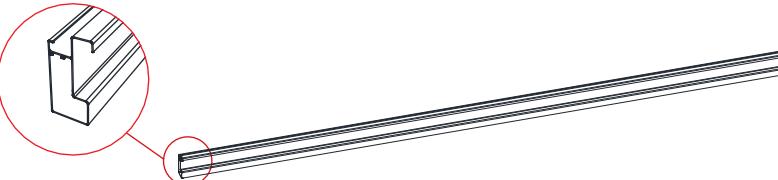

Carton	RET	QTY		REF	QTY		REF	QTY
1/6	AO	2		AO-1	1		IO	3
	JO	3		TO	12		XO-1	12
2/6	BO-1	2		BO-2	1		BO-3	1
	CO-1	1		CO-2	1		EO	1
	FO	2		HO	2		NO	2
	OO	2		PO	2		QO	12
	QO-1	2		RO	12		SO	76
	UO	114		UO-1	76		VO	114
	WO-1	18		XO	74		XO-2	38
	YO	6		ZO-1	1		ZO-2	1
	ZO-3	1		ZO-4	1		ZO-5	1
	ZO-6	1		ZO-7	1		LO-2	2
	LO-3	1		TO-1	14		ZO-8	1
3/6	GO	8		KO	2		LO	36
	LO-1	38		MO	74		WO	308
4/6	GO	10						
5/6	GO	10						
6/6	GO	10						

REF	PICTURE	QTY
AO		2PCS
AO-1		1PCS
BO-1		2PCS
BO-2		1PCS
BO-3		1PCS
CO-1		1PCS
CO-2		1PCS
EO		1PCS
FO		2PCS
GO		38PCS
HO		2PCS



REF	PICTURE	QTY
IO		3PCS
JO		3PCS
KO		2PCS
LO		36PCS
LO-1		38PCS
LO-2		2PCS
LO-3		1PCS
MO		74PCS
NO		2PCS
OO		2PCS
PO		2PCS
QO		12PCS
QO-1		2PCS
RO		12PCS
SO		76PCS
TO		12PCS
TO-1		14PCS








REF	PICTURE	QTY
UO		114PCS
UO-1		76PCS
VO		114PCS
WO		308PCS
WO-1		18PCS
XO		74PCS
XO-1		12PCS
XO-2		38PCS
YO		6PCS
ZO-1		1PCS
ZO-2		1PCS
ZO-3		1PCS
ZO-4		1PCS
ZO-5		1PCS
ZO-6		1PCS
ZO-7		1PCS
ZO-8		1PCS



# ATTENTION!!!


Please open the louvers to vertical in winter and snowing weather to protect your pergola!



## Tools Required for Installation


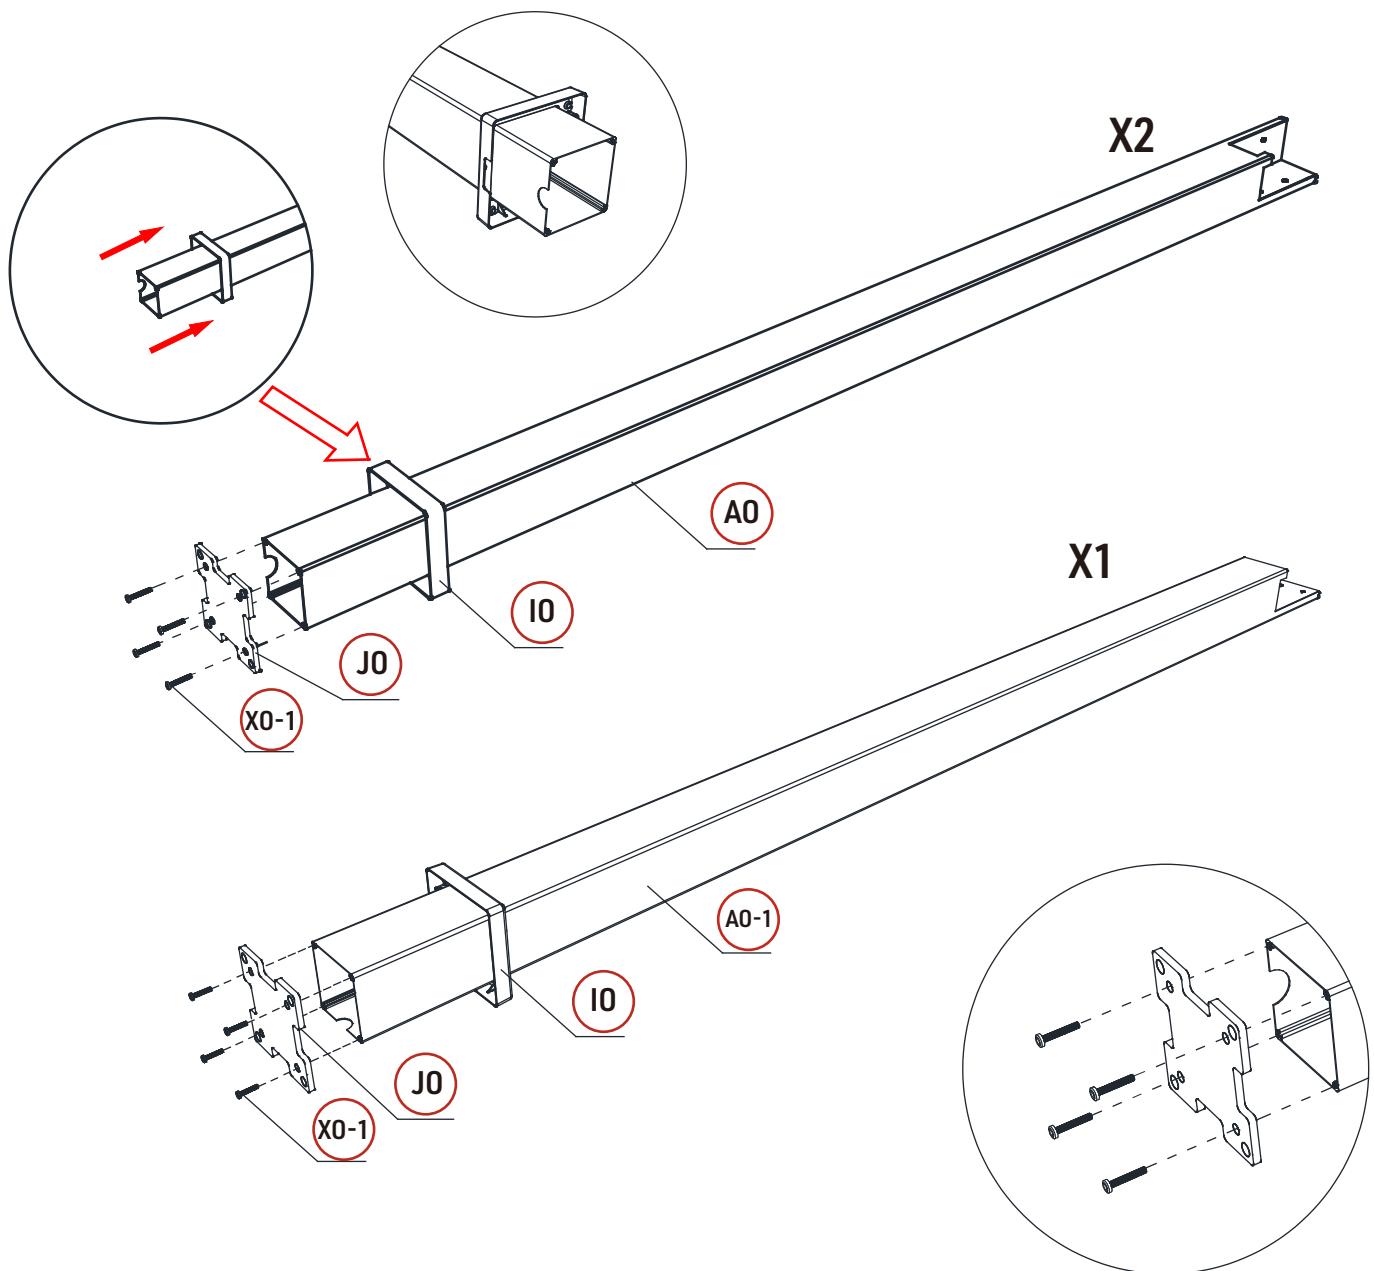
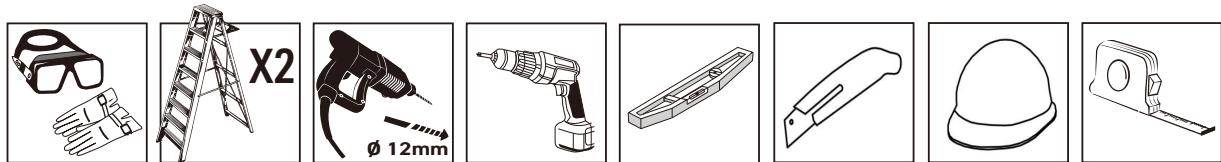


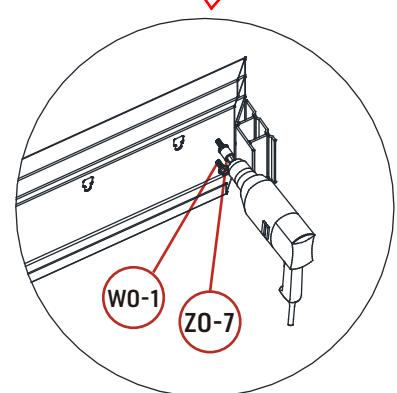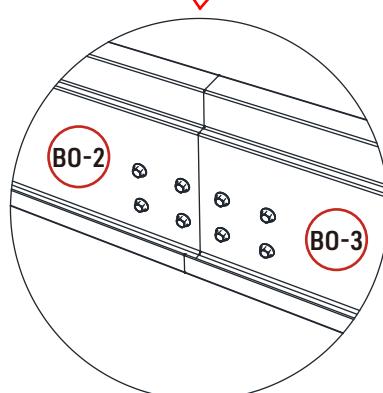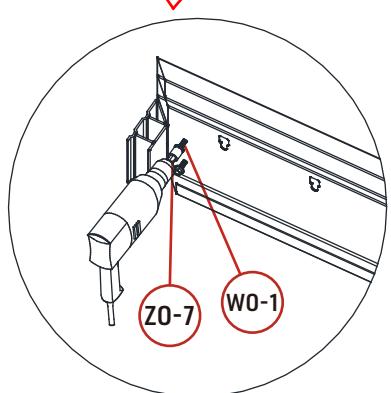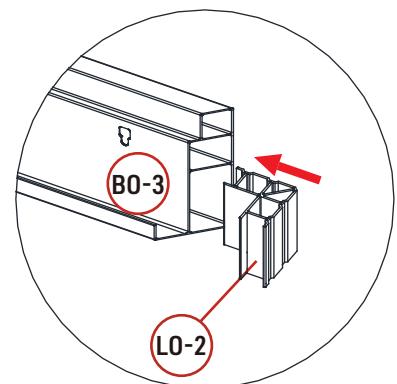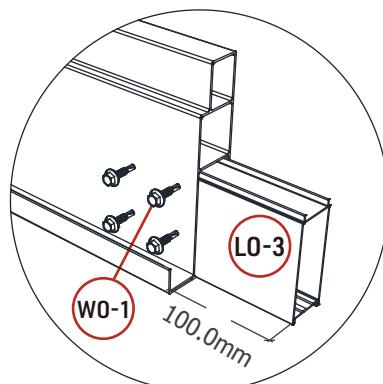
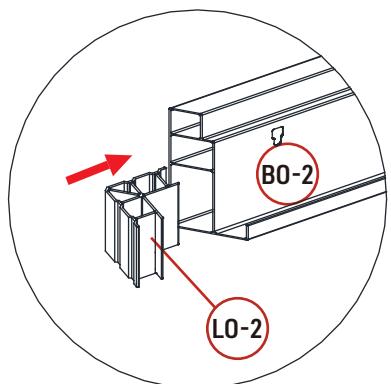
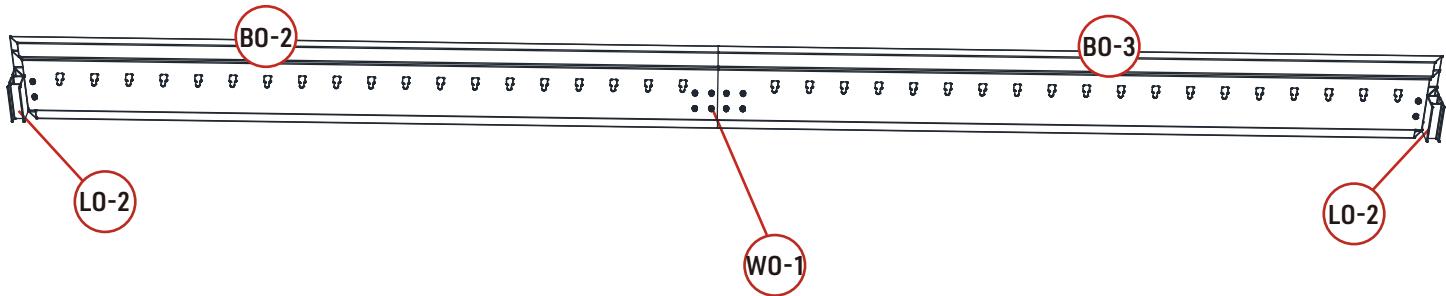


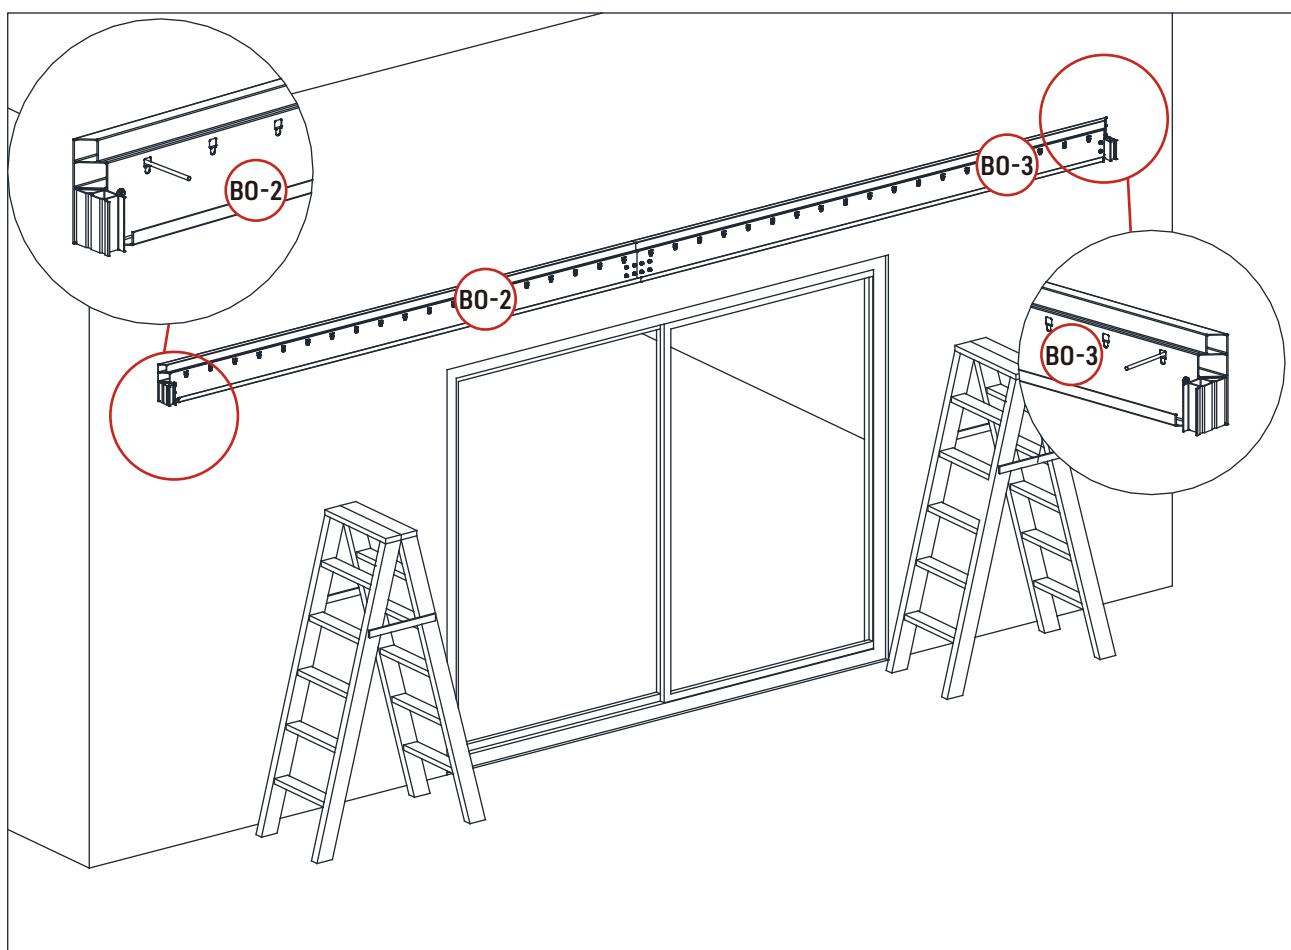
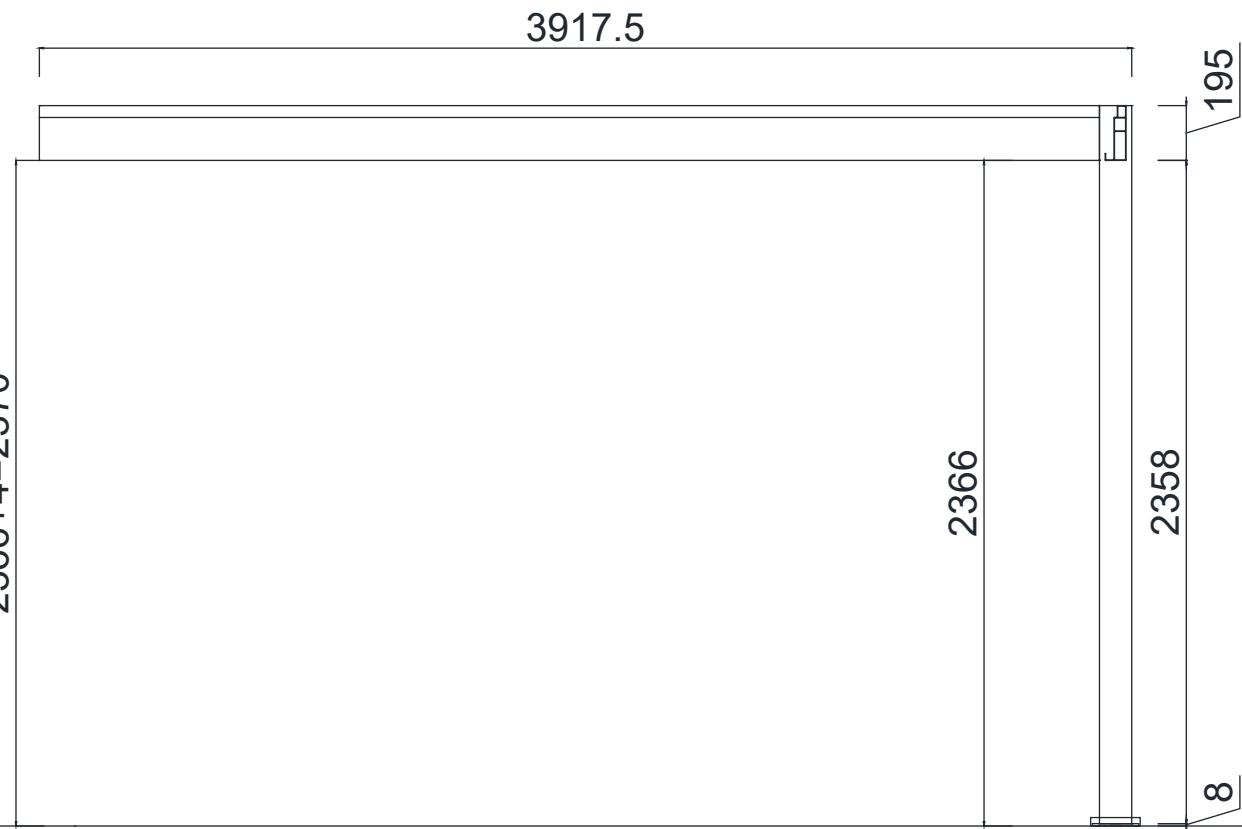





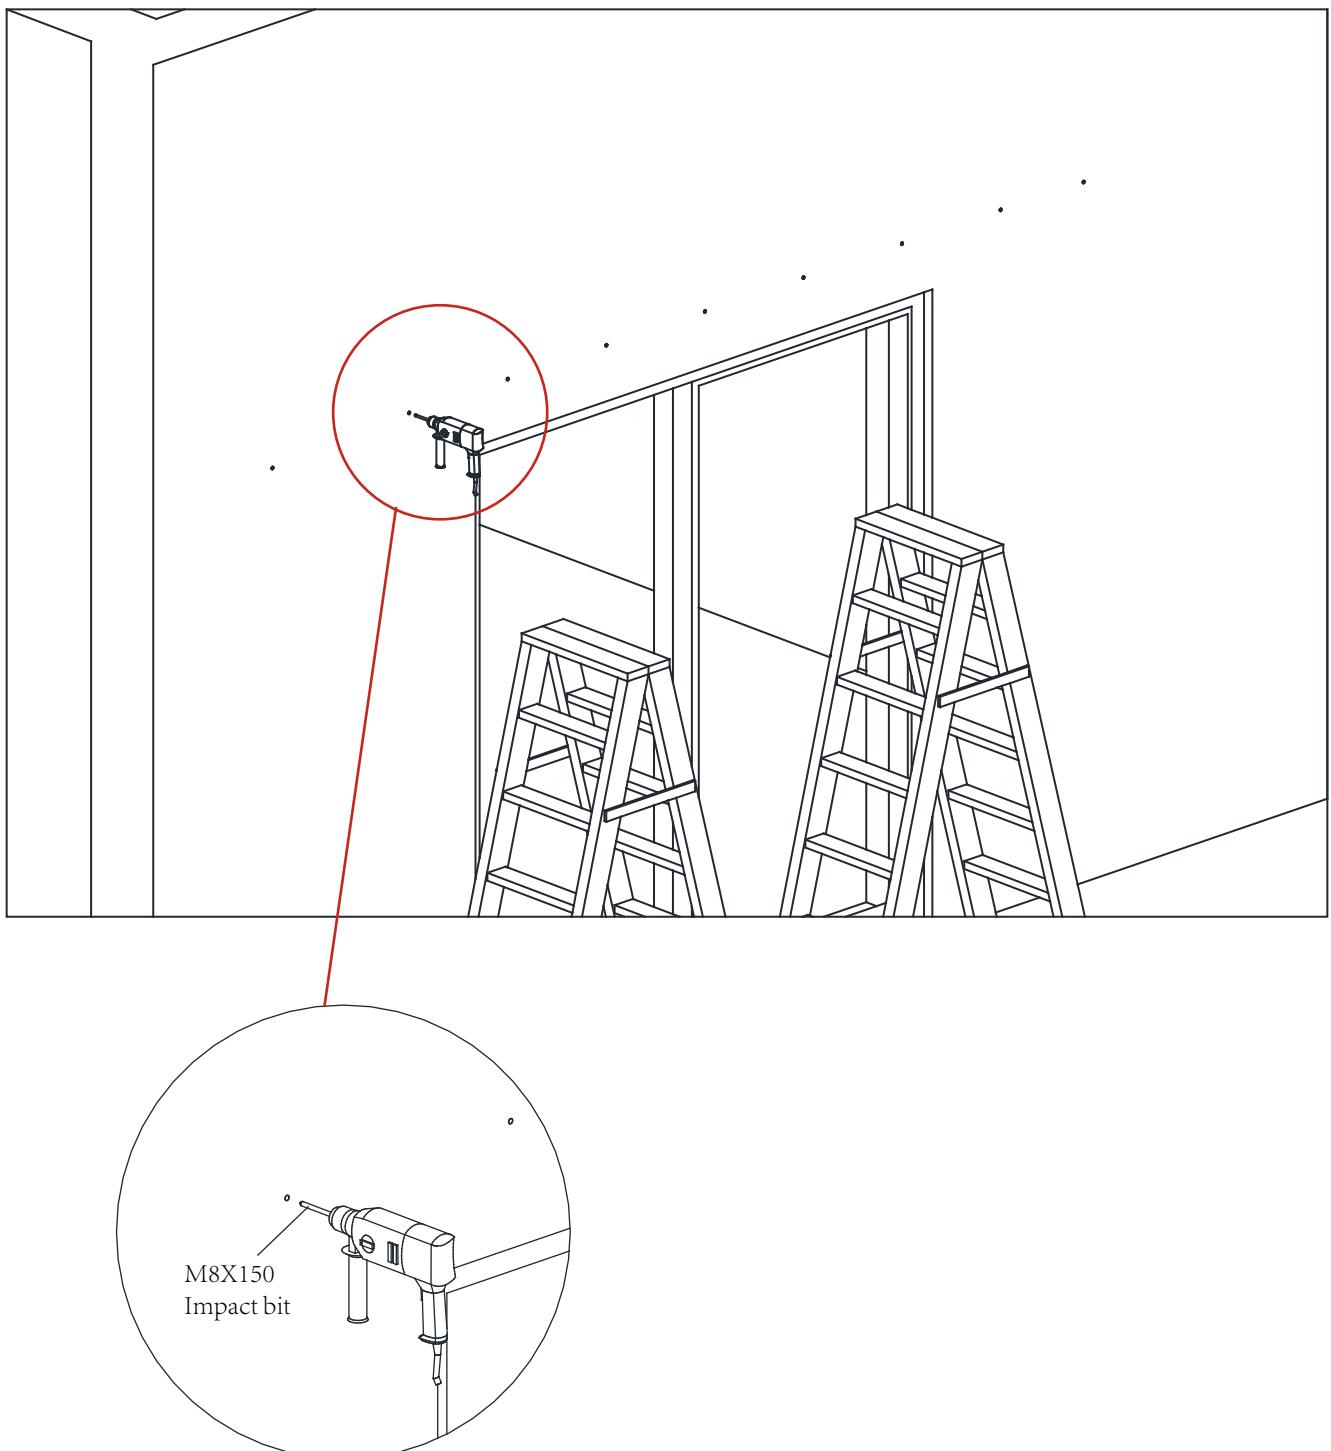






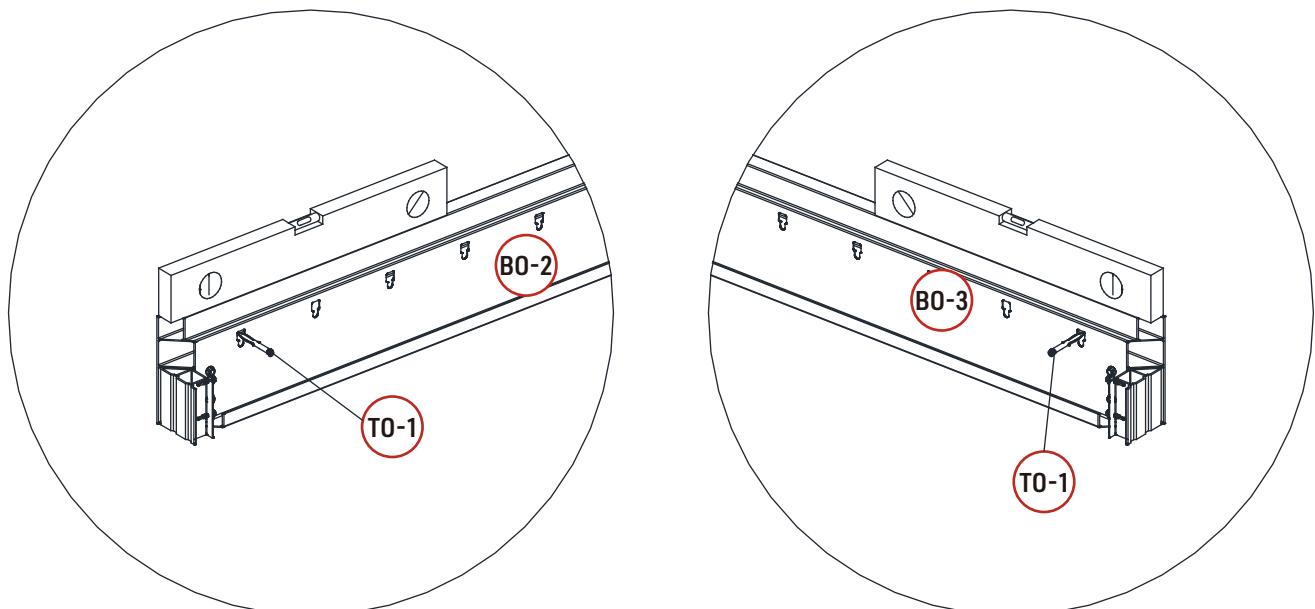
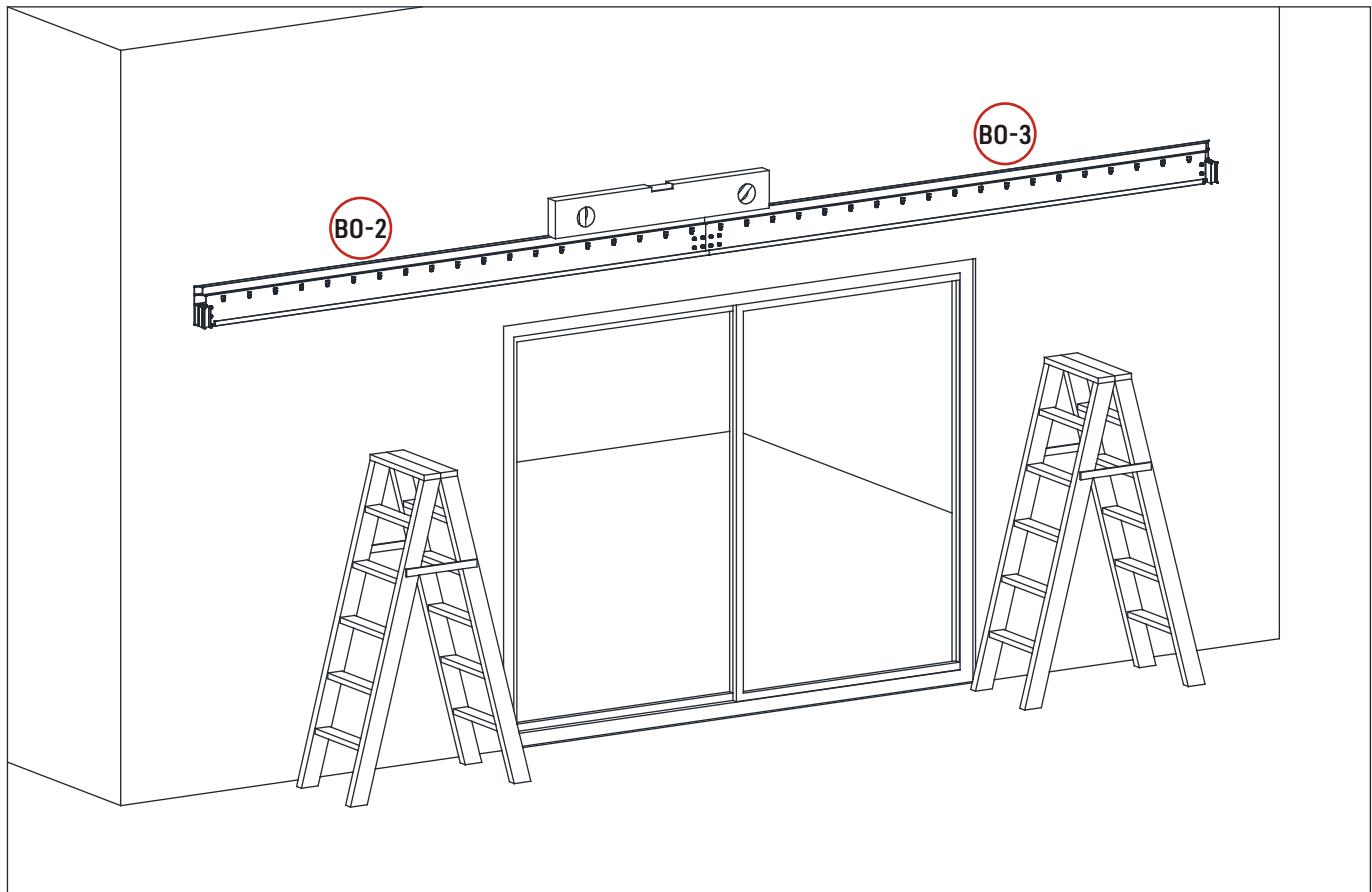


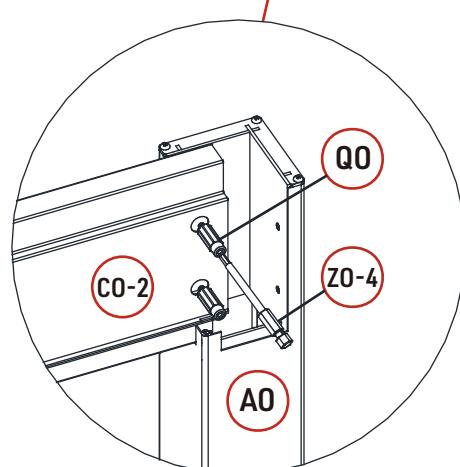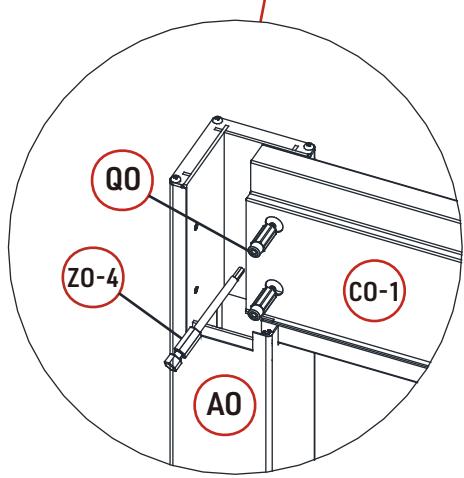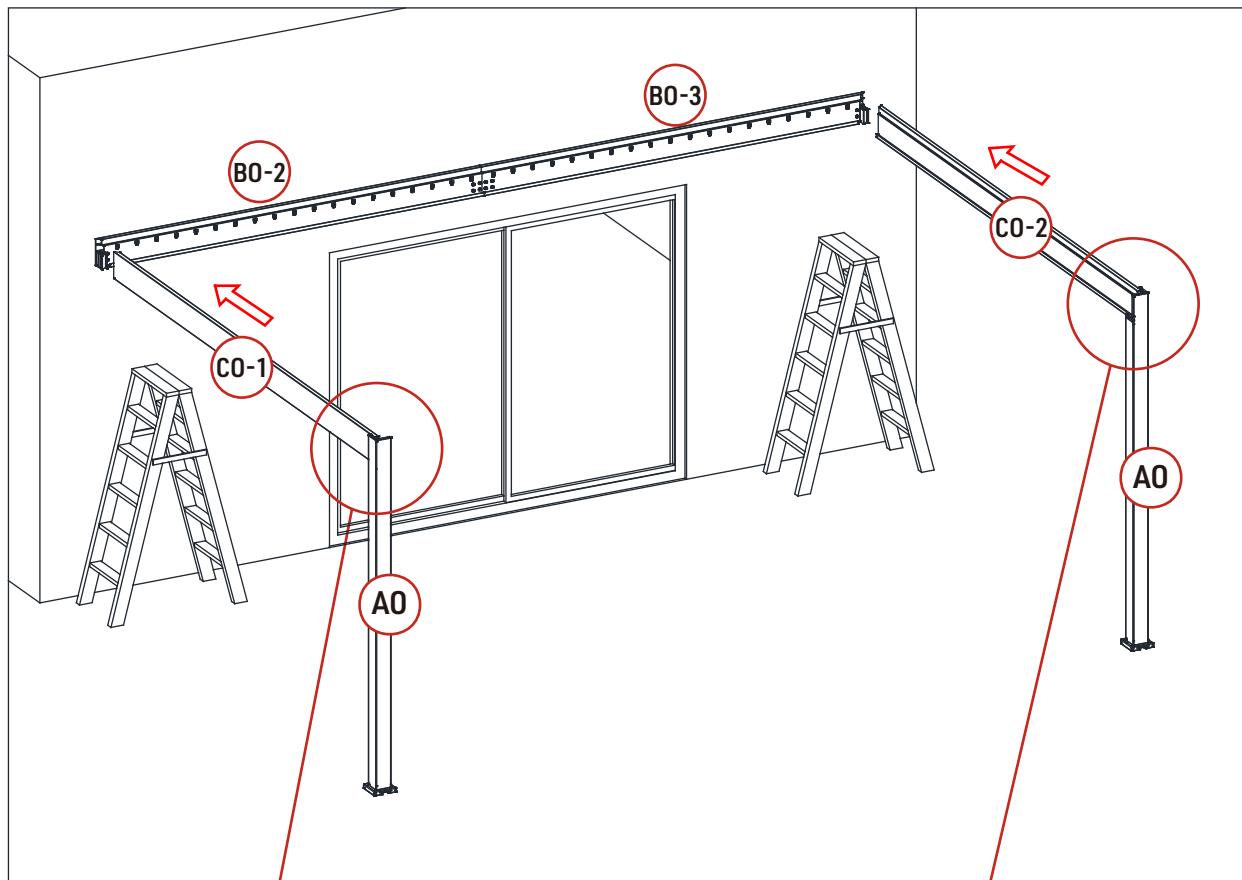

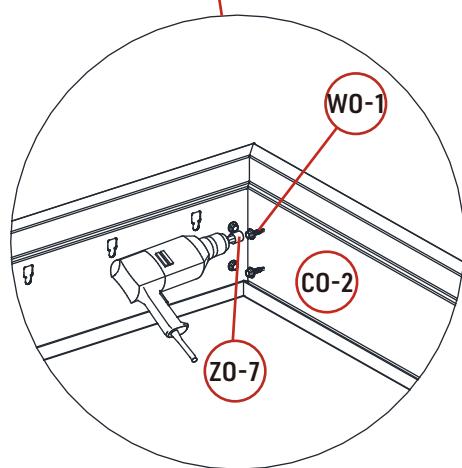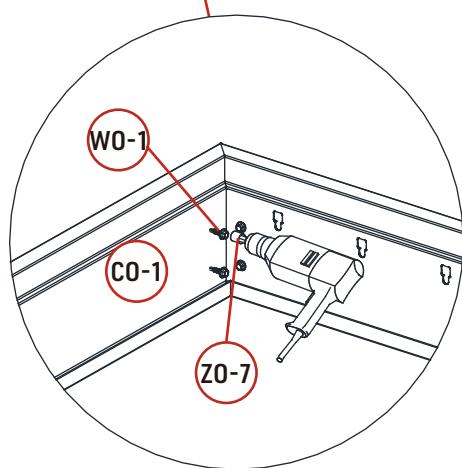
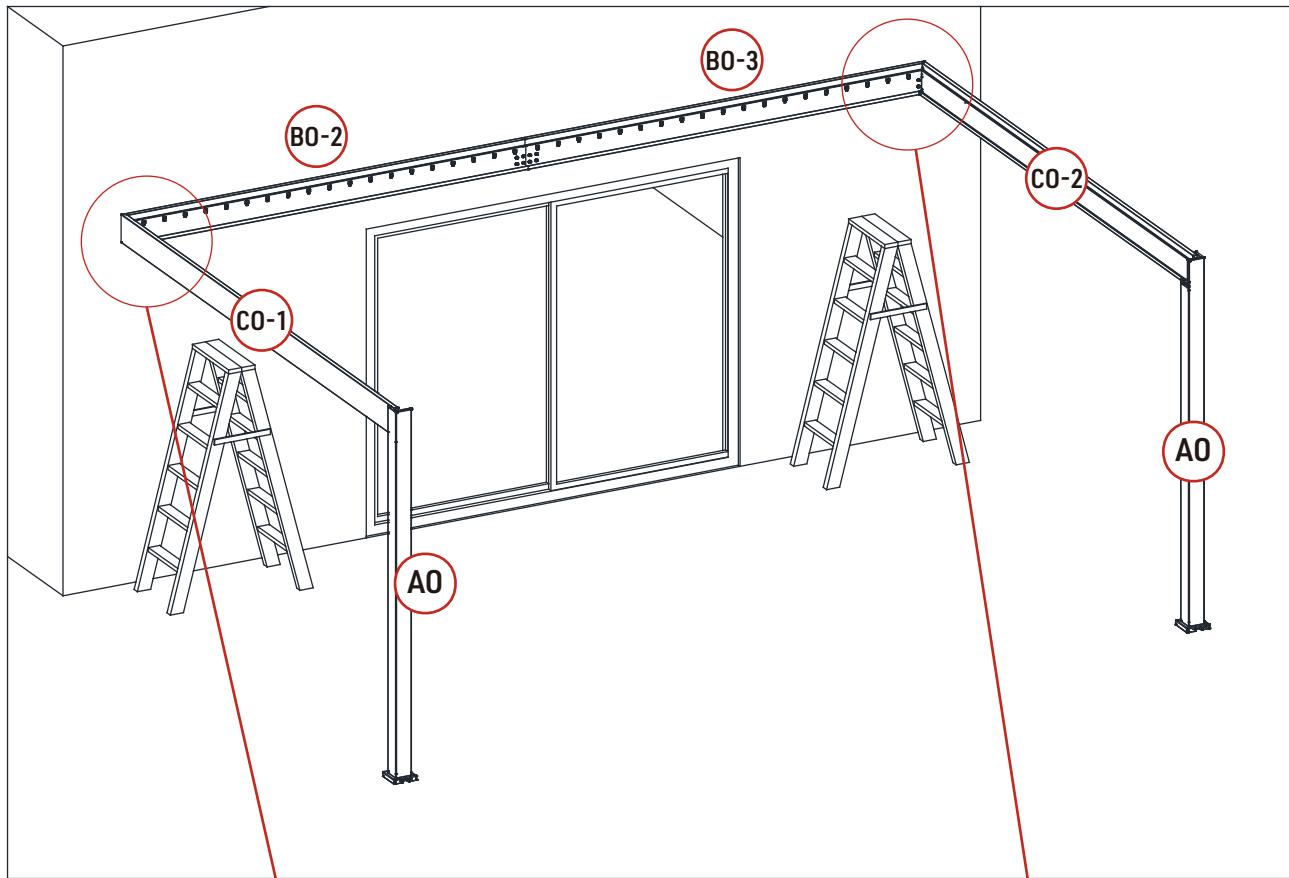


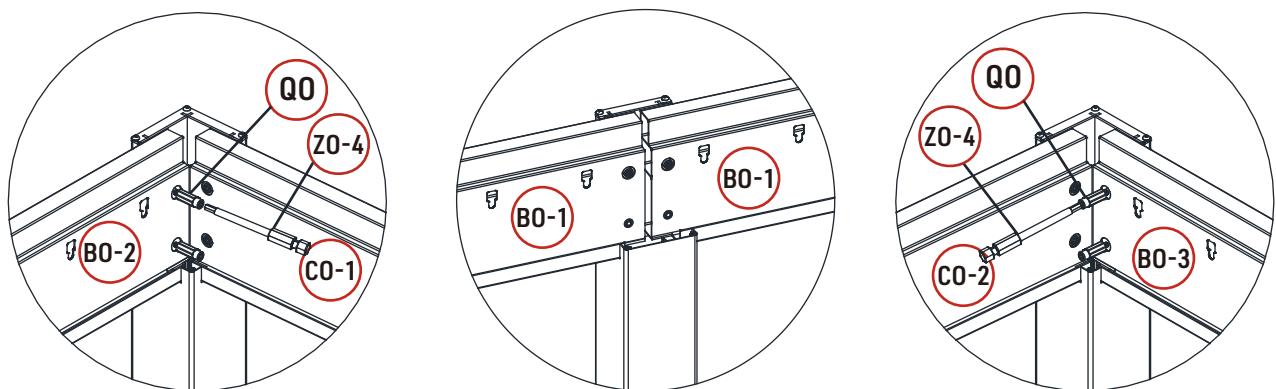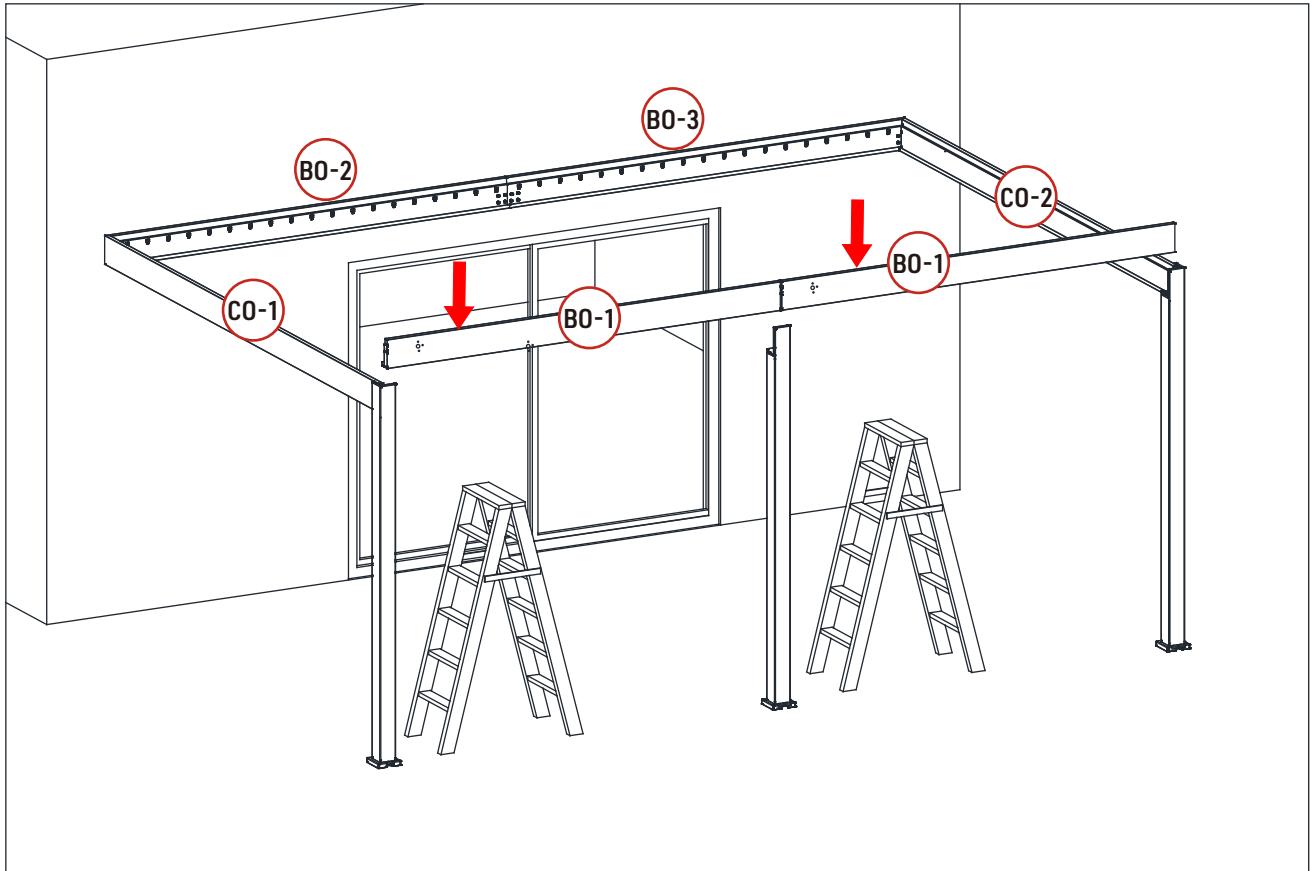

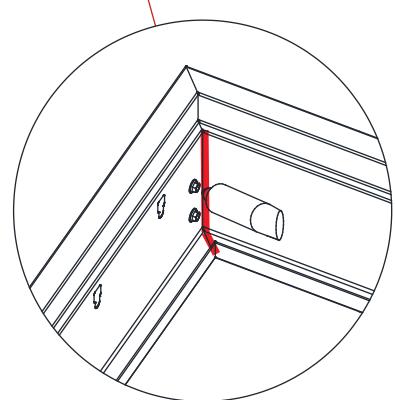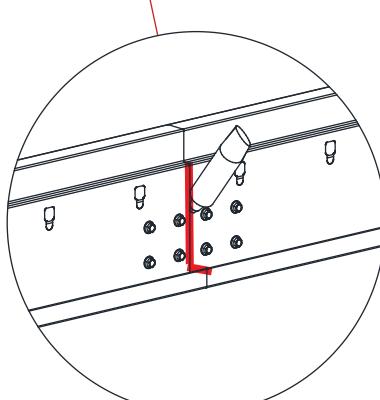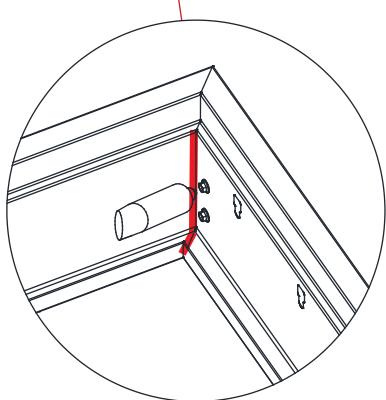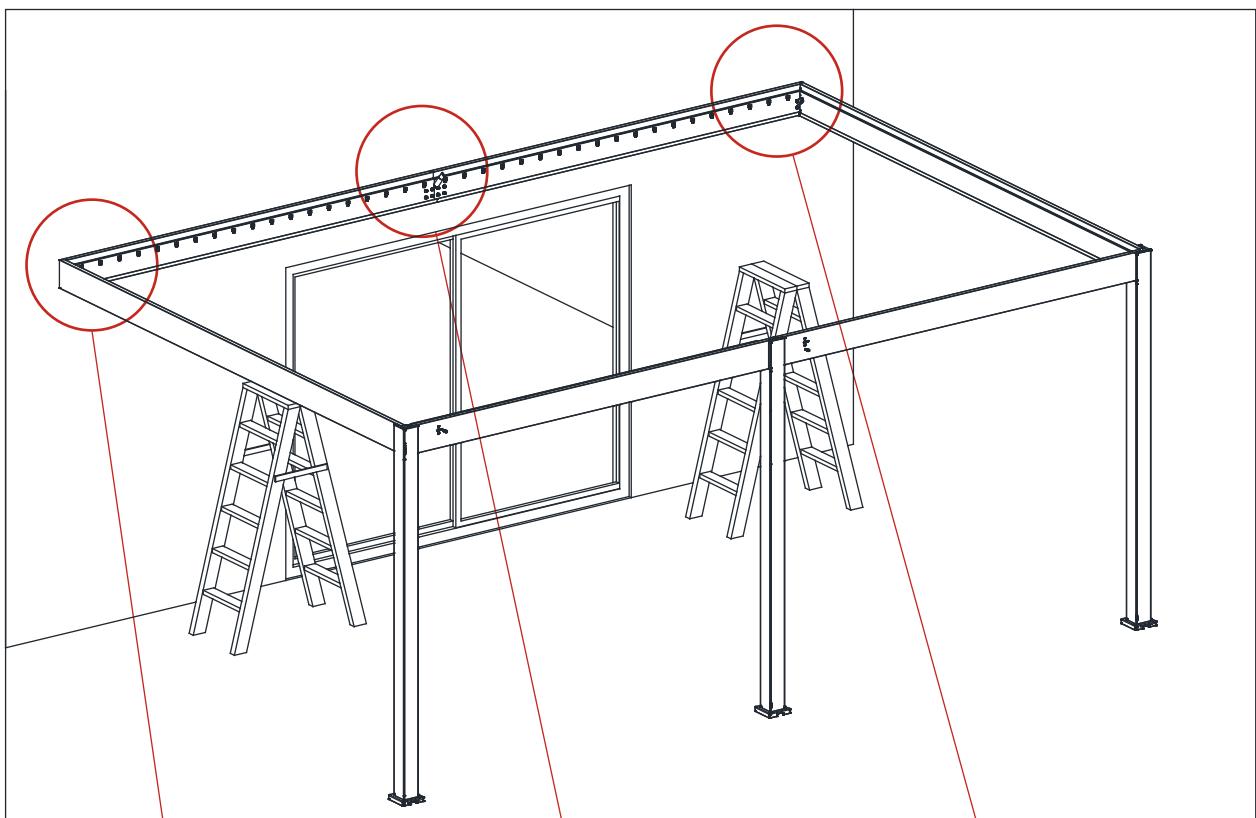


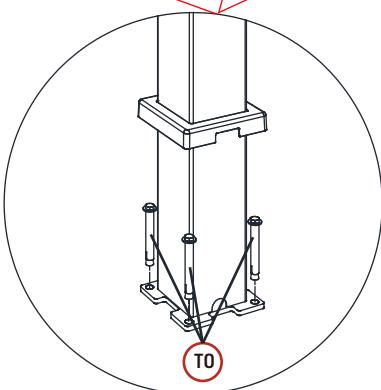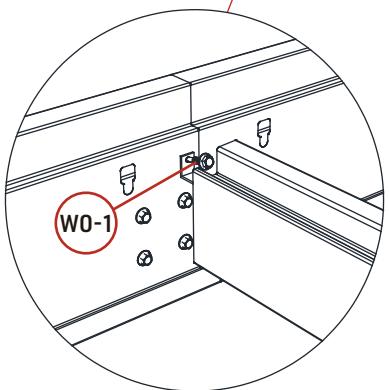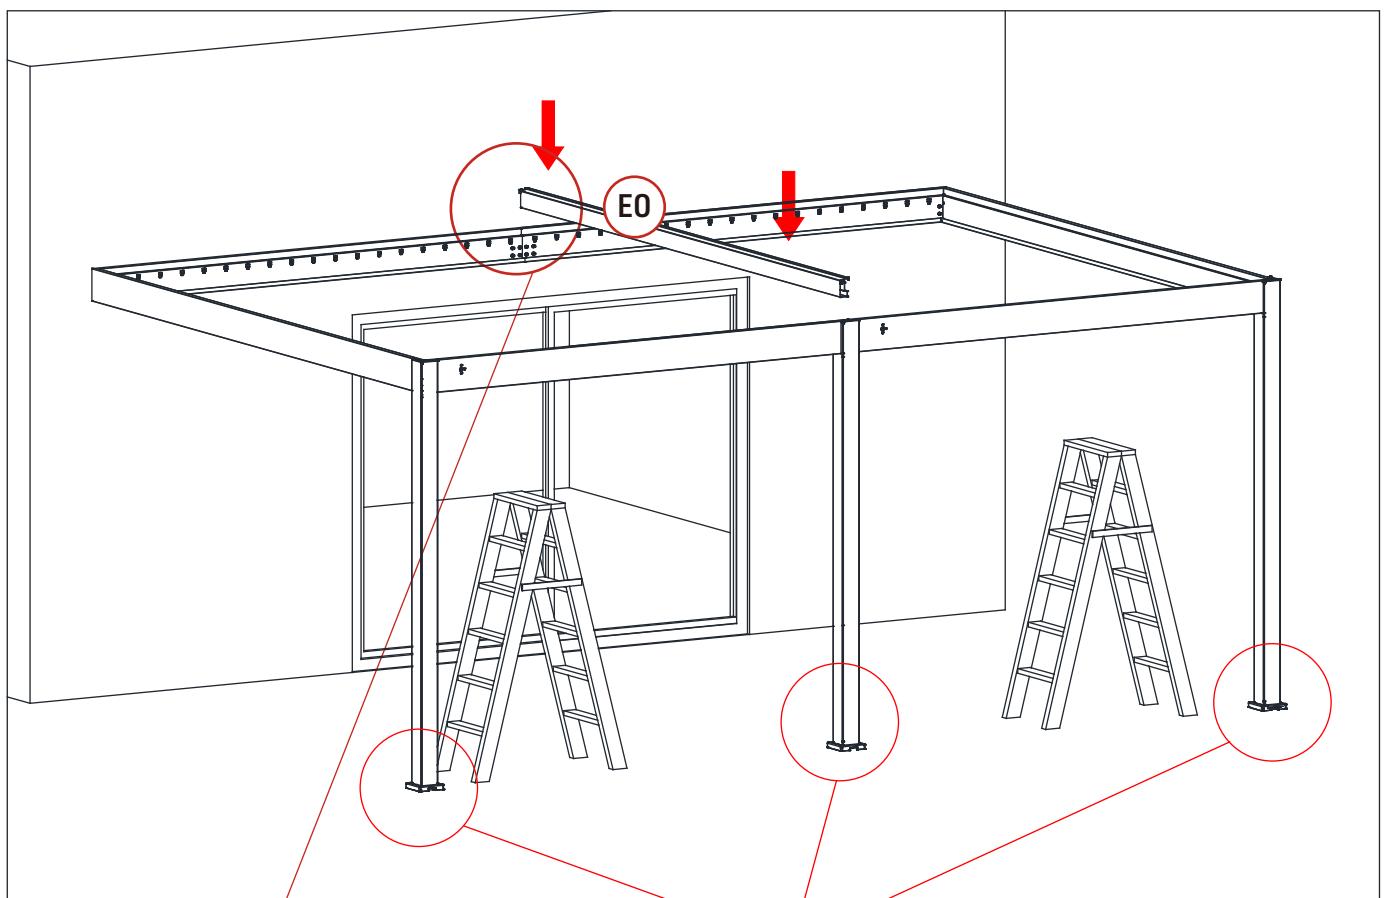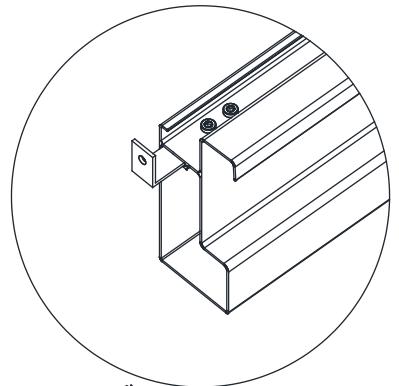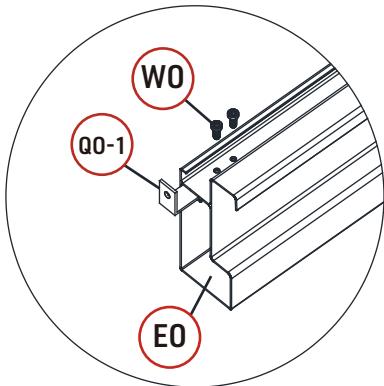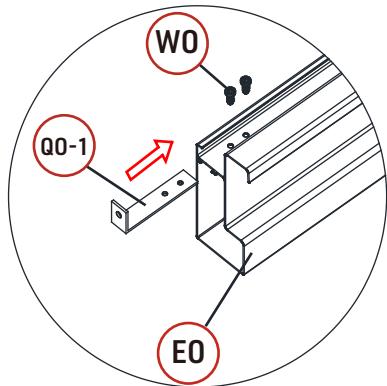

 KO X2

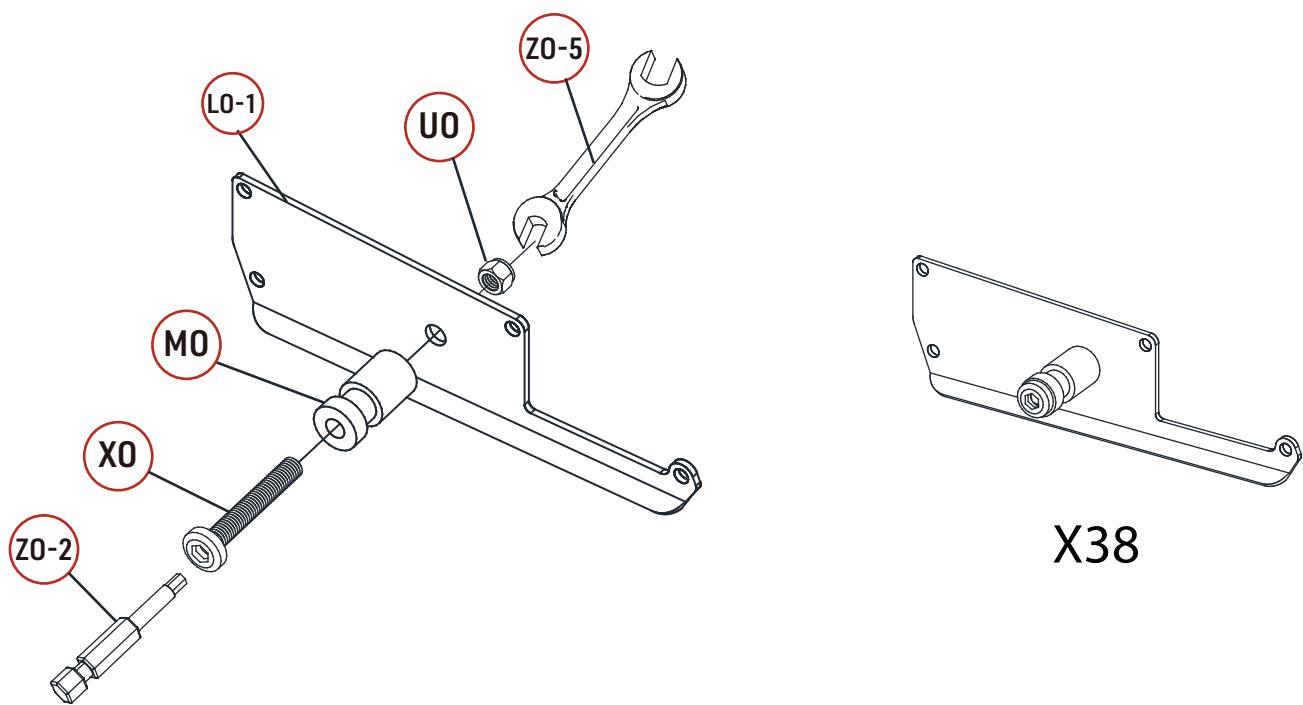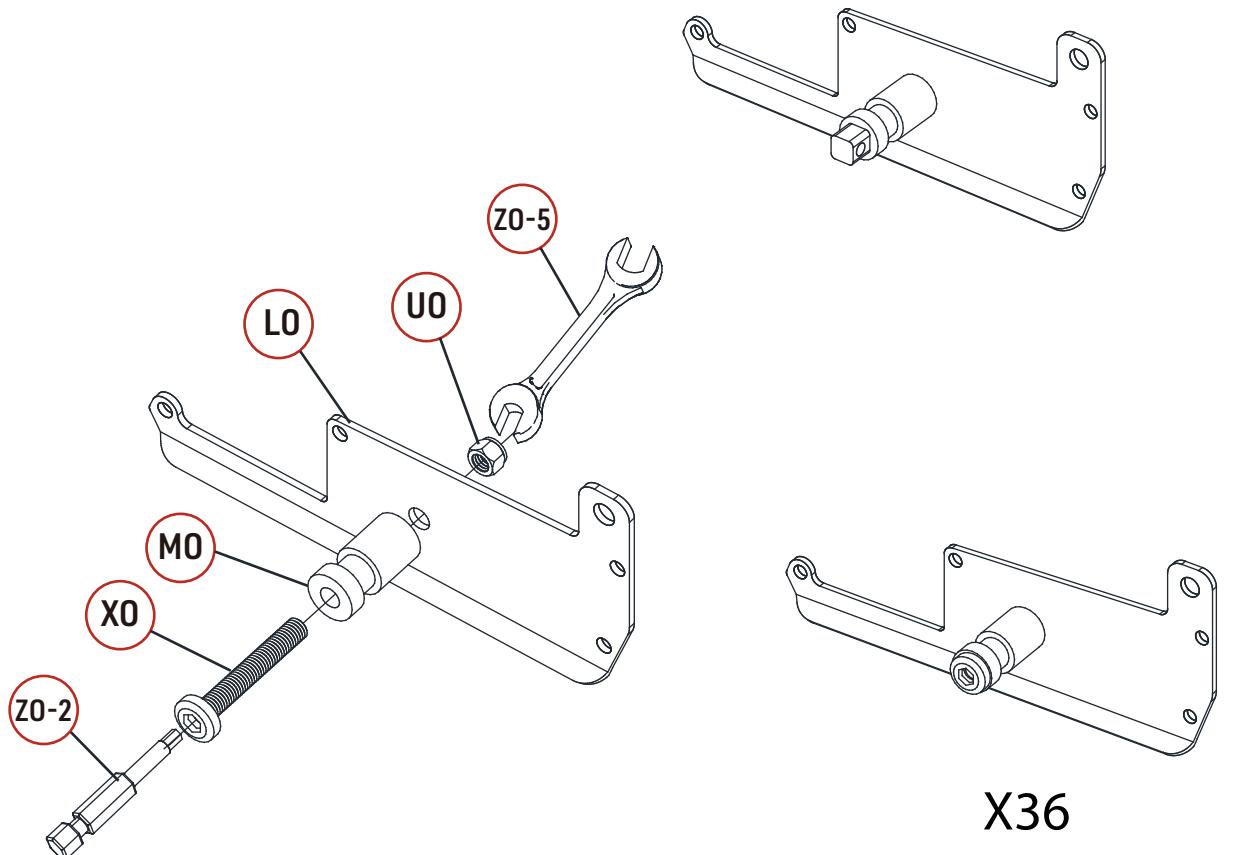

X2

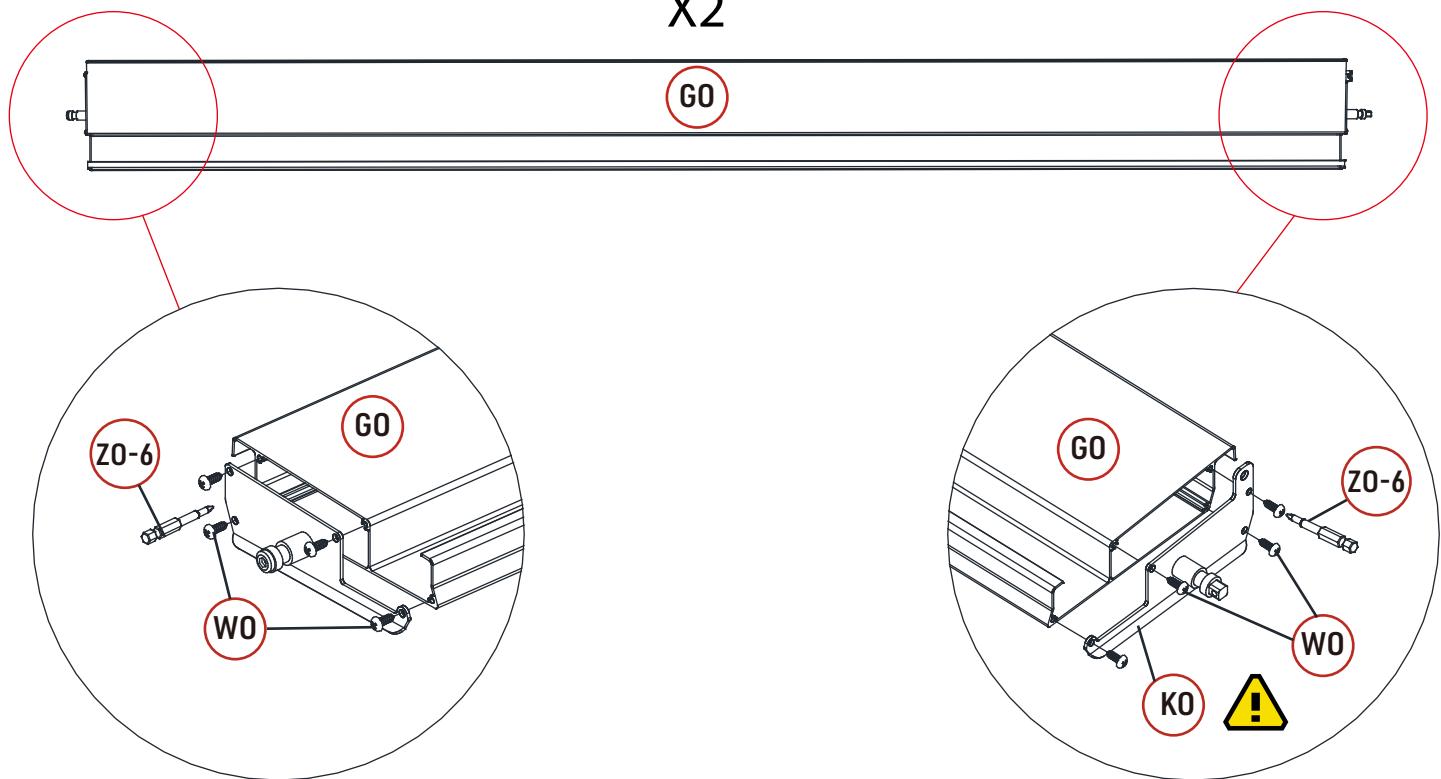

X36

