

## ASSEMBLING YOUR PORTEÑO FOLKA CHAIR

### TOOLS NEEDED:

- Small to medium Phillips head screwdriver
- Small adjustable spanner or socket set

Your Porteño Folka Chair comes assembled without the back rest to ensure a safe delivery. We've put together these easy steps to add the back rest ring to your chair.

**STEP 1.** Take the back rest ring that is resting on your chair seat and remove the two silver bolts that are loosely screwed on.

**STEP 2.** Remove the two black screws from the inside of the back chair legs (back legs are the two that are positioned closer together).


**STEP 3.** Lay the chair on it's side, back legs facing the ceiling. Install the back rest ring by placing it over the back legs of the chair, lining up the bolt brackets on the back rest ring and the seat. Make sure the other brackets on the base of the ring align with where the two black screws were on the inside, back legs of the chair. Screw in the two silver bolts first and tighten with adjustable spanner or socket.

**STEP 4.** Finally, screw the two small black screws through the brackets on the base of the back rest ring and into the holes the screws were removed from on the inside of the back legs of the chair. (The two silver bolts in the previous step may need to be loosened and then retightened to allow installation of these screws.) Firmly tighten the small black screws with a Phillips head screwdriver, being careful not to overtighten.

Your Porteño Folka Chair is now ready for use.

Please contact us at [hello@pampa.com.au](mailto:hello@pampa.com.au) if you have any questions.

**BACK REST RING**

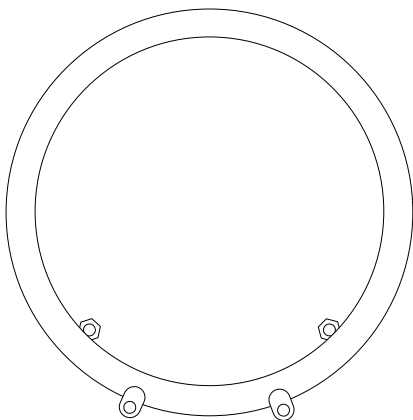

**CHAIR**

