


# QIK RETROFIT™



- LWQR2X2-30W-W4000K (4,050 Lumens) - 2 strips
- LWQR2X2-40W-W4000K (5,400 Lumens) - 3 strips
- LWQR2X4-40W-W4000K (5,400 Lumens) - 2 strips

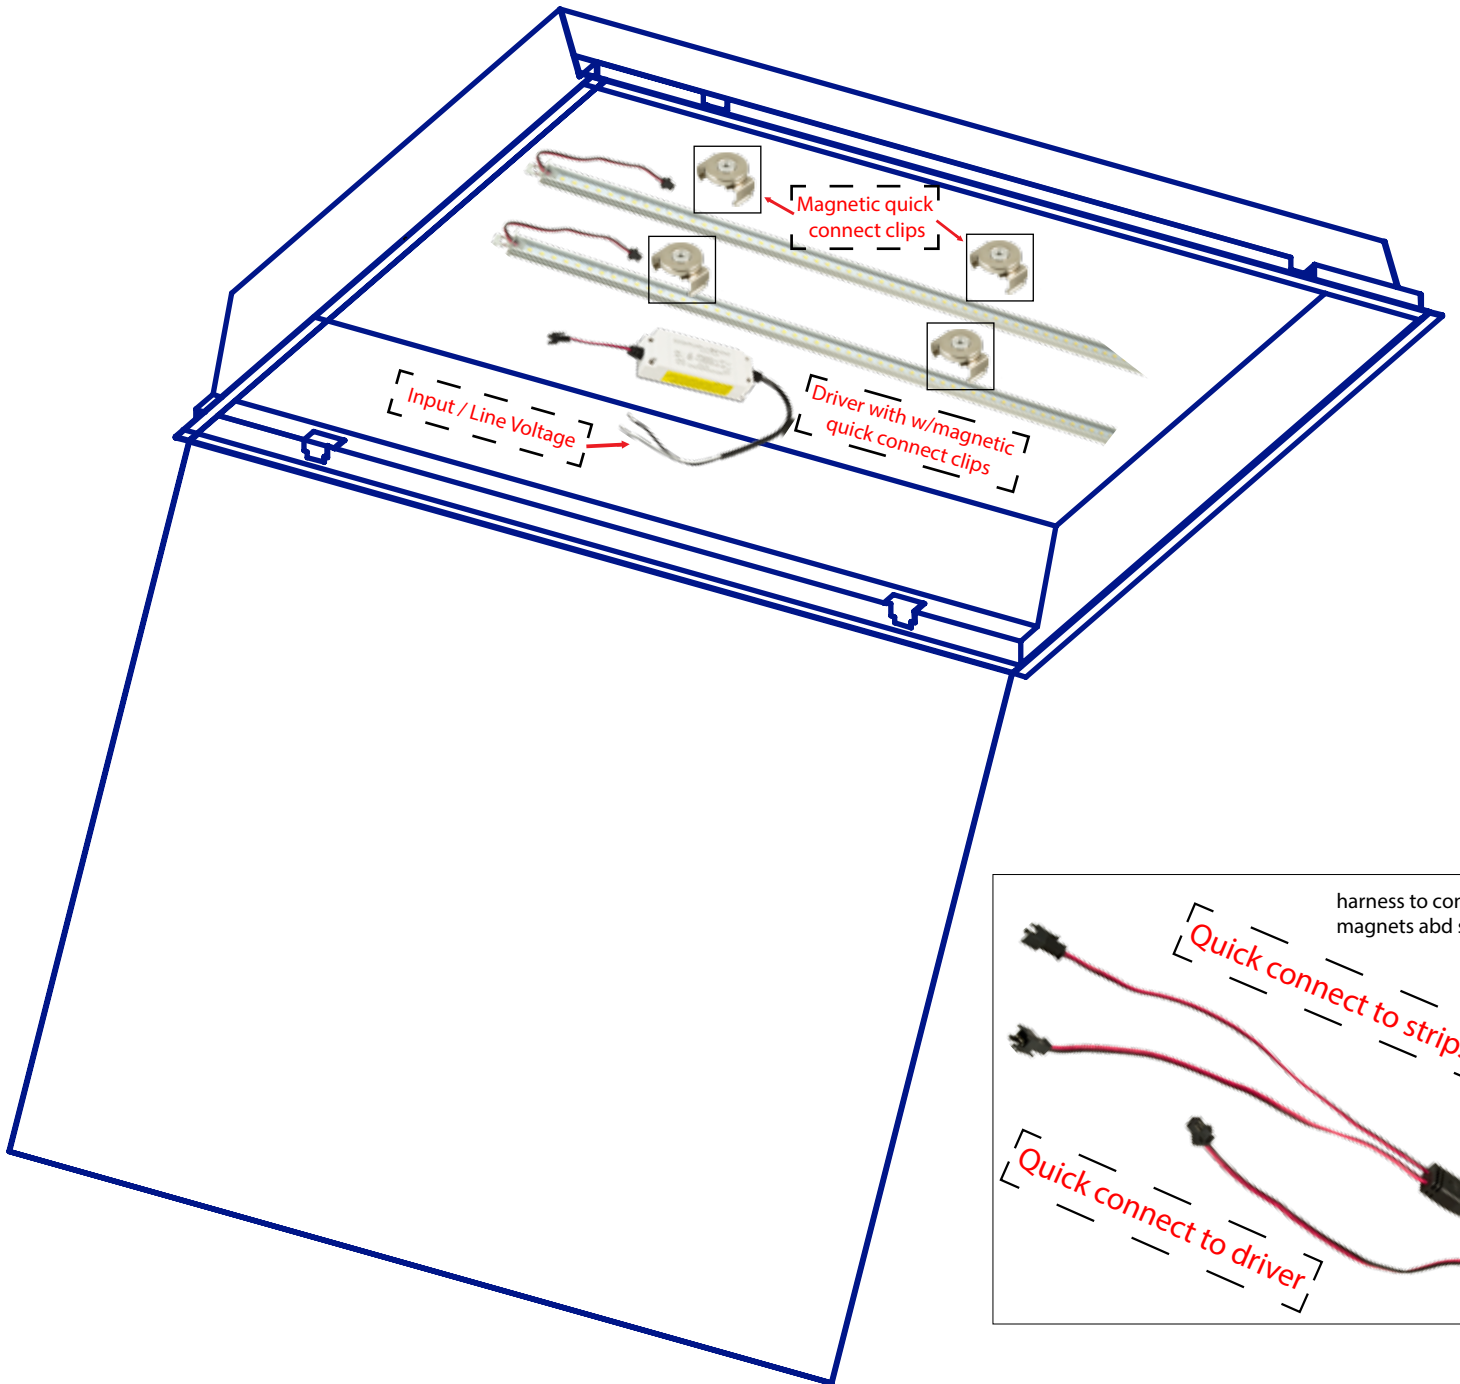

# QIK RETROFIT™

## Parts List

### PCB Strips

A




### Input / Line Voltage

B




### Magnetic quick connect clips

C

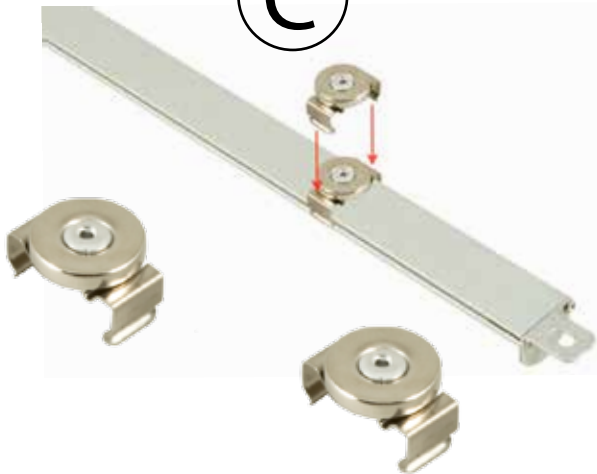

### Driver with w/magnetic quick connect clips

D

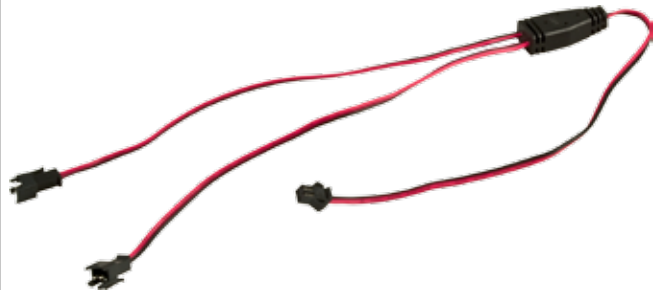

# QIK RETROFIT™

## Installation directions

**WARNING : Turn OFF electricity at the junction box before any installation.**

Each kit is **specified to your requirements**. The kits are configured with the PCB Strips and the driver and **should never be changed or altered in any way**.

Each kit come with: (see page 2)

### PARTS

- **A** 2 or 3 PCB strips.
- **B** 1 driver with a quick connect to mount to the harness of the PCB.
- **C** magnetic clips.
- **D** the appropriate amount of harness for the driver.

### INSTRUCTIONS

- 1 take out the old fluorescent tube.  
(it is best to disconnect tomb stones/lamp holders).
- 2 cut the line voltage wire going to the driver.
- 3 using the quick connect(if purchased) (otherwise use wire nuts), connect the line voltage to the driver line voltage wires.

# QIK RETRoFIT™



QIK RETRoFIT diagram

