



WALLPAPER INSTALLATION INSTRUCTIONS



Step 1: Wash wall thoroughly top to bottom. Do not use cleaners, just clean water and allow to dry overnight. **We do not recommend or warranty installation on texture walls.**

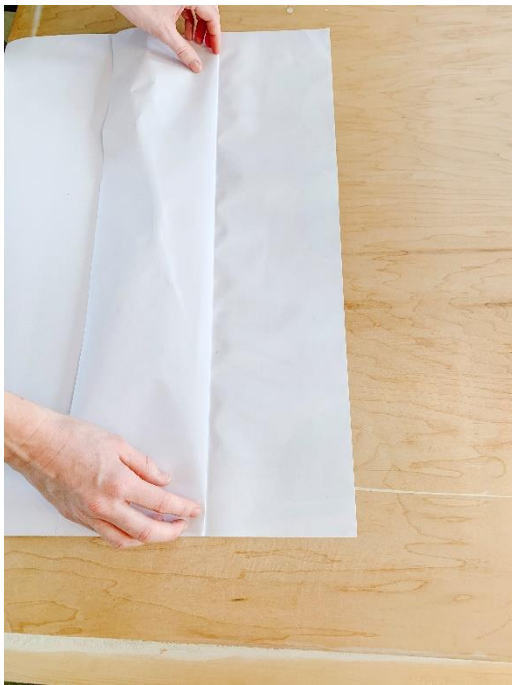

Step 3: Place wallpaper on a clean surface face down. Peel backing paper down from the top of the sheet around 6" (30 cm). Fold a crease into the backing paper roughly at the 6" (30 cm) mark.

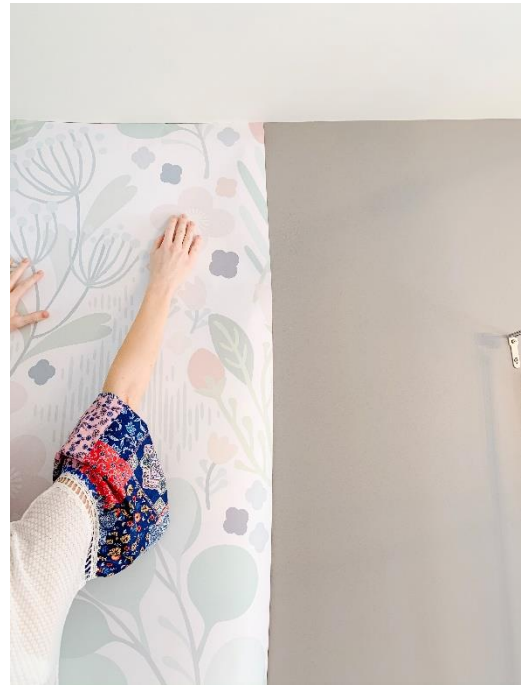

Step 2: Lay sheets out; or hang with tape, or tacks to ensure you have the correct # of sheets to complete the wall. Sheet #1 should be placed at the left-most side of your wall.




Step 4: Take exposed wallpaper and stick it to the wall. Position it so that the sheet is 1/2" higher than the wall, allow this extra to run onto the ceiling.



Step 5: Make sure wallpaper sheets are hanging straight down, reach underneath and grab the backing paper that has been folded over.




Step 6: While slowly pulling the backing paper down, use the supplied squeegee to press the wallpaper against the wall. Try to avoid trapping air bubbles by going slow. (Some overlapping may need to occur between sheets for design to line up perfectly.)

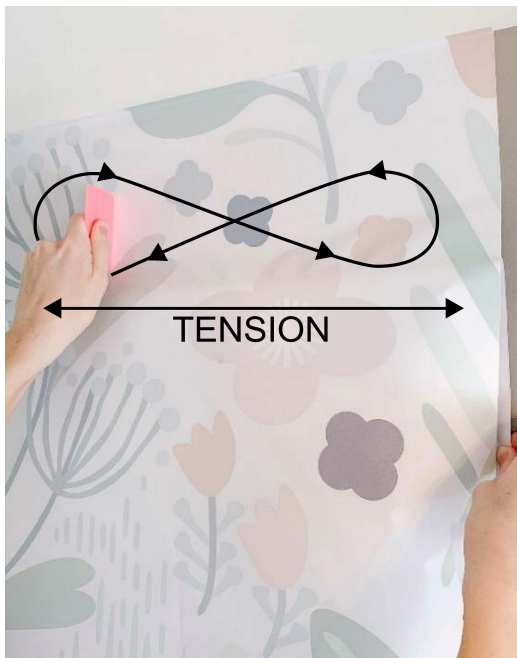

Step 7: Move your squeegee from left to right (figure 8 pattern), while keeping even tension outwards.

Pro Tip: A friend would be super helpful at this point!

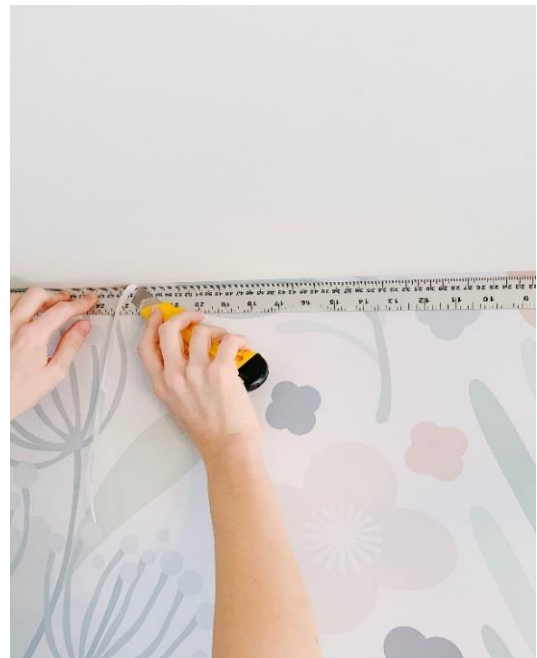

Step 8: Once the wallpaper sheets have been installed, take a straight edge and sharp knife to trim away any excess against the ceiling as well as baseboards. Enjoy your new wall! Xx