


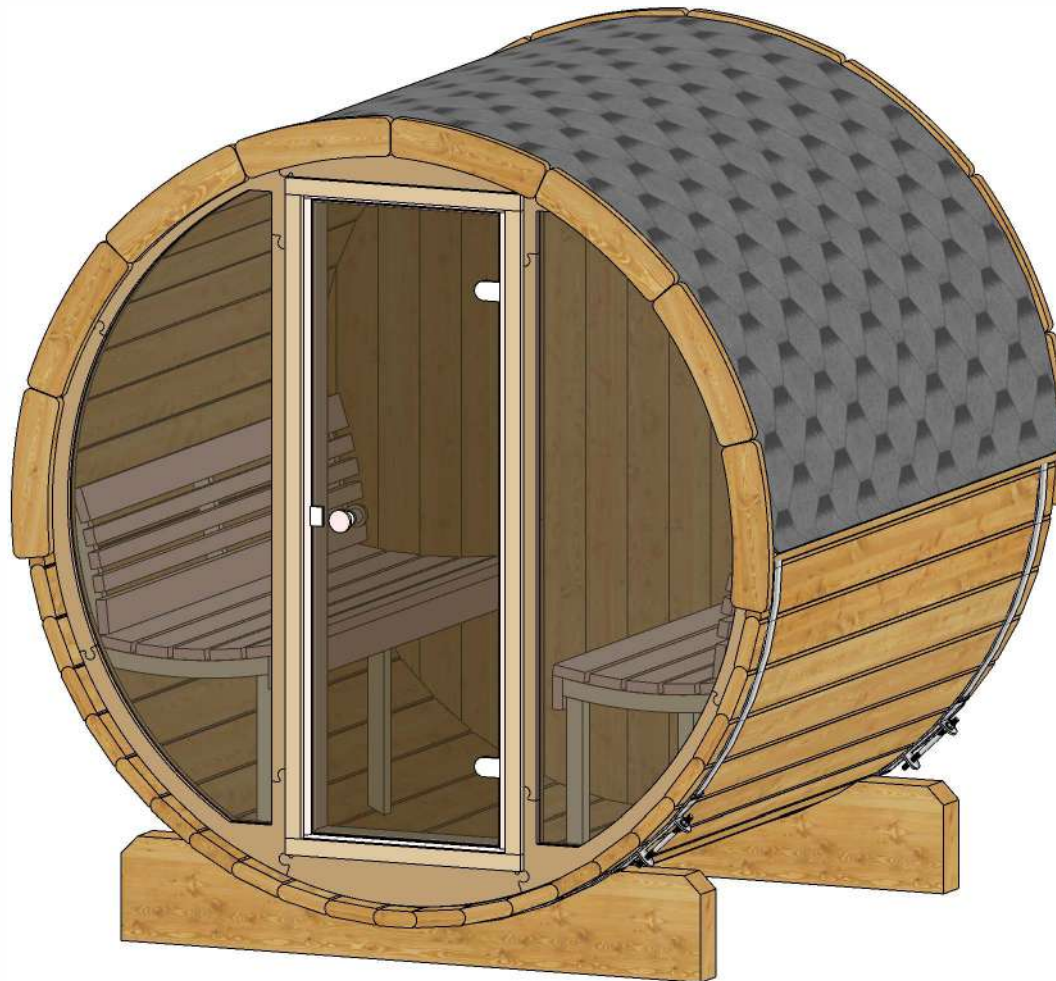



Ergo-Series E8G Barrel Sauna  
Full Glass Front 87D" x 81H"



Note: Please read manual before construction


Rev 4/2023

# Front & Back Walls

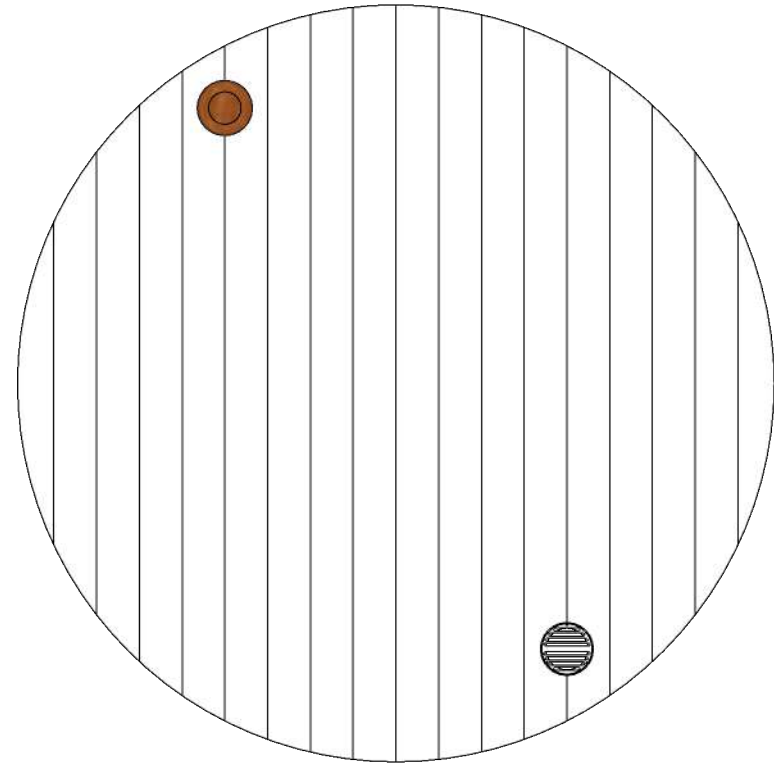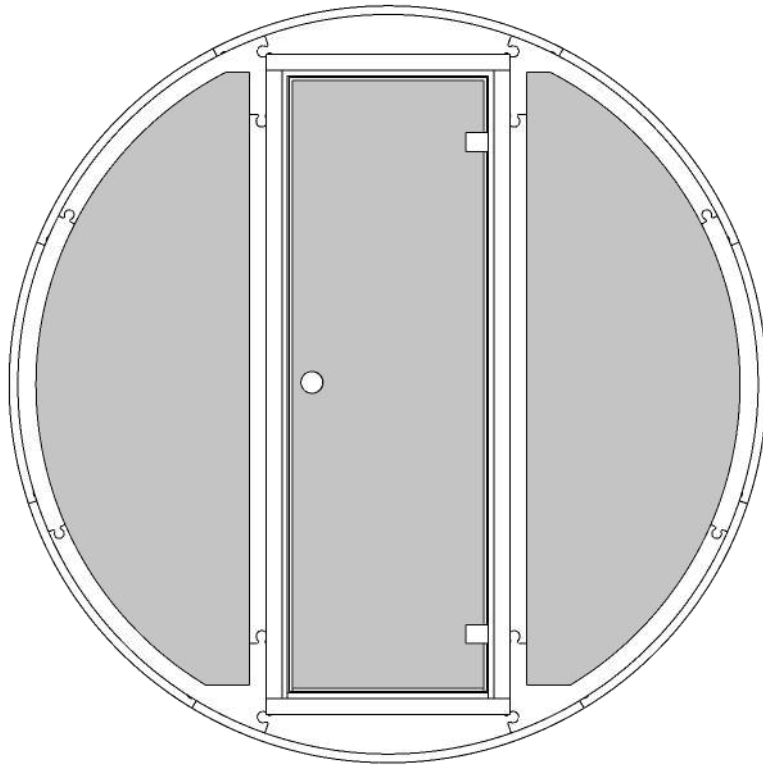


E8G Barrel Sauna 87D" x 81H"


Details list.

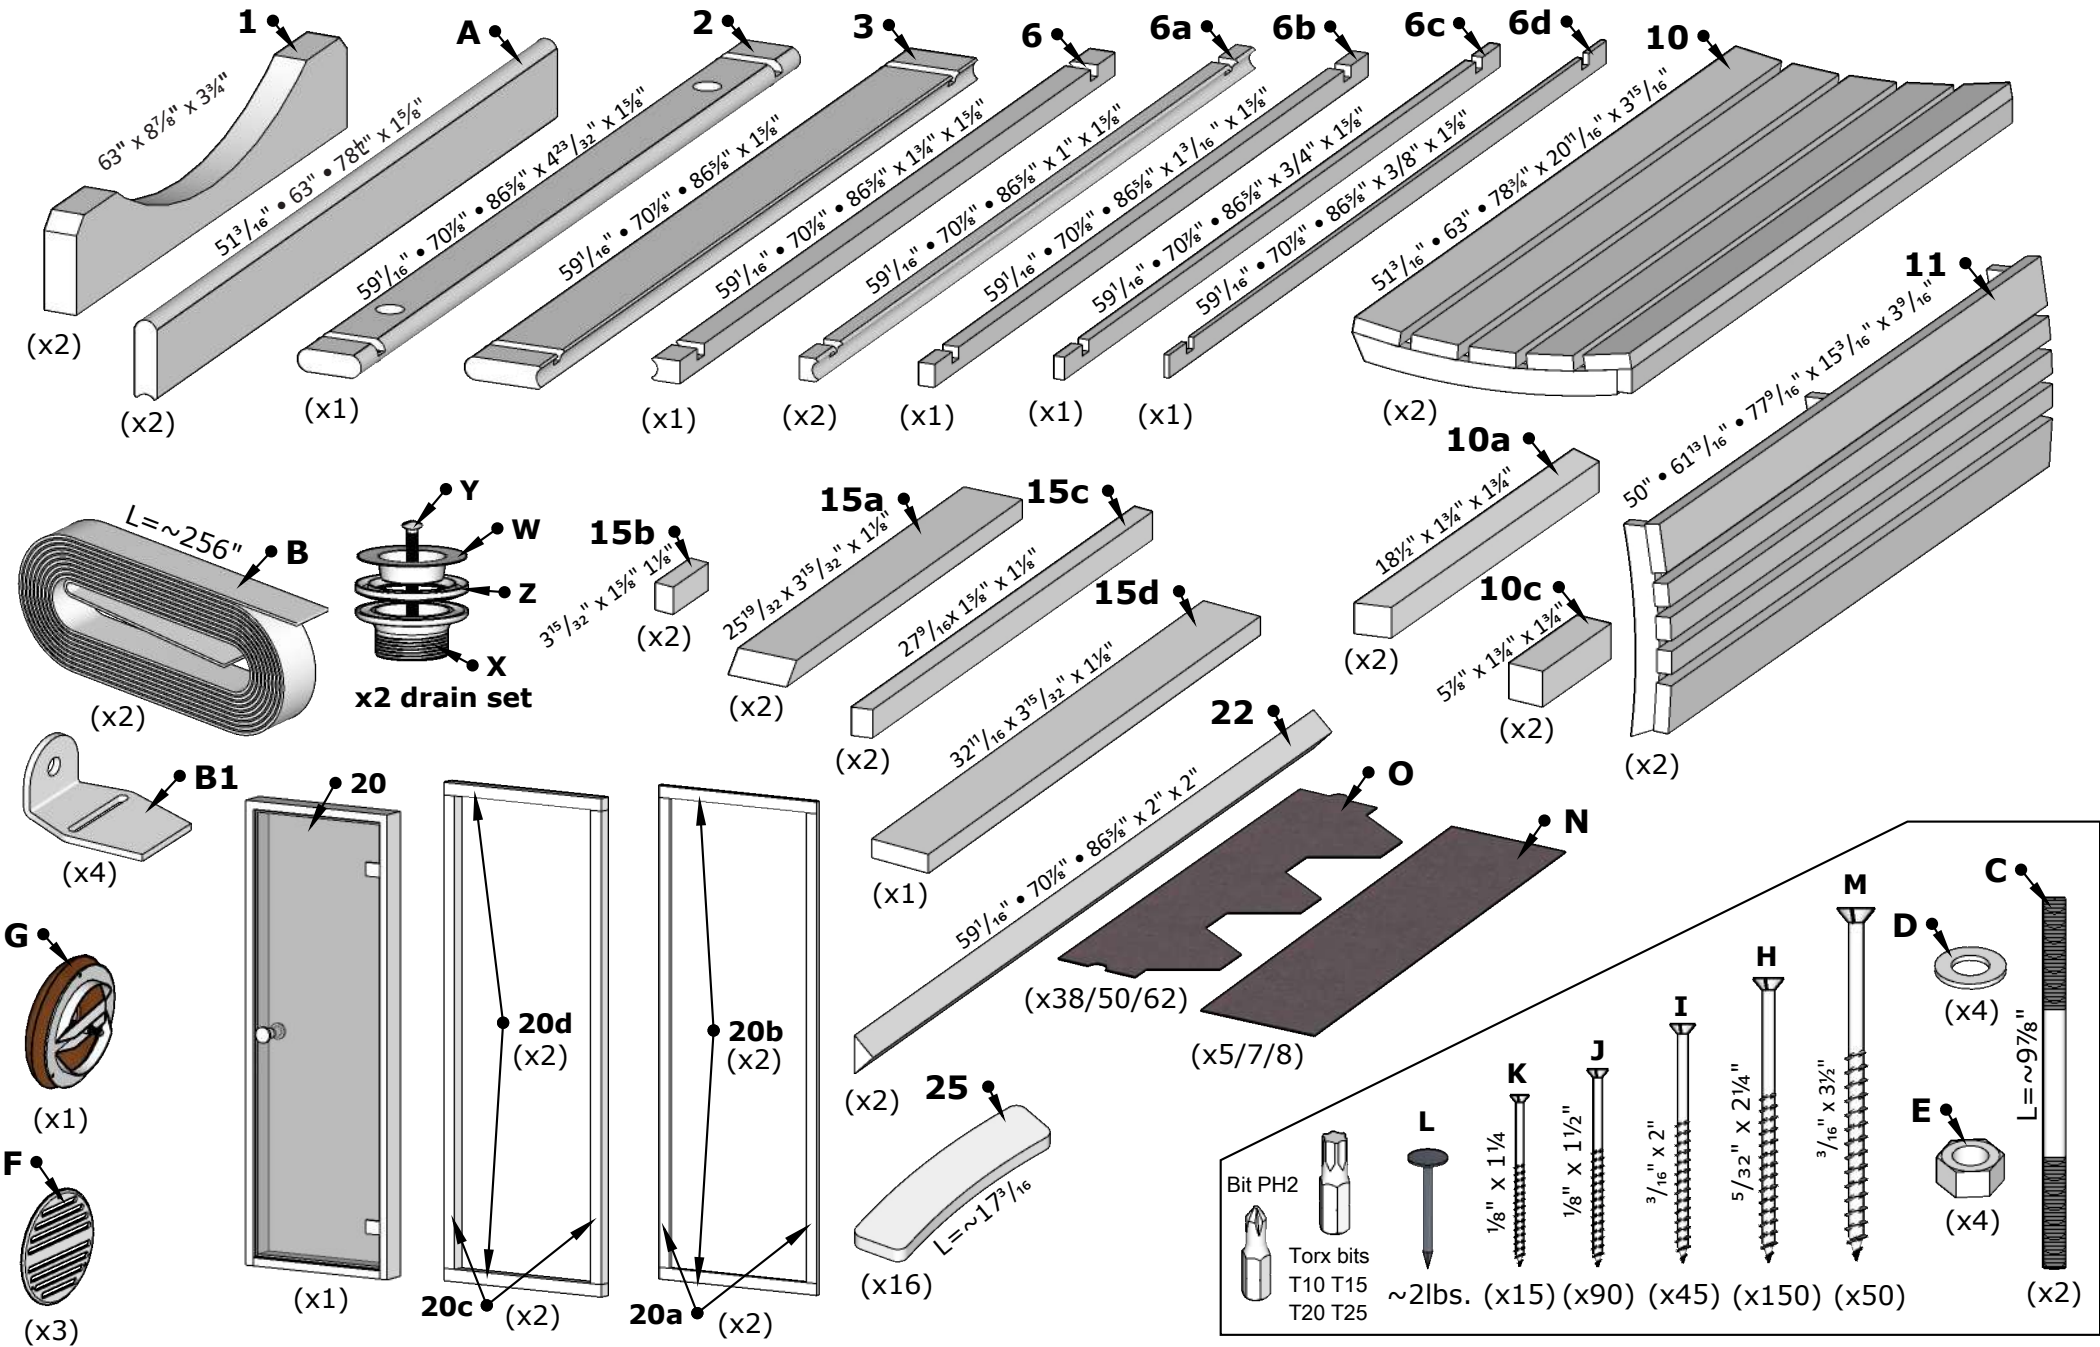


## Tools needed

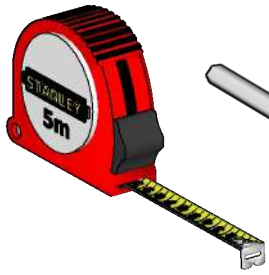


Measuring tape

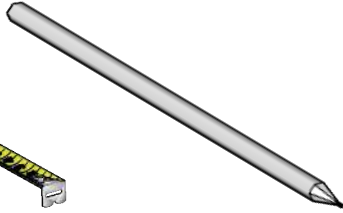


Marker pen

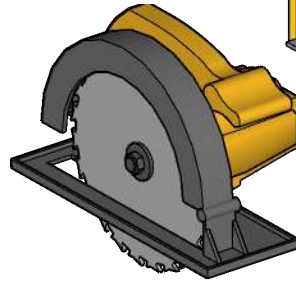

Circular saw

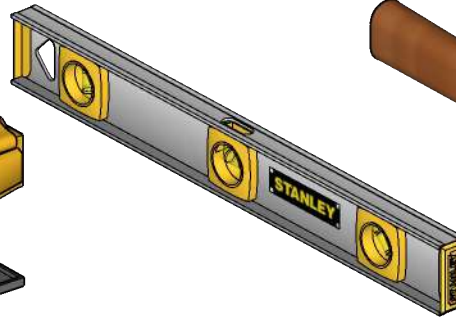

Water level

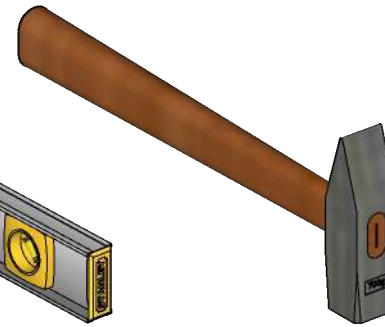


Hammer




Extra hands




Ratchet strap

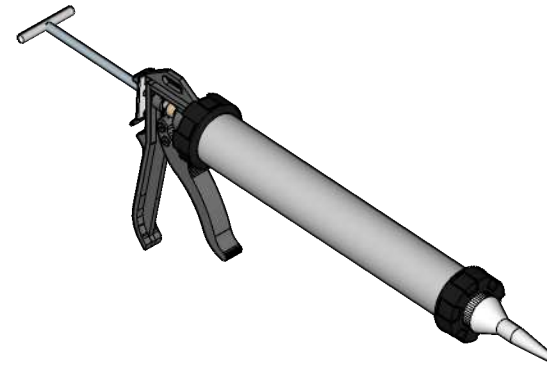

Silicone gun  
(Only glass-wall models)

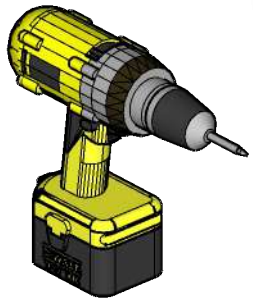


Drill

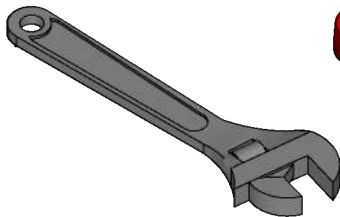

Crescent wrench






Utility knife





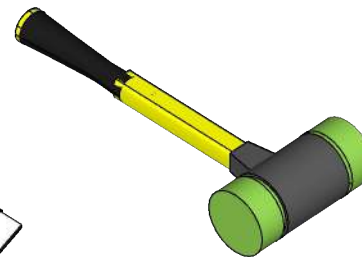


Rubber mallet


# Front glass wall installation

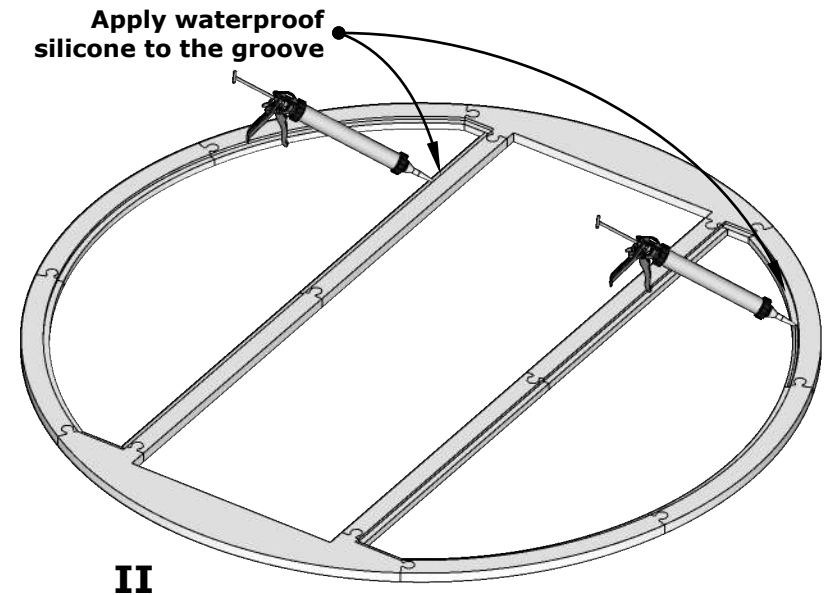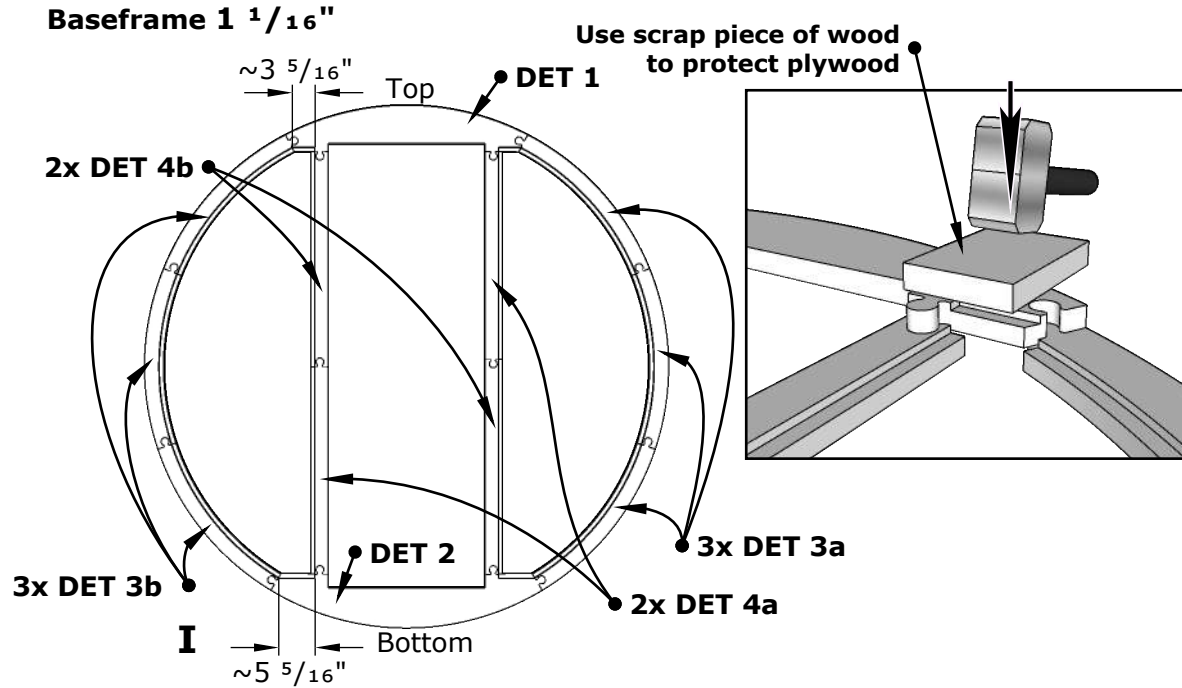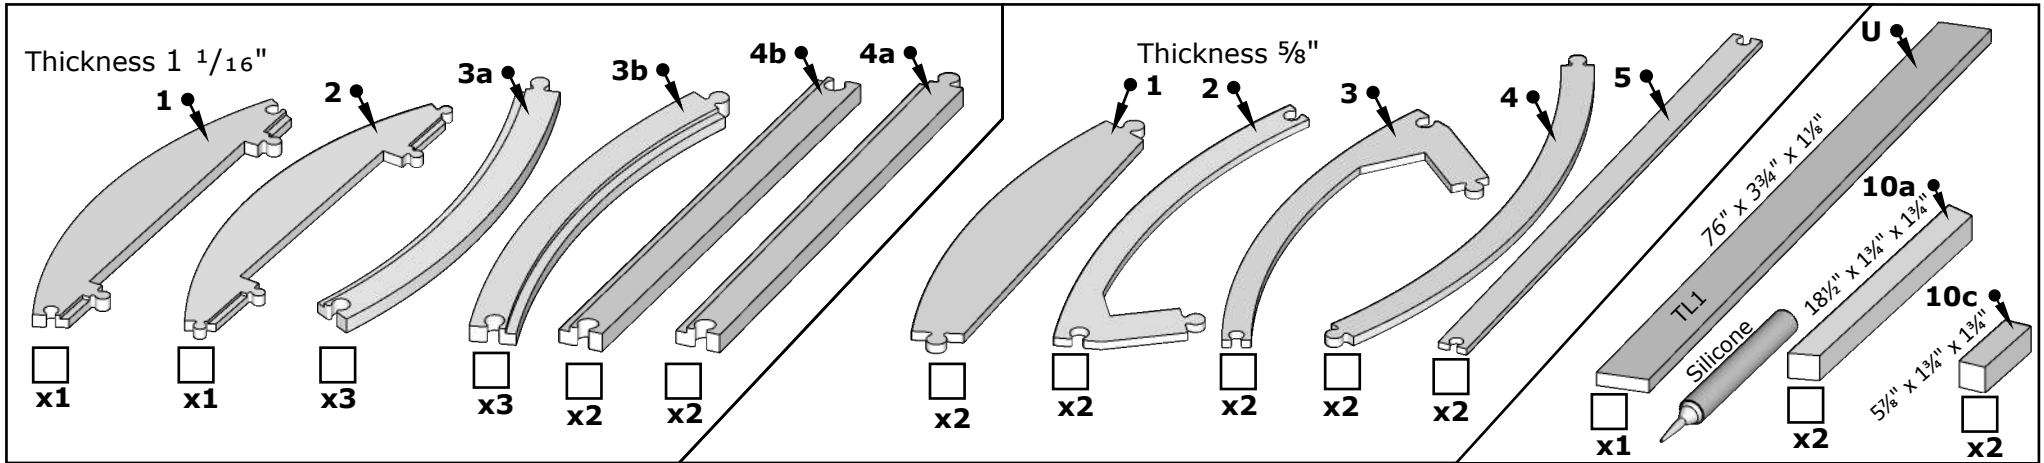


## Front glass wall installation

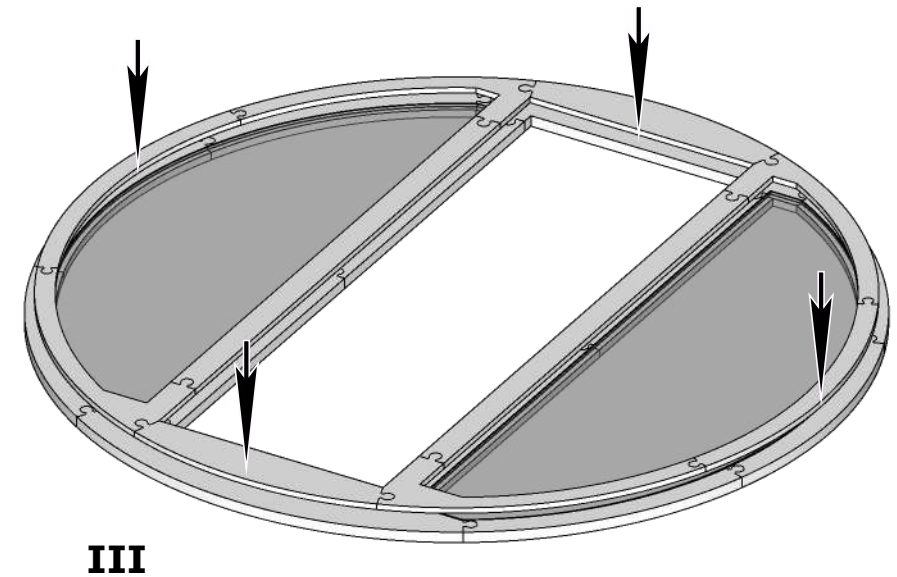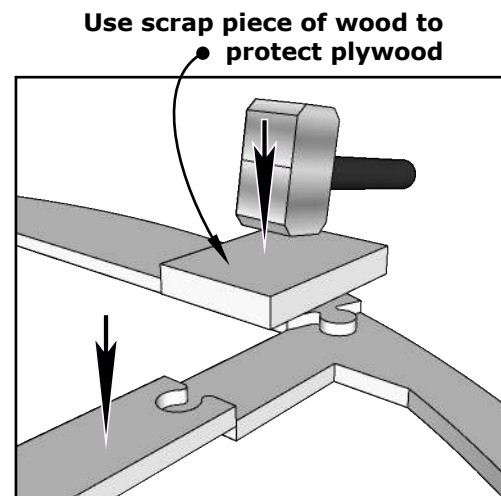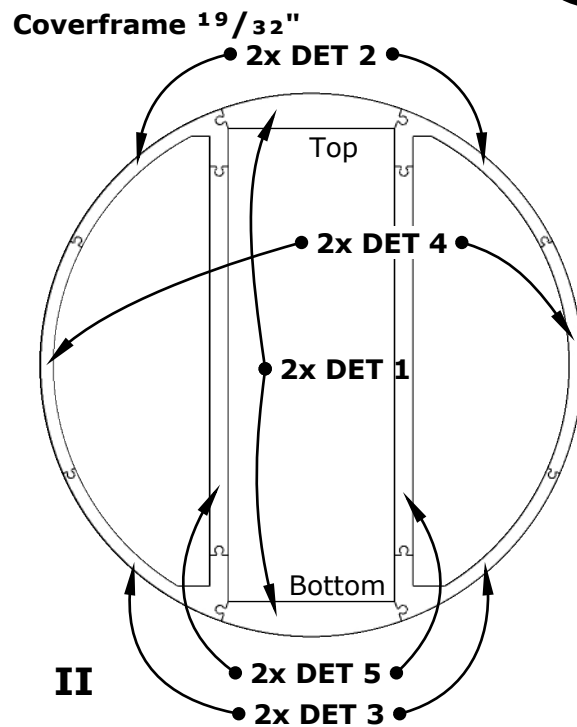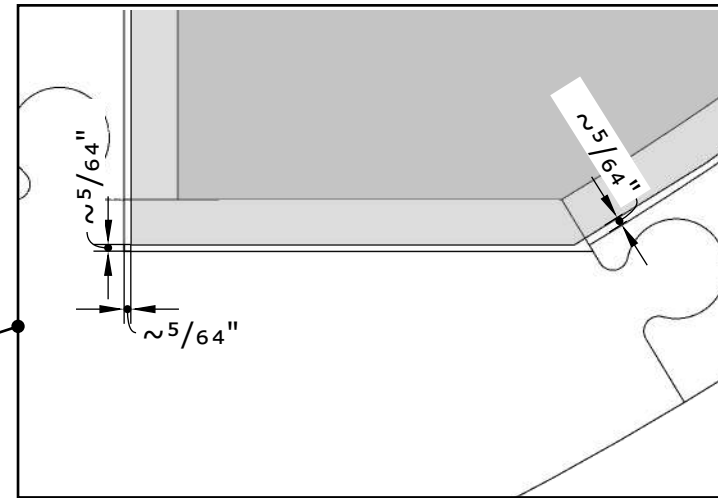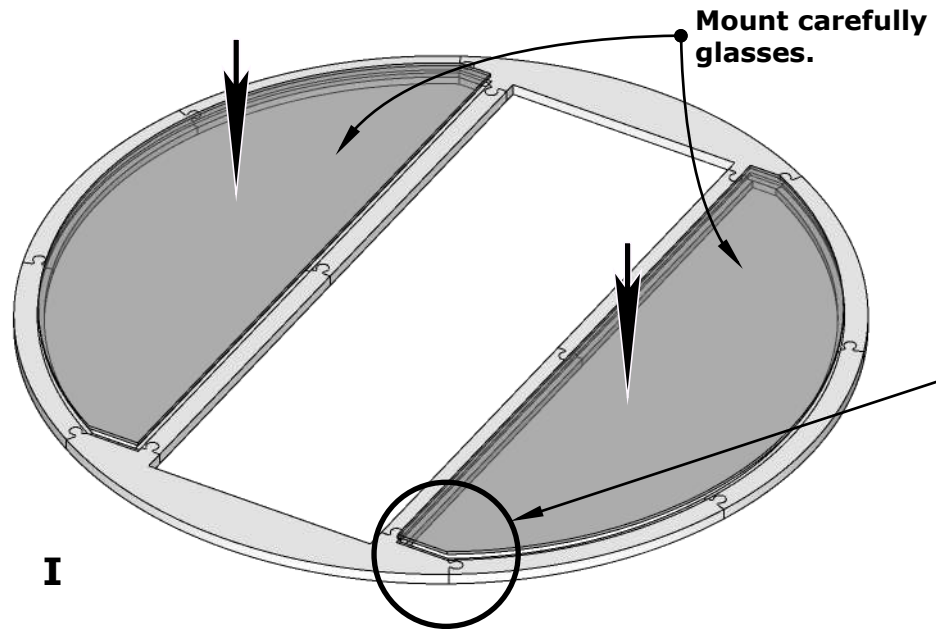


## Front glass wall installation

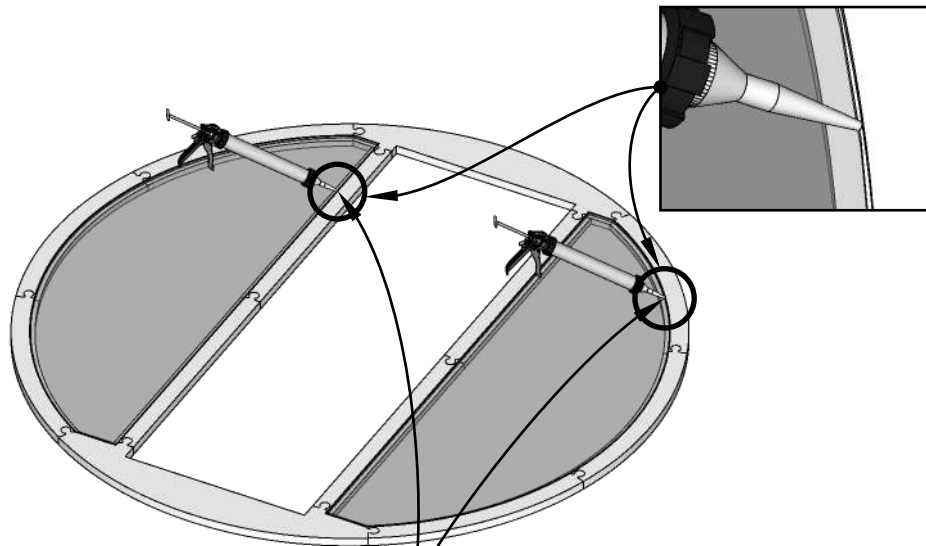


**I** Apply waterproof silicone to the groove

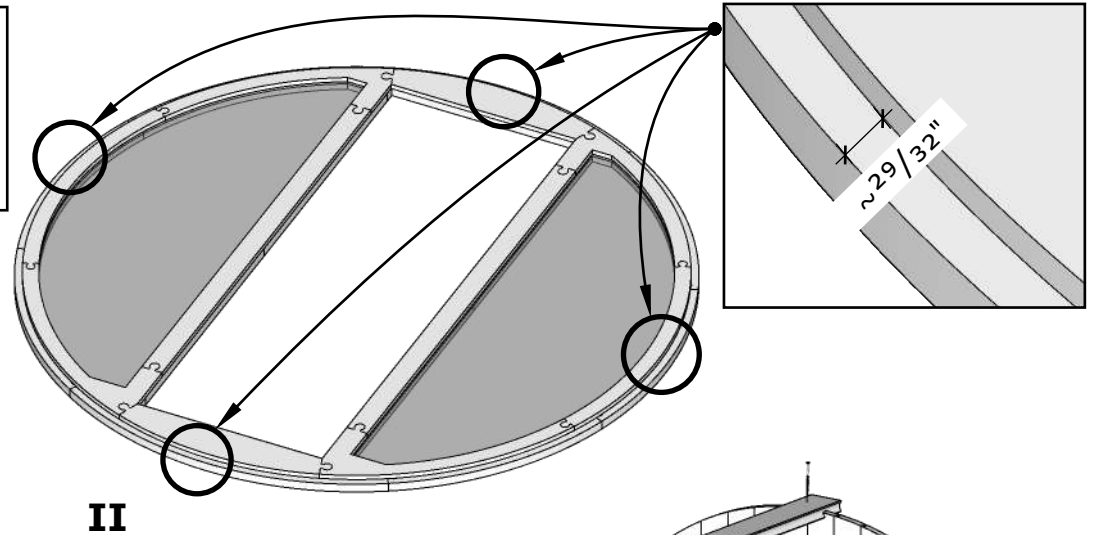

**II**

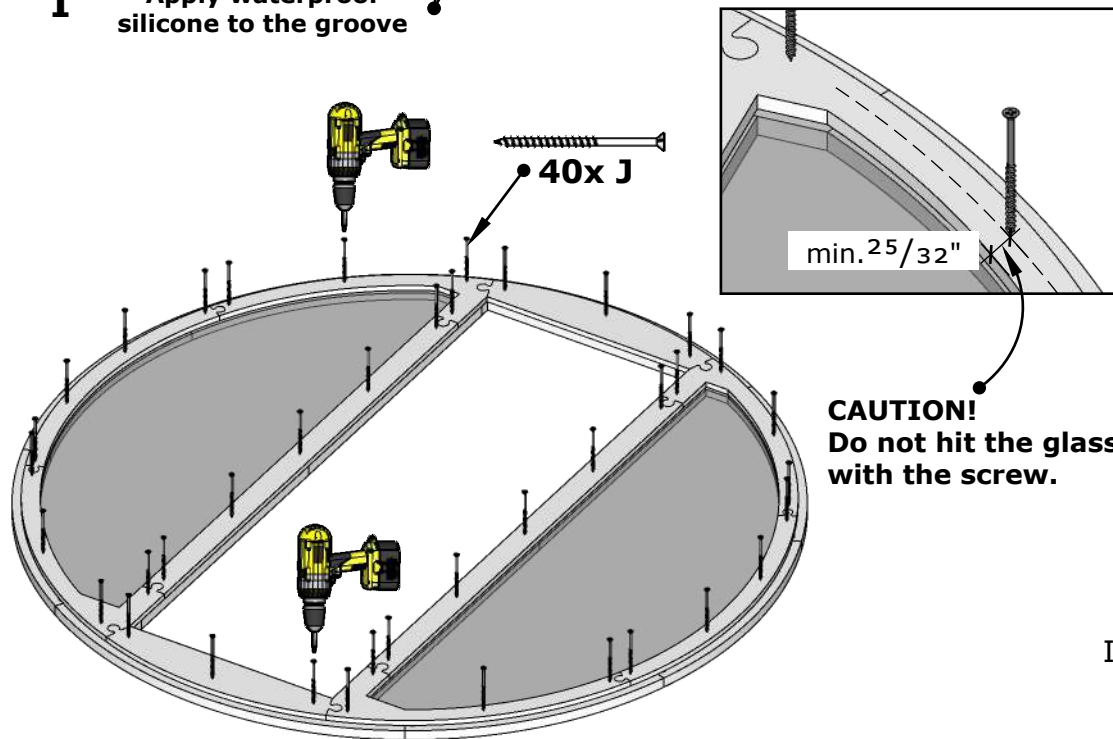


**III**

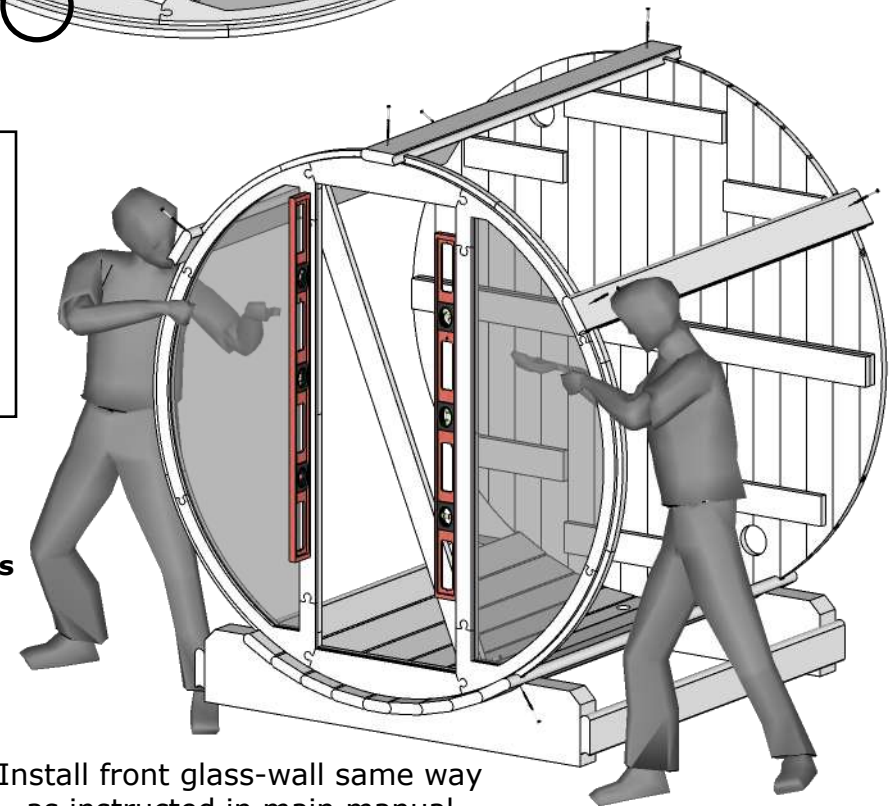

Install front glass-wall same way as instructed in main manual.



**IV**

## Front glass wall installation


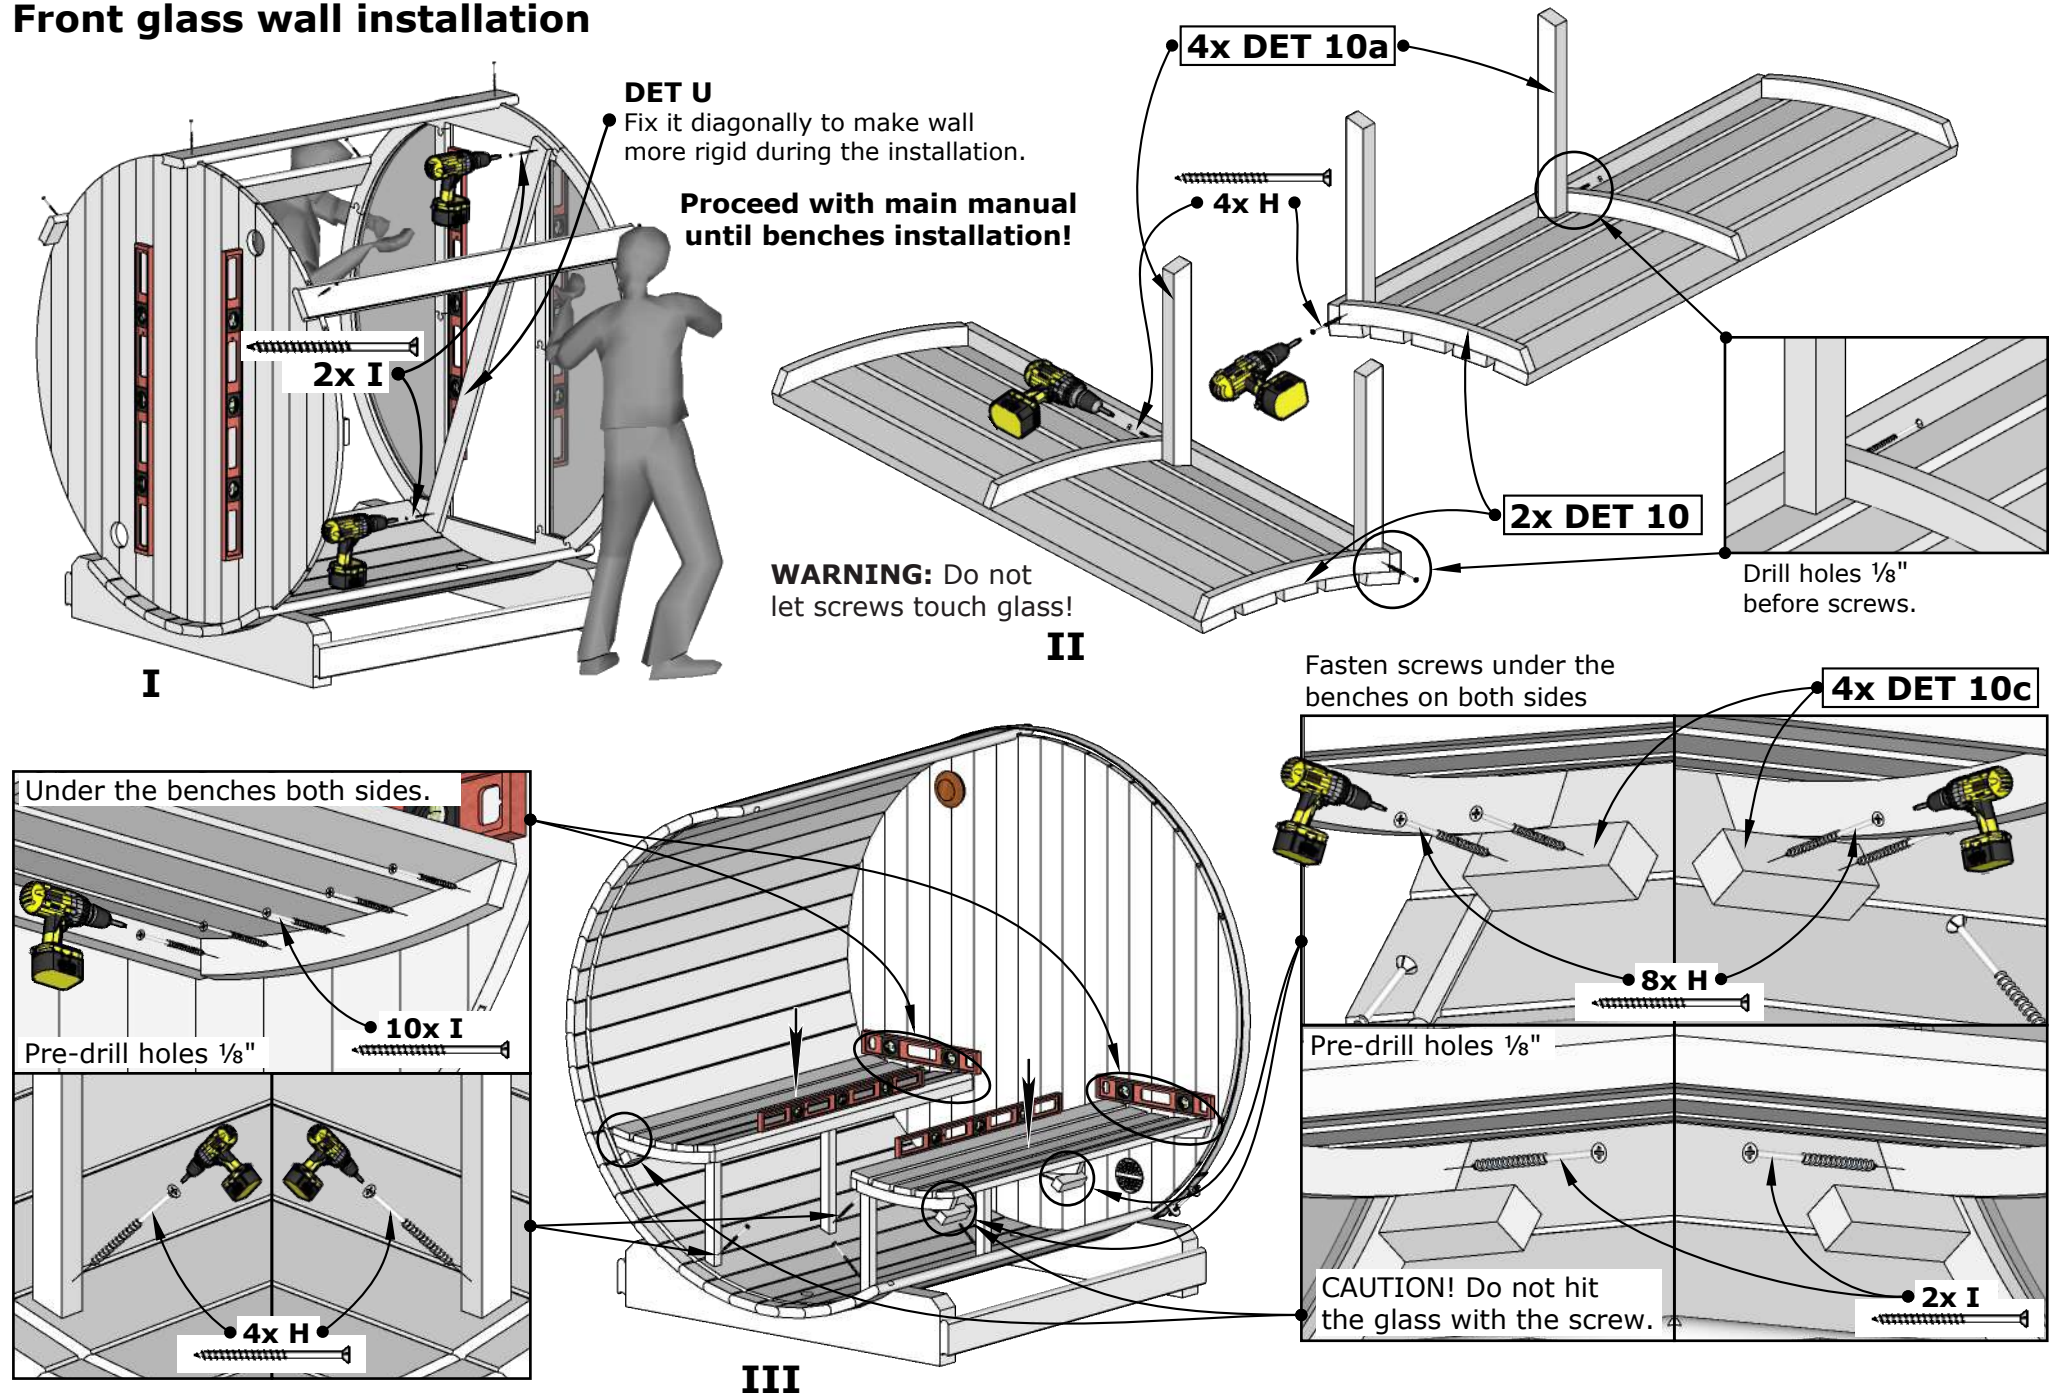


## Wooden back wall assembly

### Details

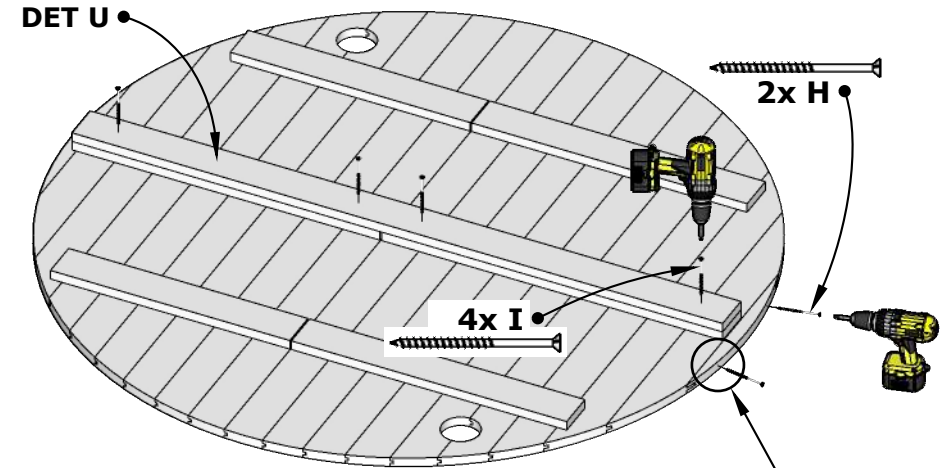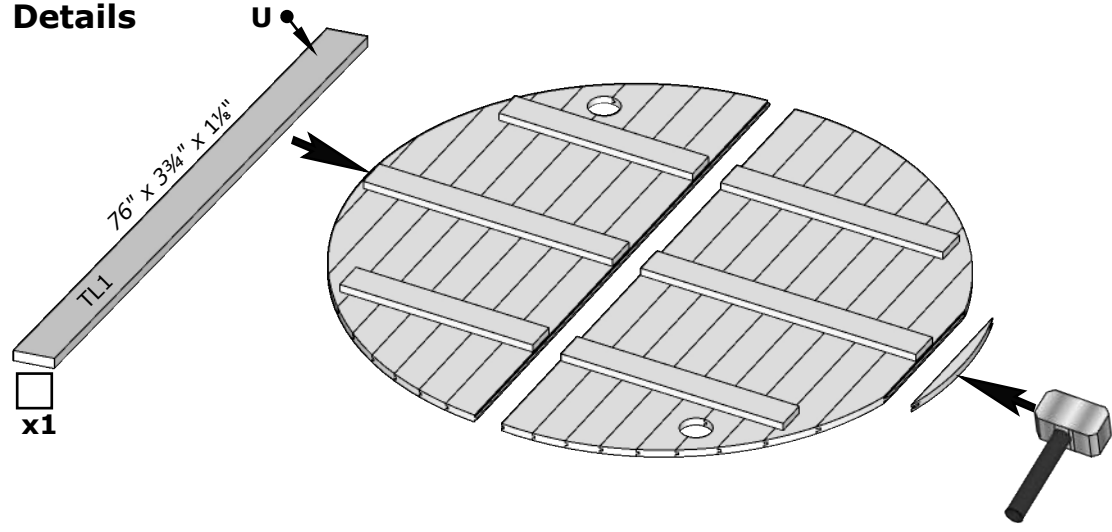


Pre-drill holes 5/32"  
before screws.

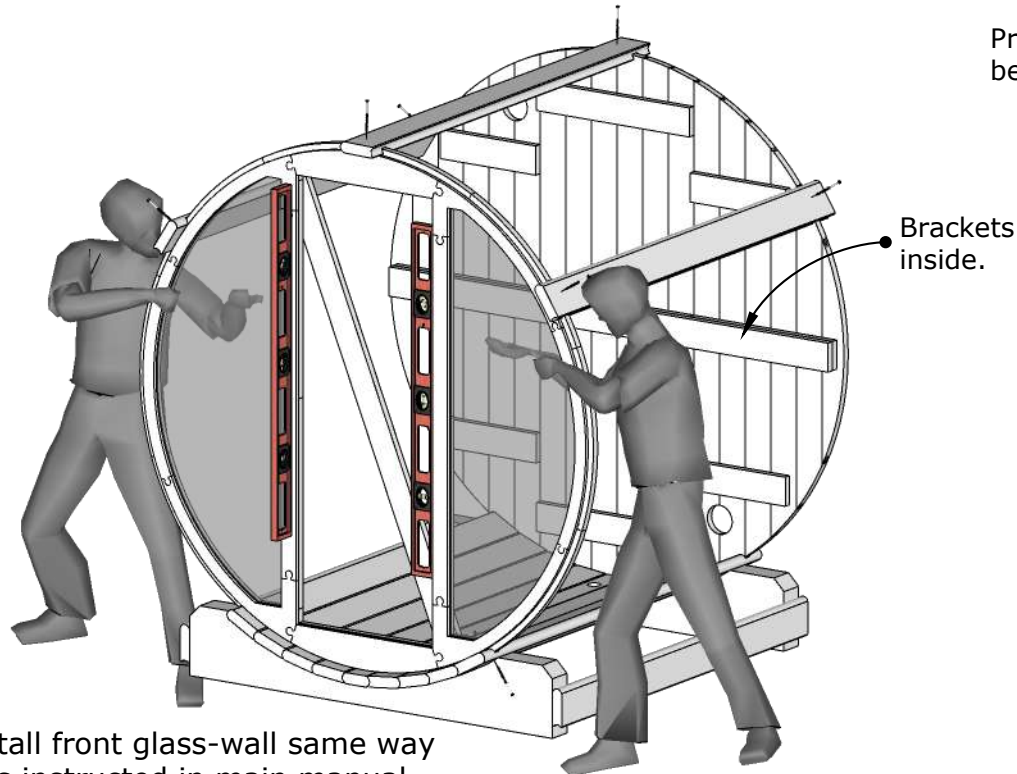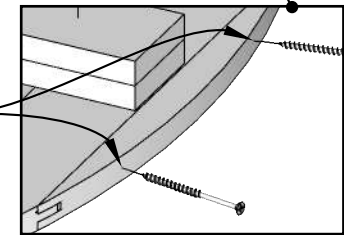


Install front glass-wall same way  
as instructed in main manual.


E8G Barrel Sauna 87D" x 81H"

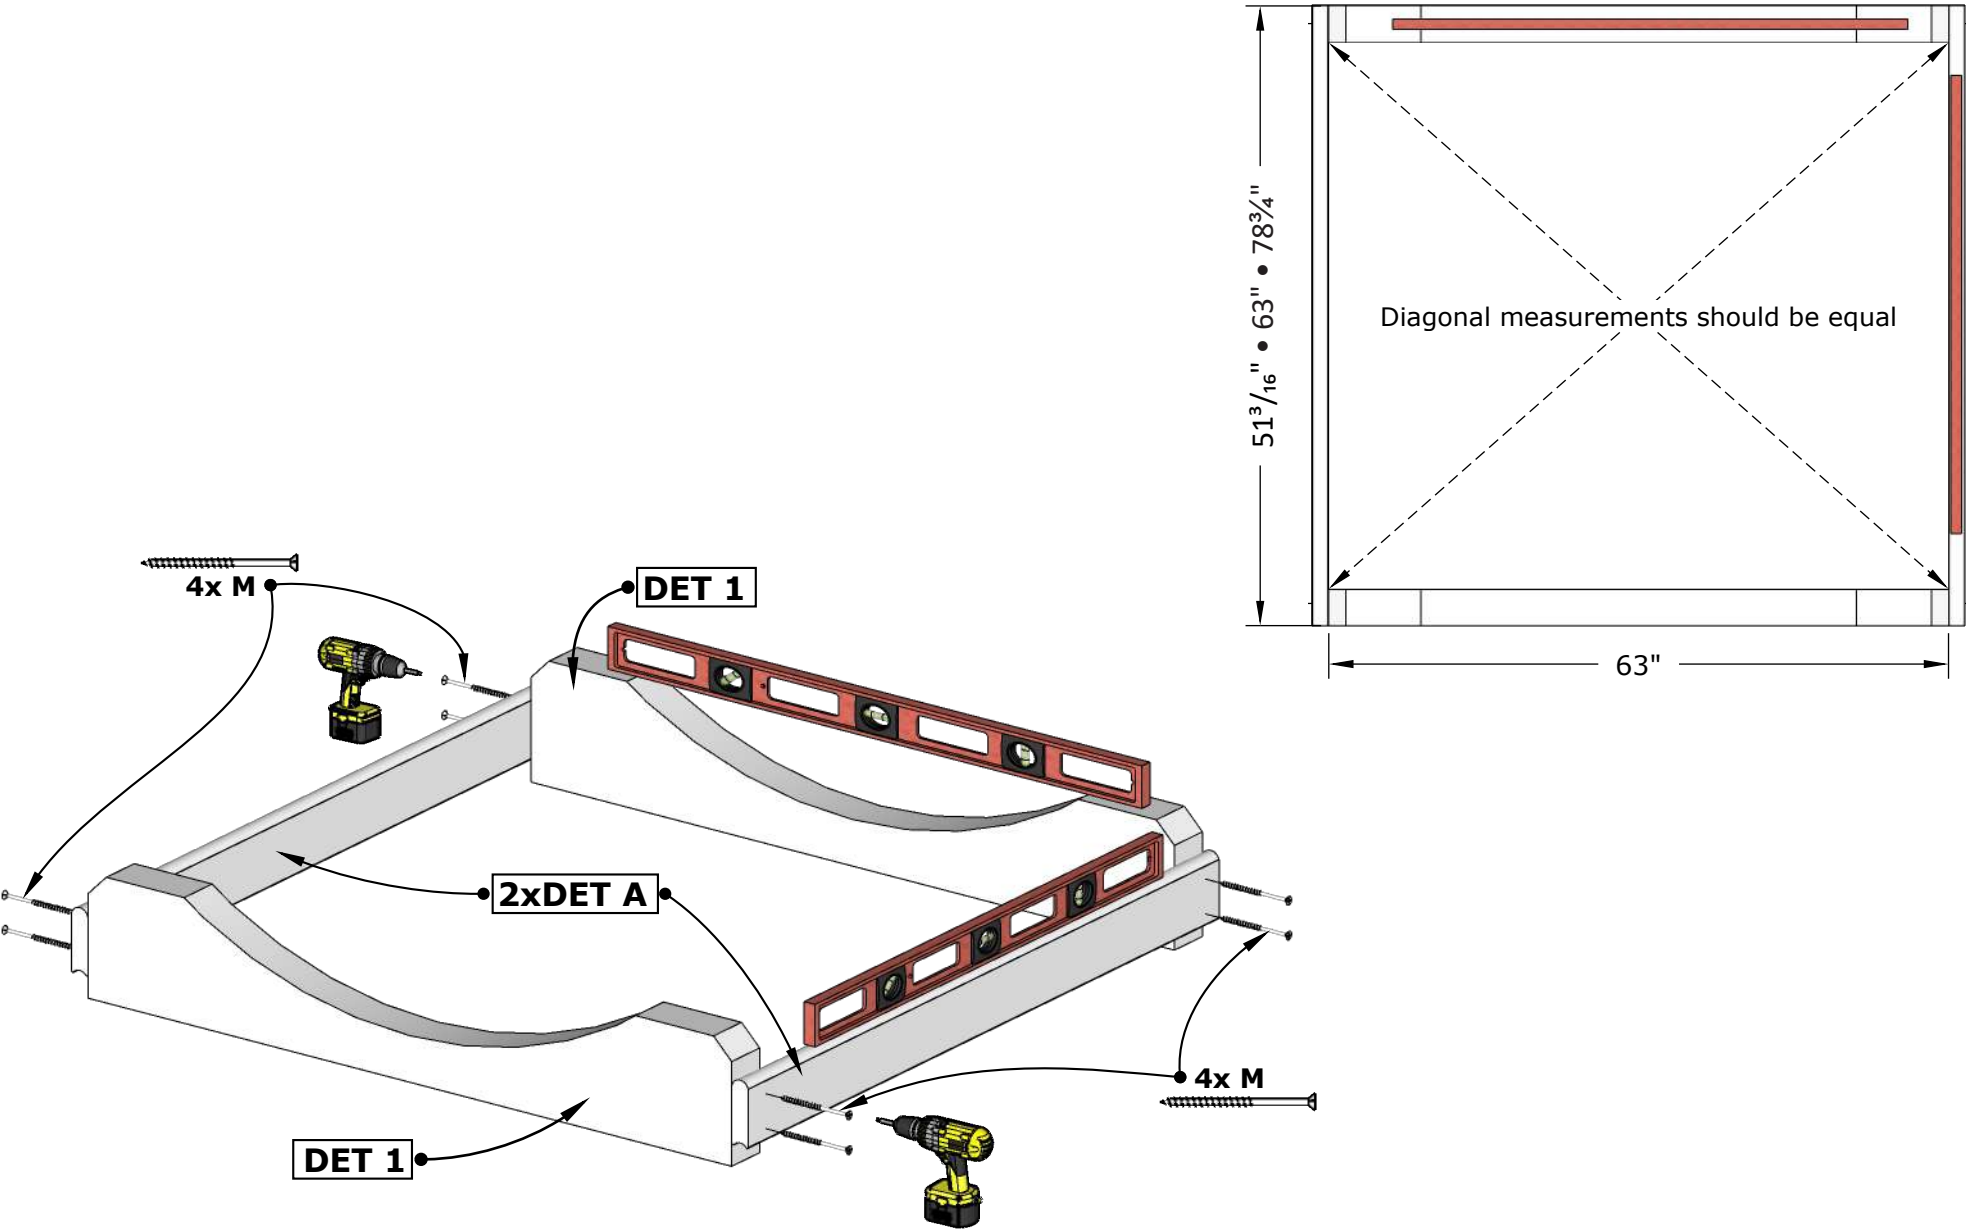

E8G Barrel Sauna 87D" x 81H"

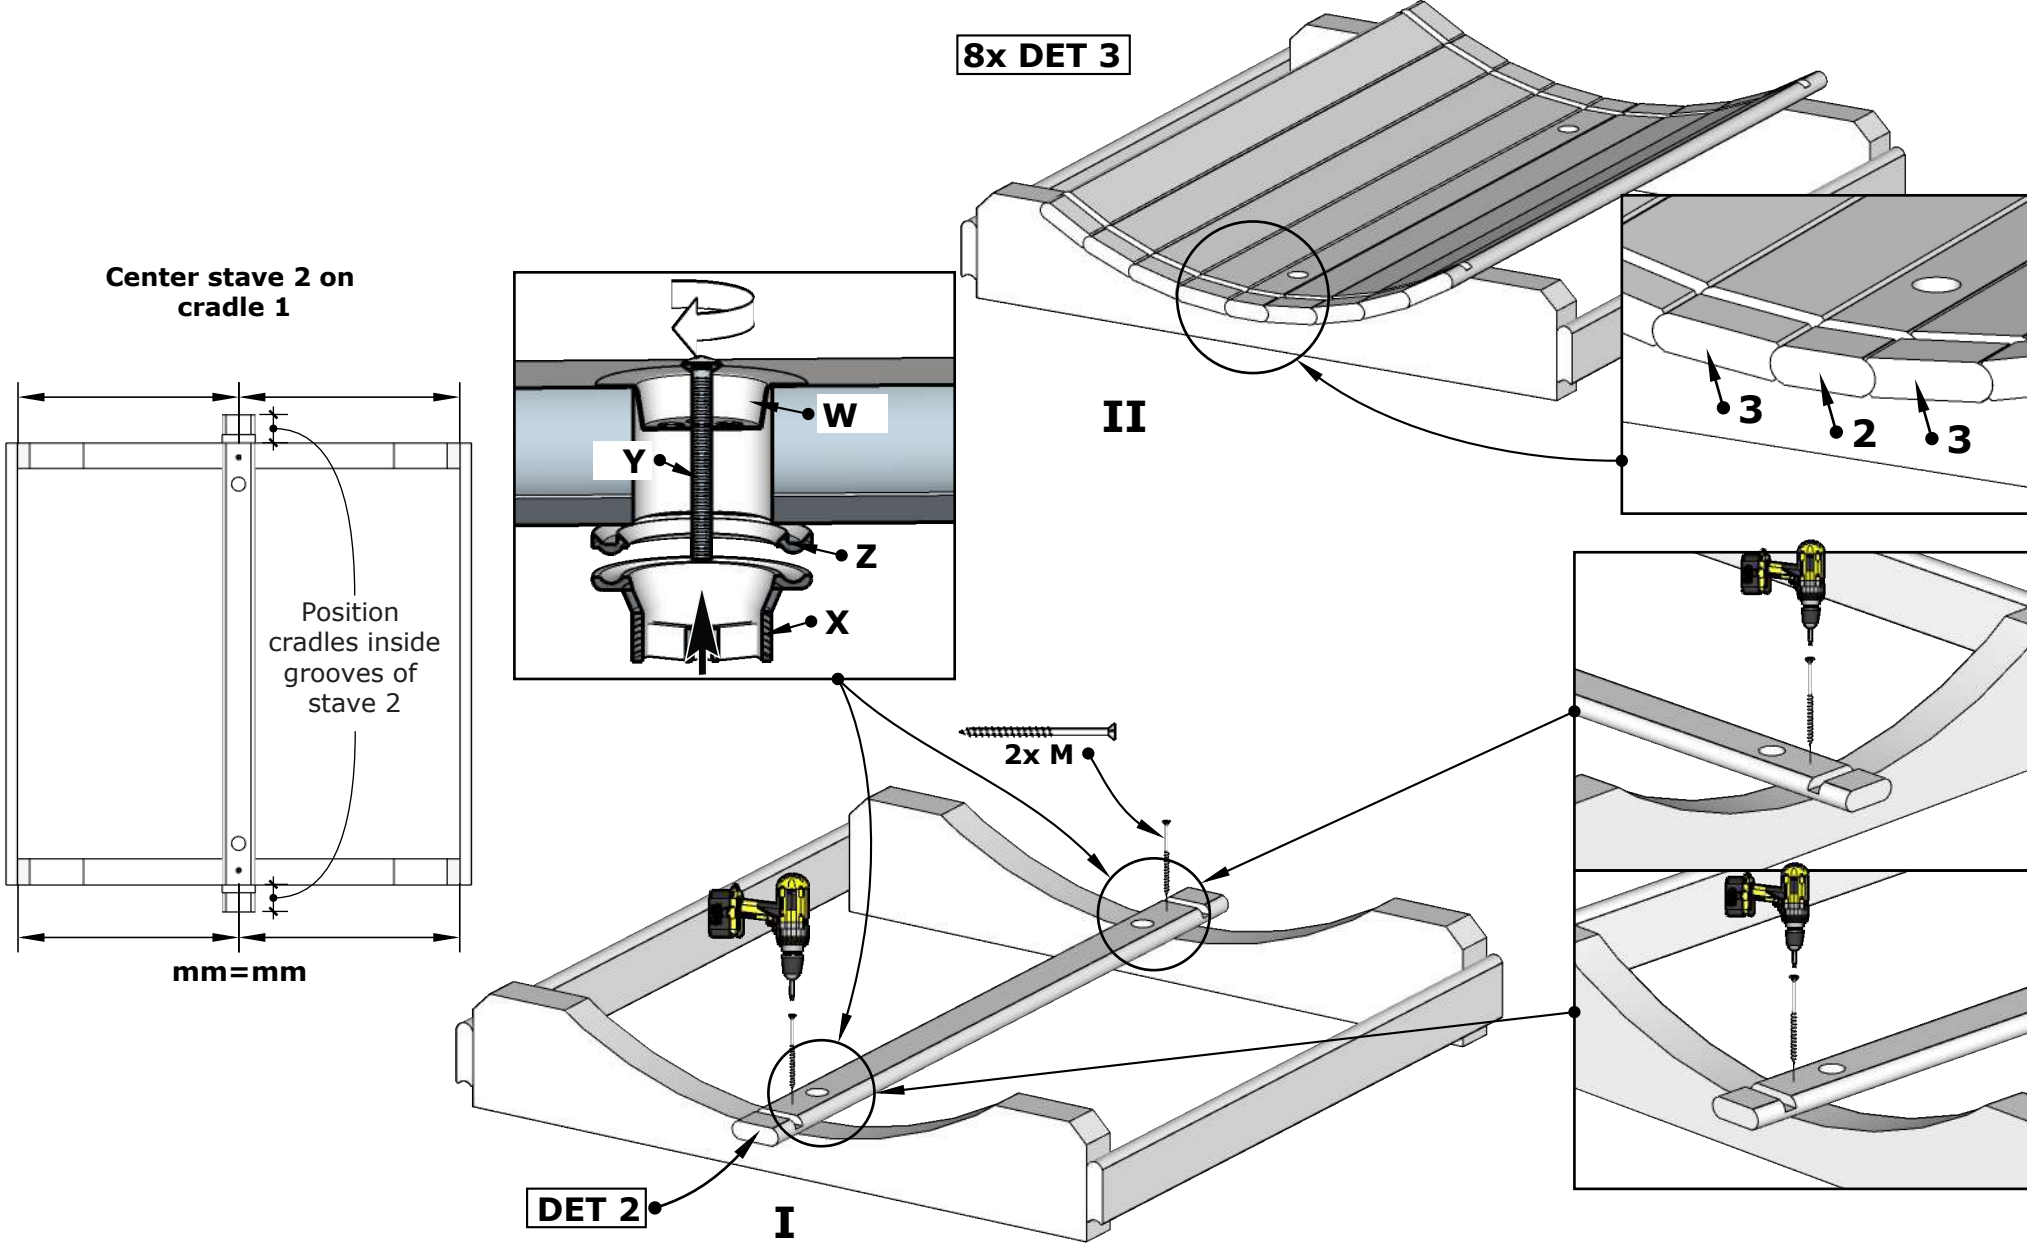


E8G Barrel Sauna 87D" x 81H"

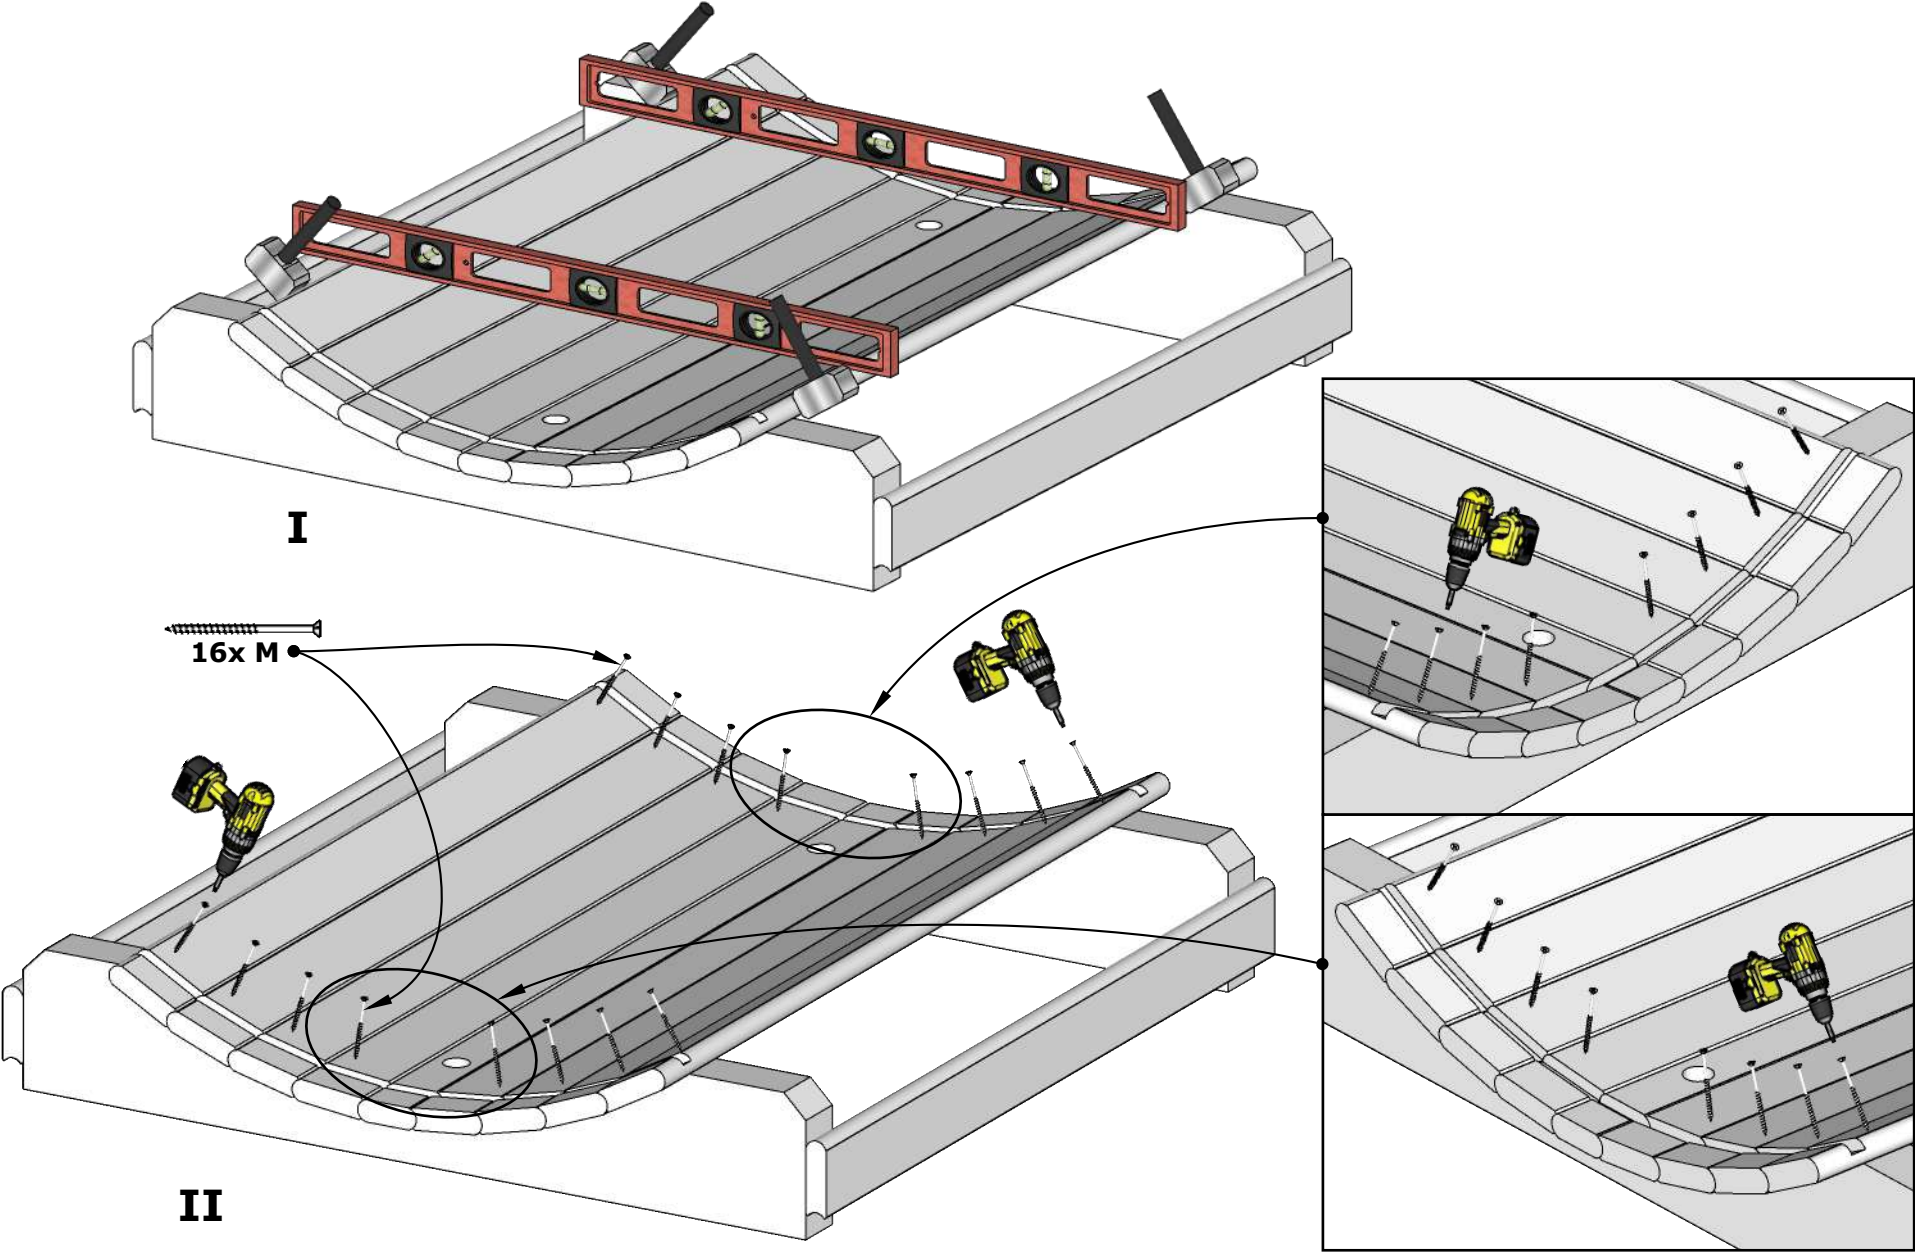

E8G Barrel Sauna 87D" x 81H"


Drill 4 holes Ø1/2"  
through DET 2  
outside

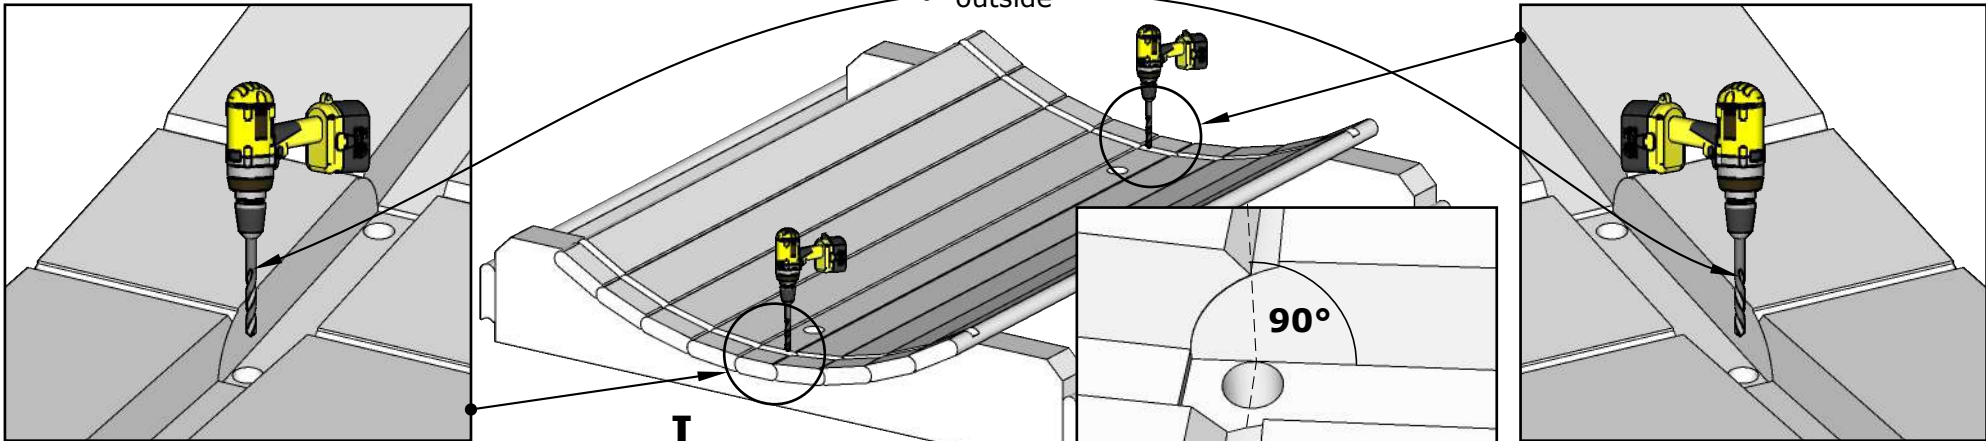

I

Check walls installation  
manual on extra pages!

Sauna wall configuration  
depends on Your model!

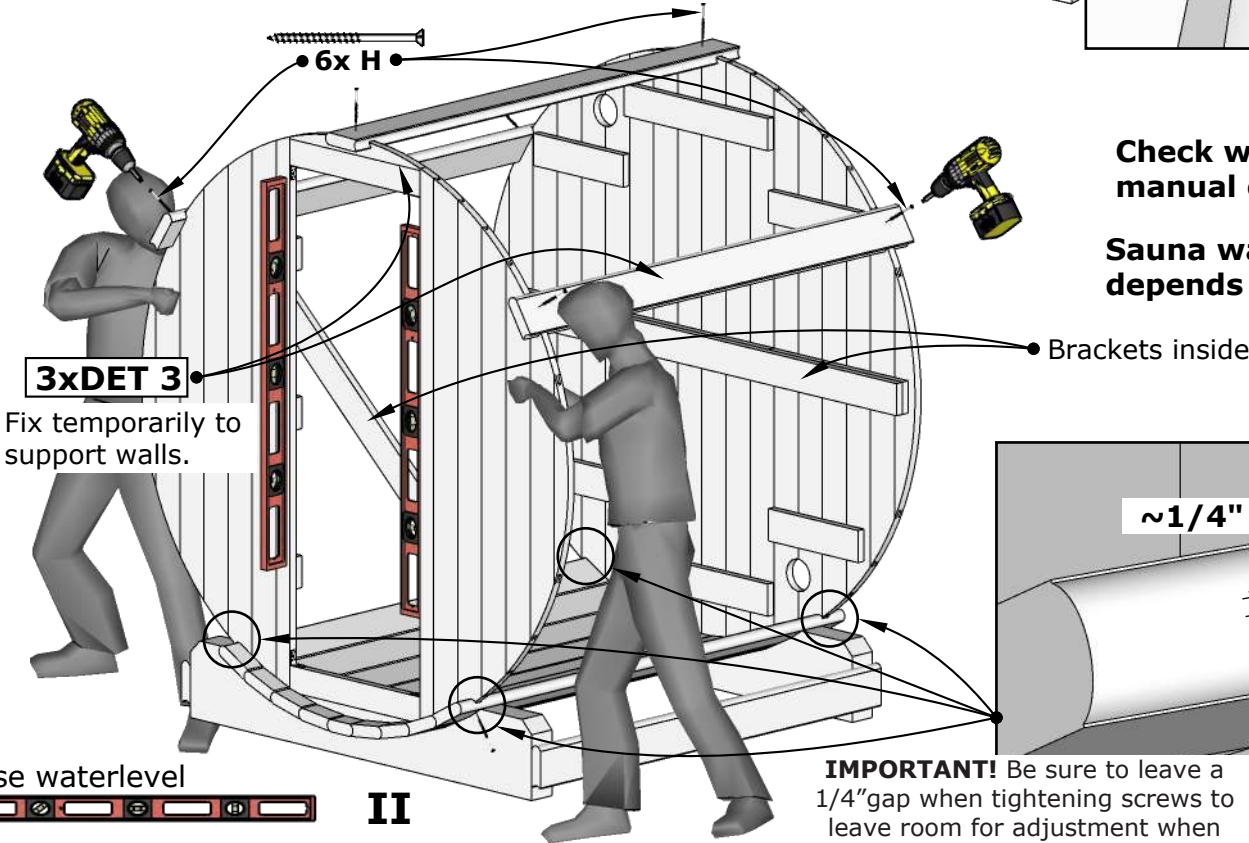

3xDET 3

Fix temporarily to  
support walls.

Brackets inside


Use waterlevel

II


**IMPORTANT!** Be sure to leave a  
1/4" gap when tightening screws to  
leave room for adjustment when  
the outer bands (B) are installed.

~1/4"


4x H

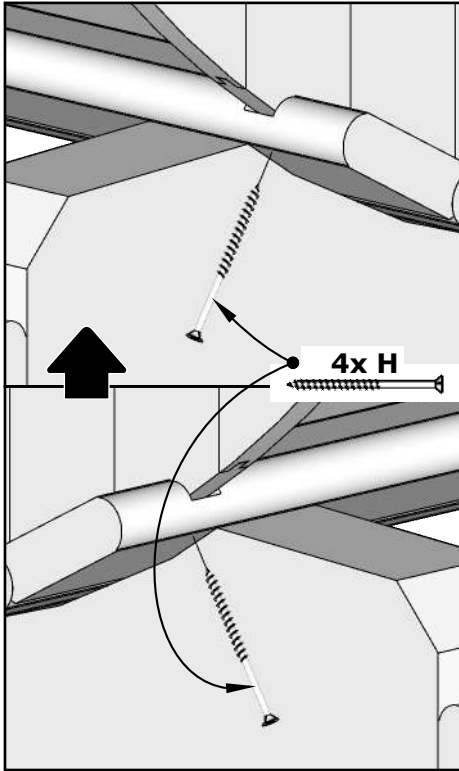


E8G Barrel Sauna 87D" x 81H"

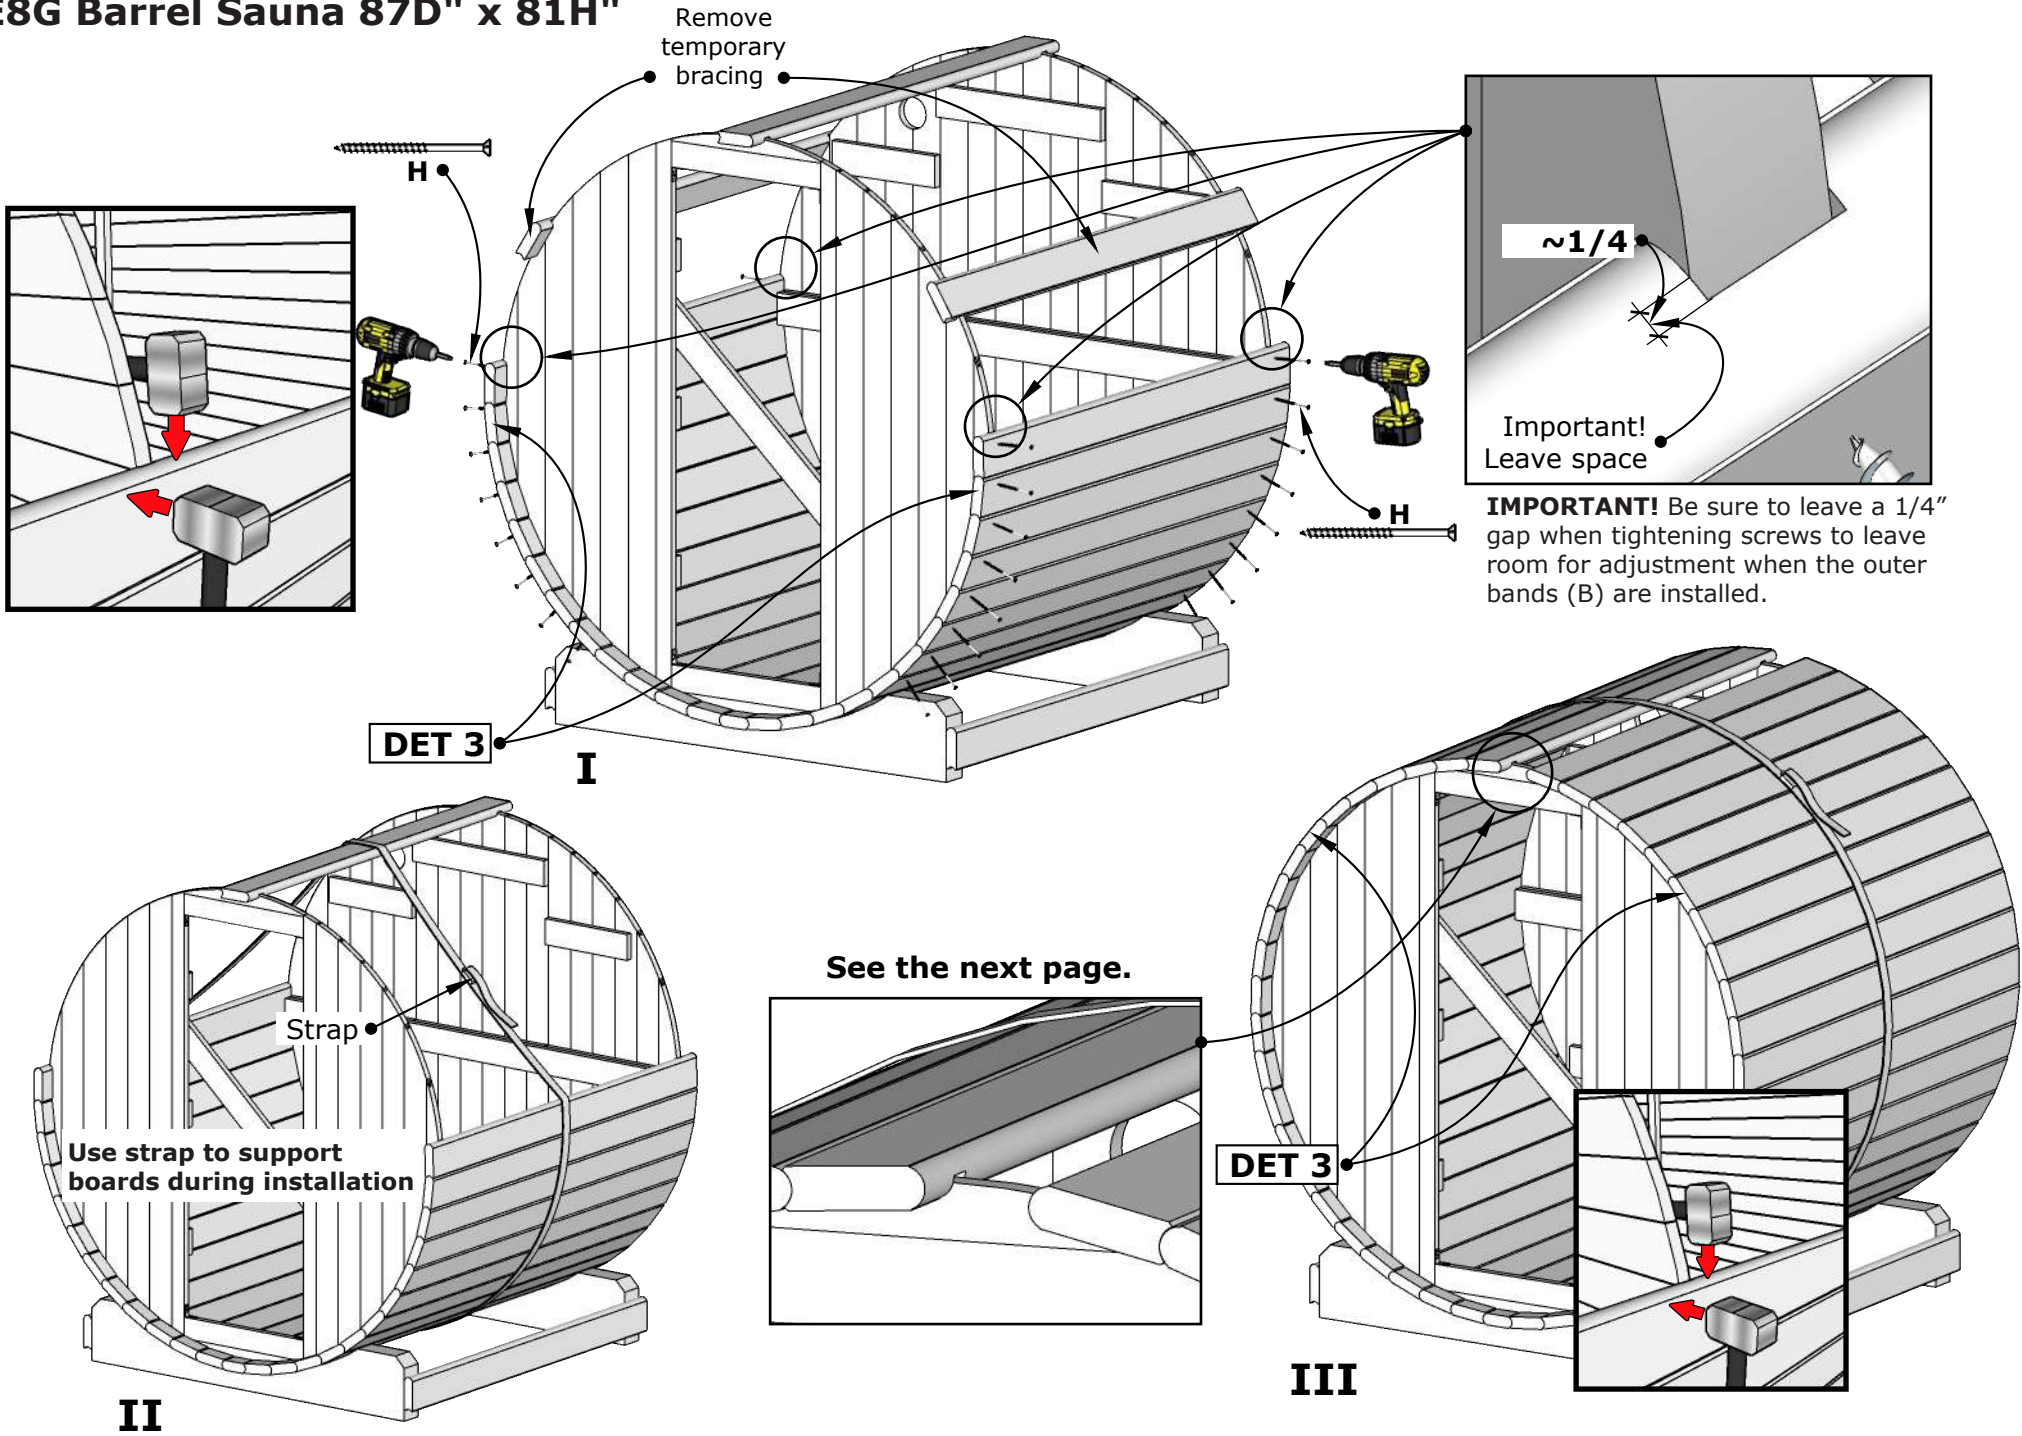


E8G Barrel Sauna 87D" x 81H"

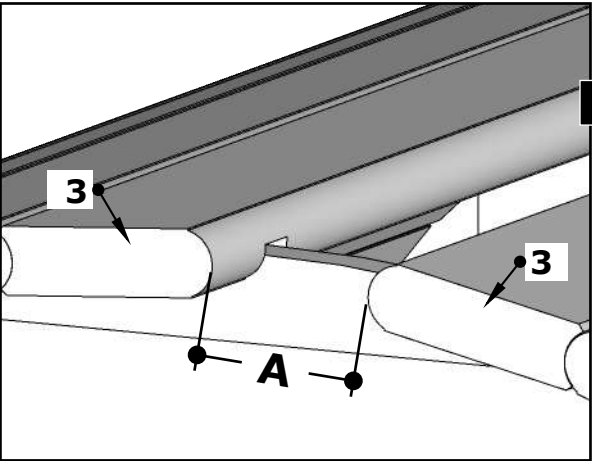


I

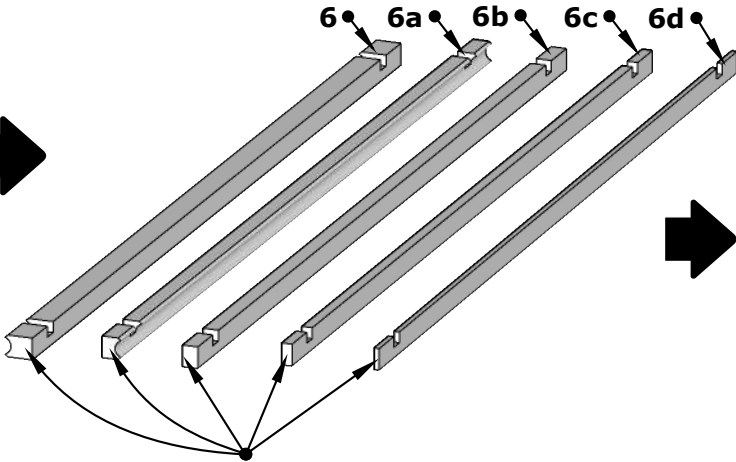

Join two boards together (as shown in diagram II) that will bridge the width of the "A" gap. It is recommended that the combined boards are approximately 1/4" wider than the gap.

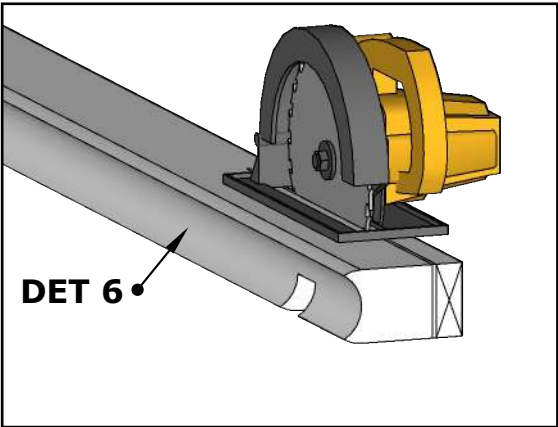


If needed, trim the flat edge of the board to create the desired width.

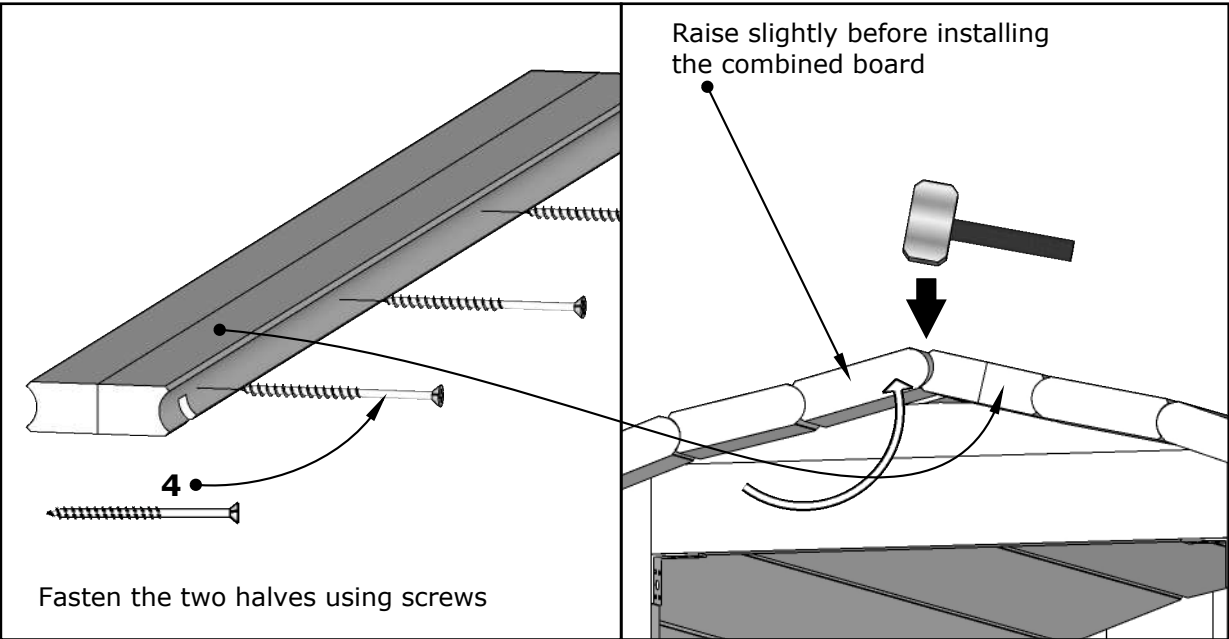


Fasten the two halves using screws

II

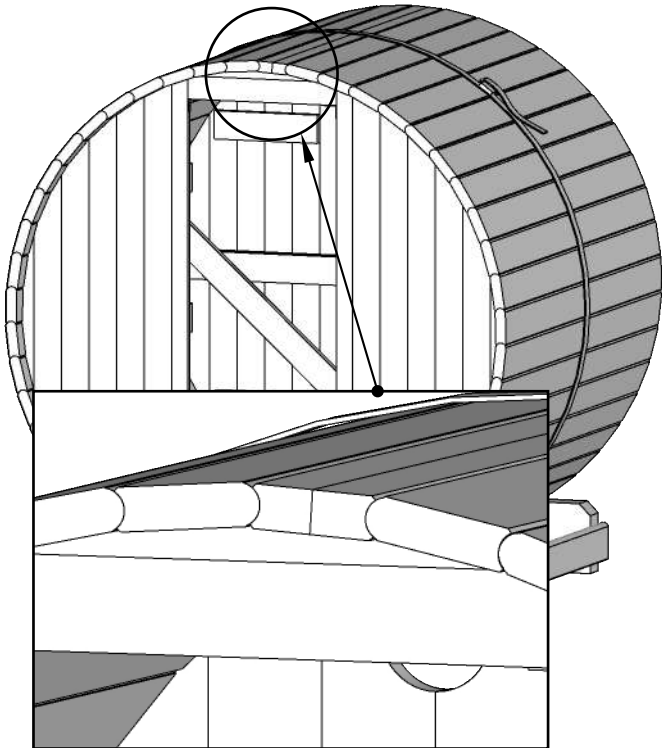


III





E8G Barrel Sauna 87D" x 81H"

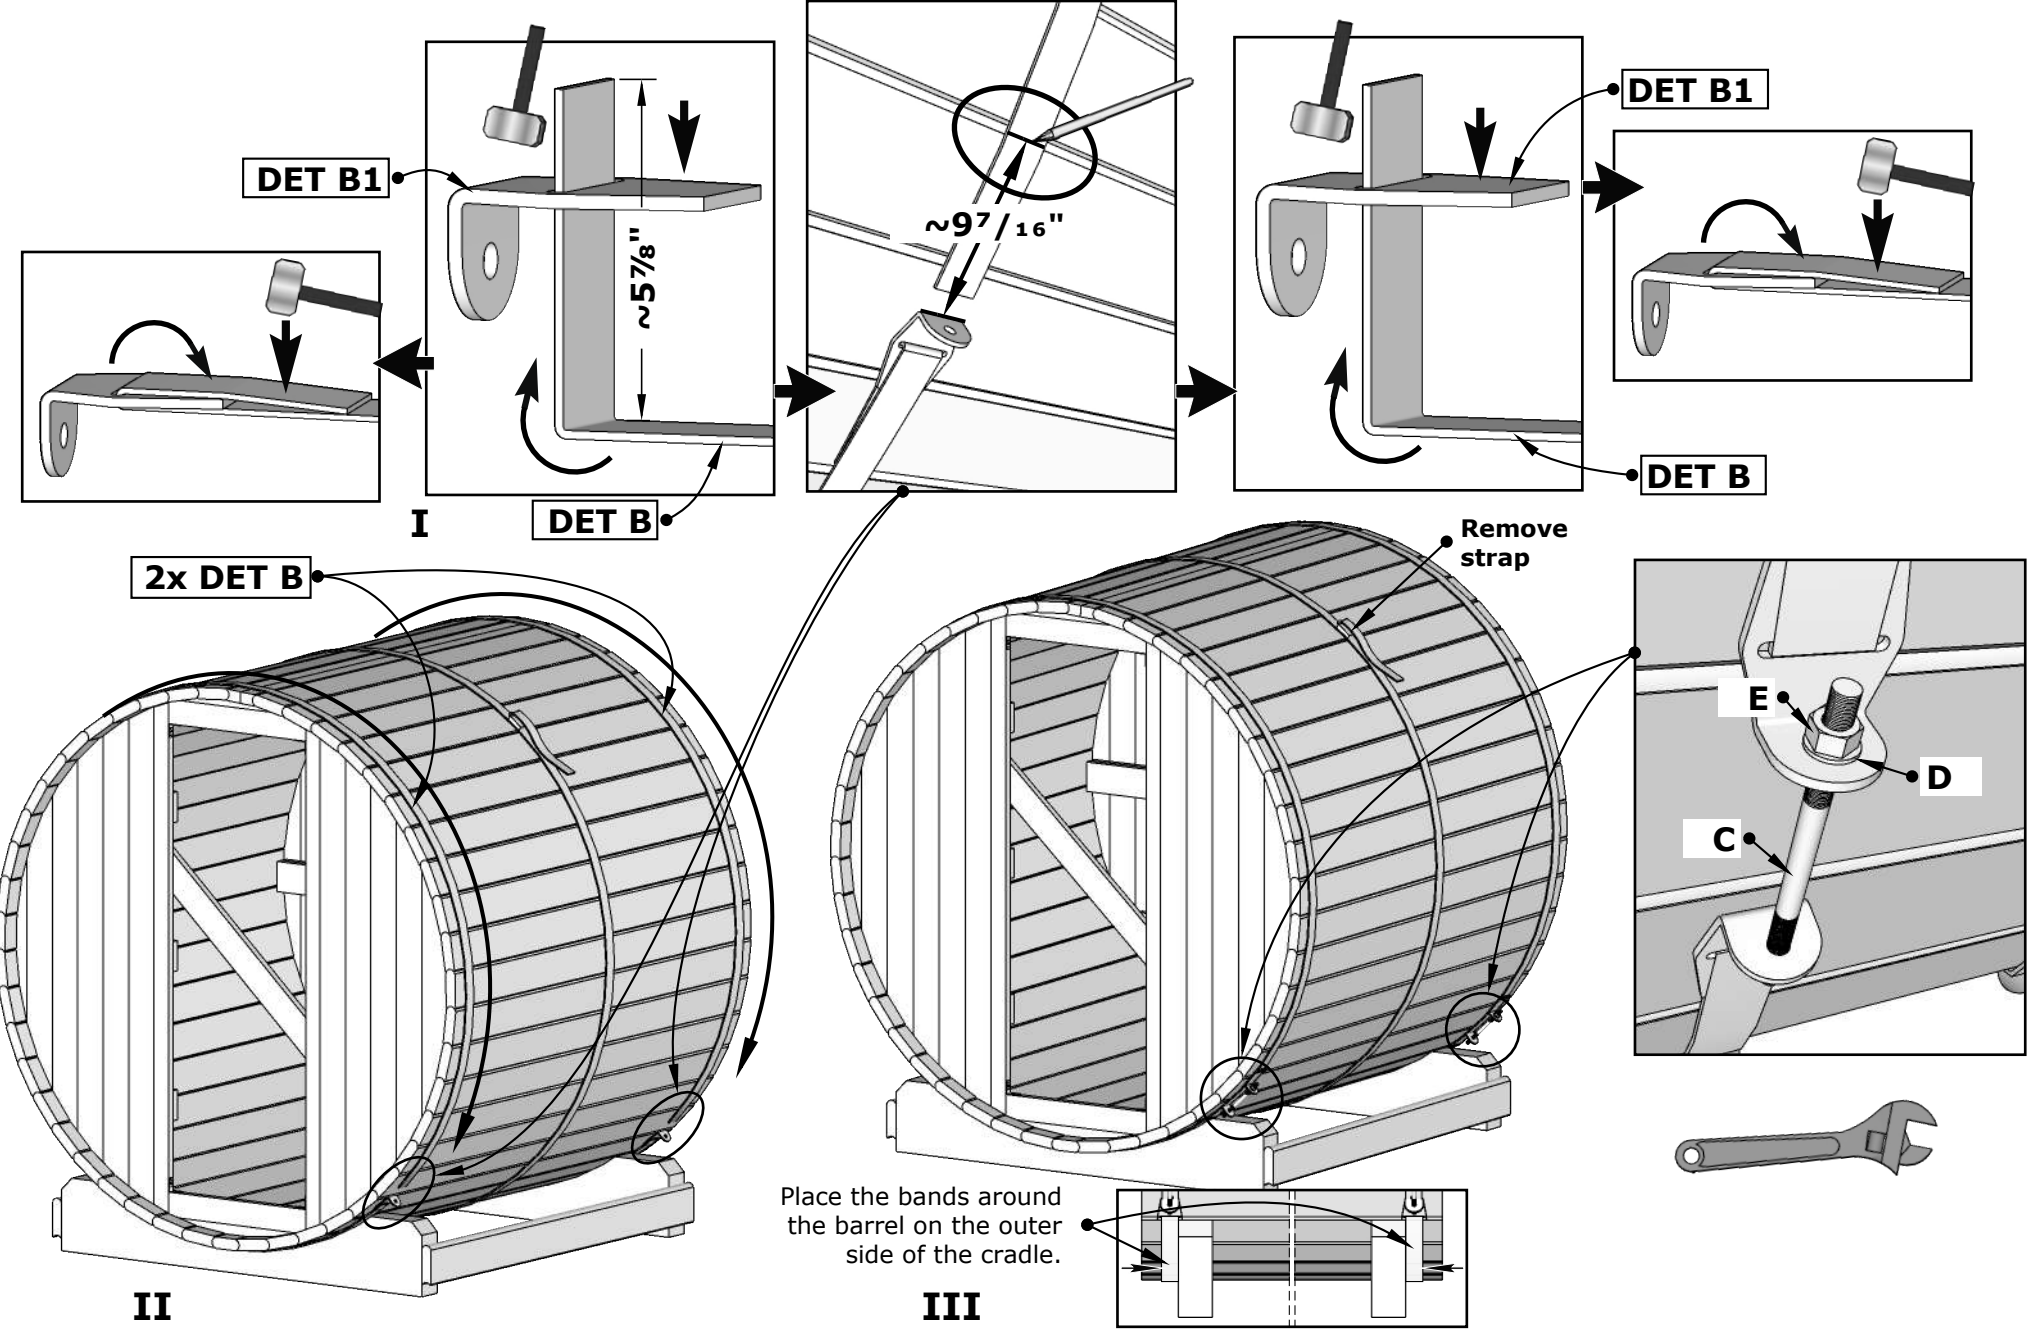




E8G Barrel Sauna 87D" x 81H"

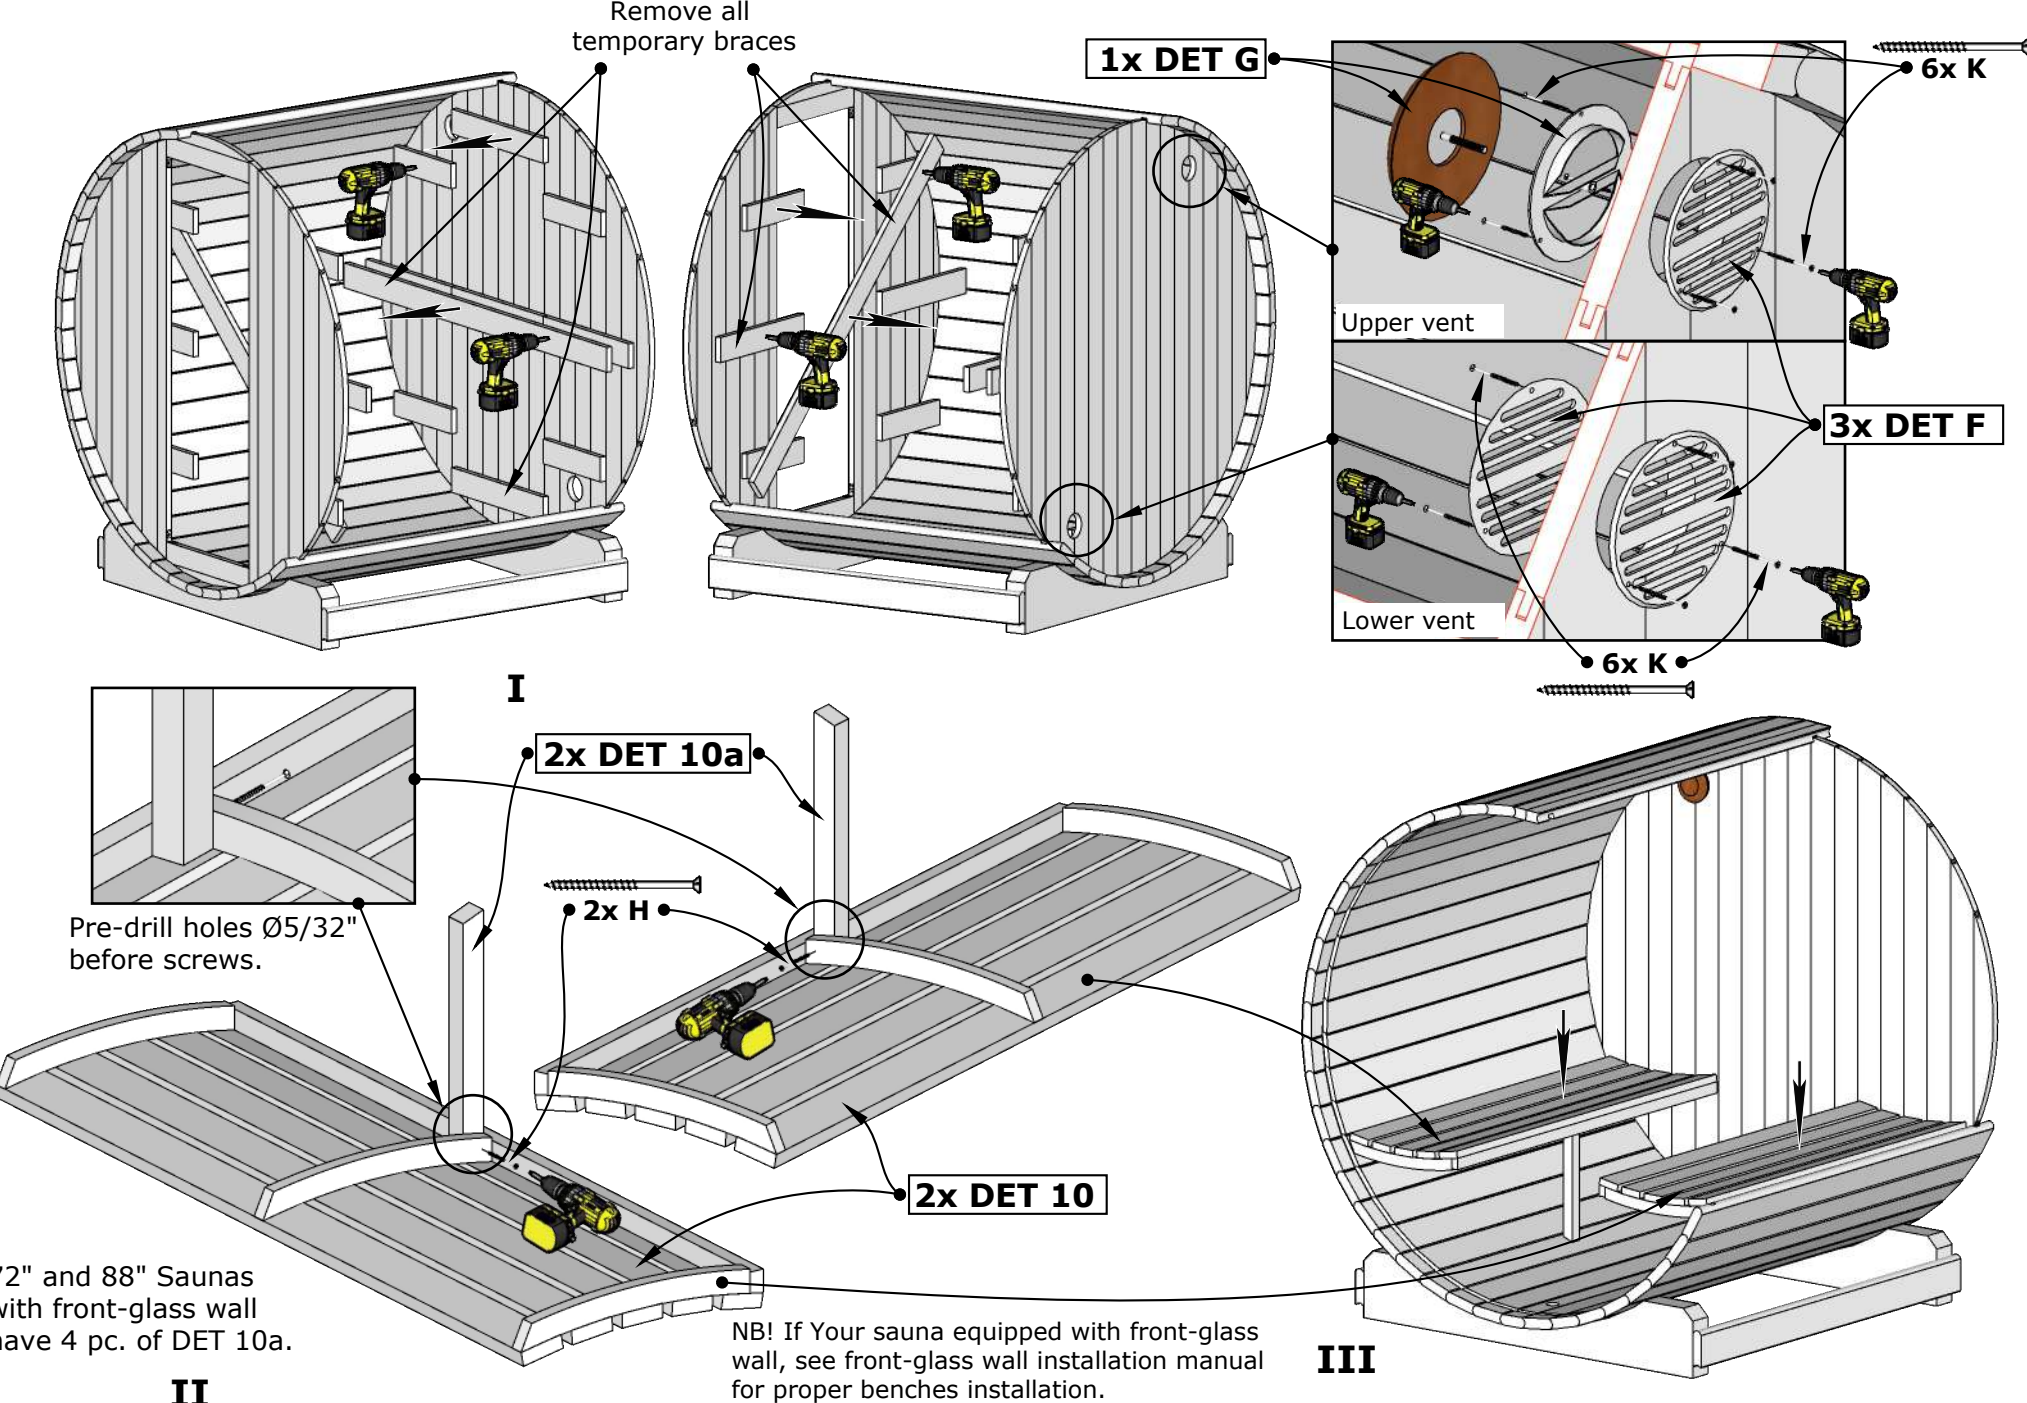





E8G Barrel Sauna 87D" x 81H"

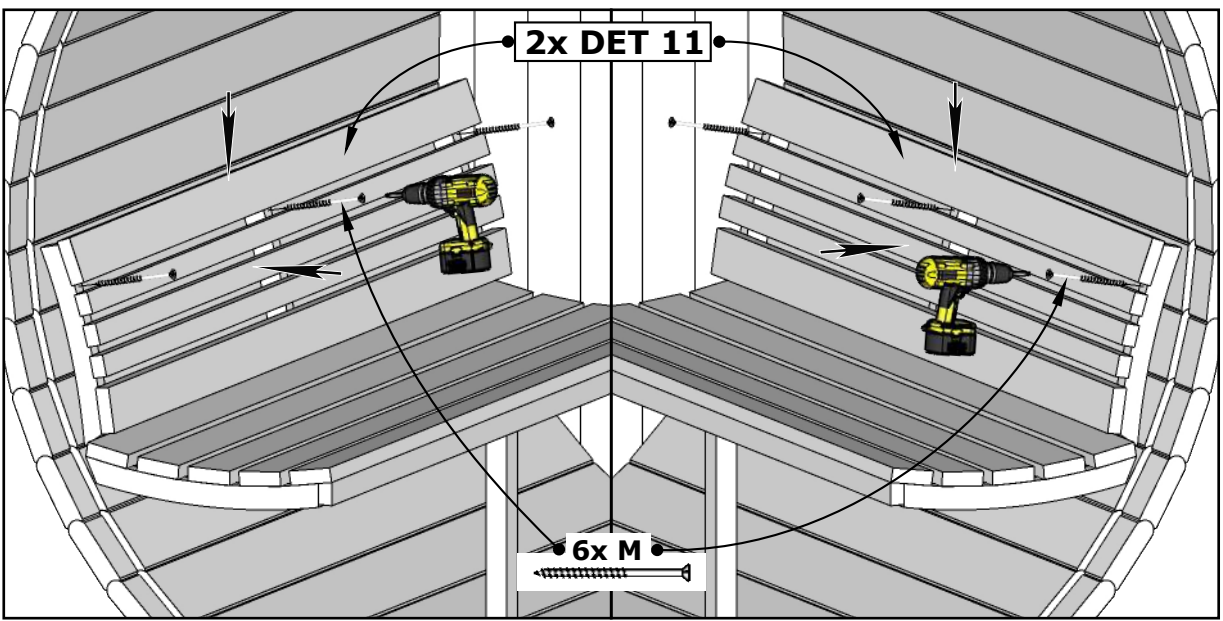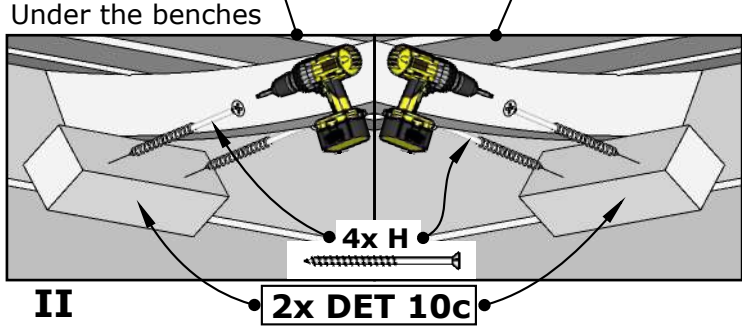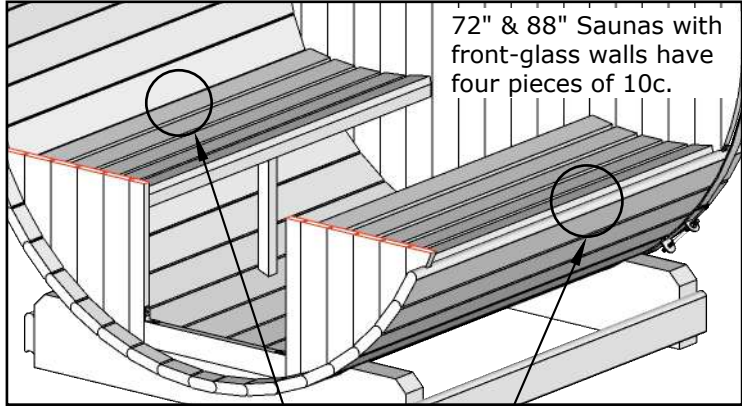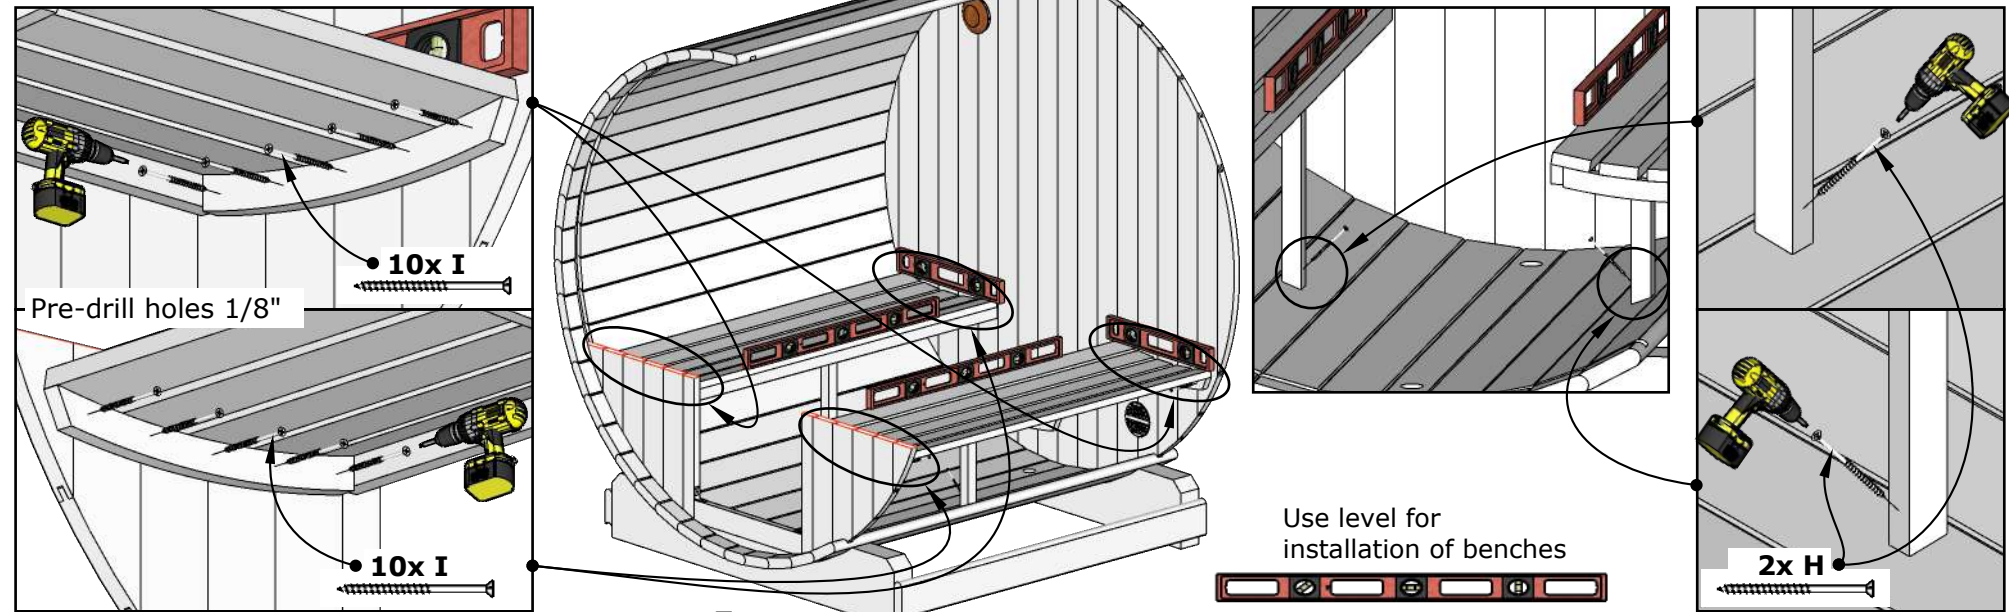

E7G Barrel Sauna 71D" x 81H"

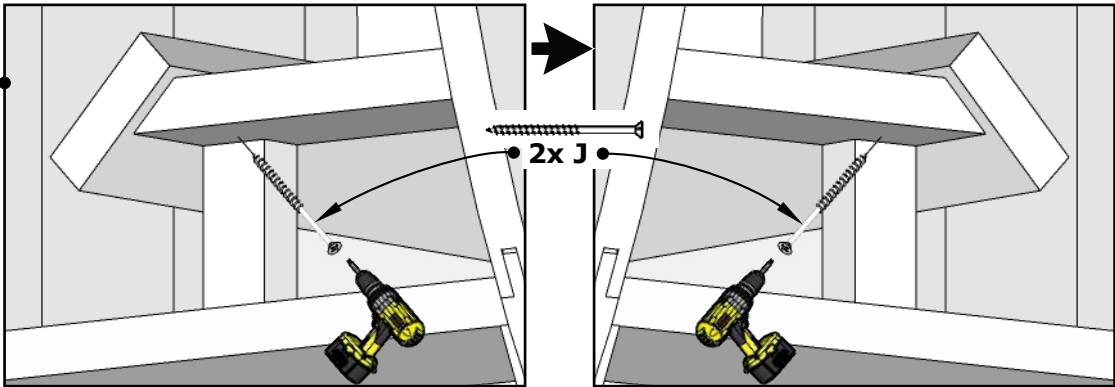
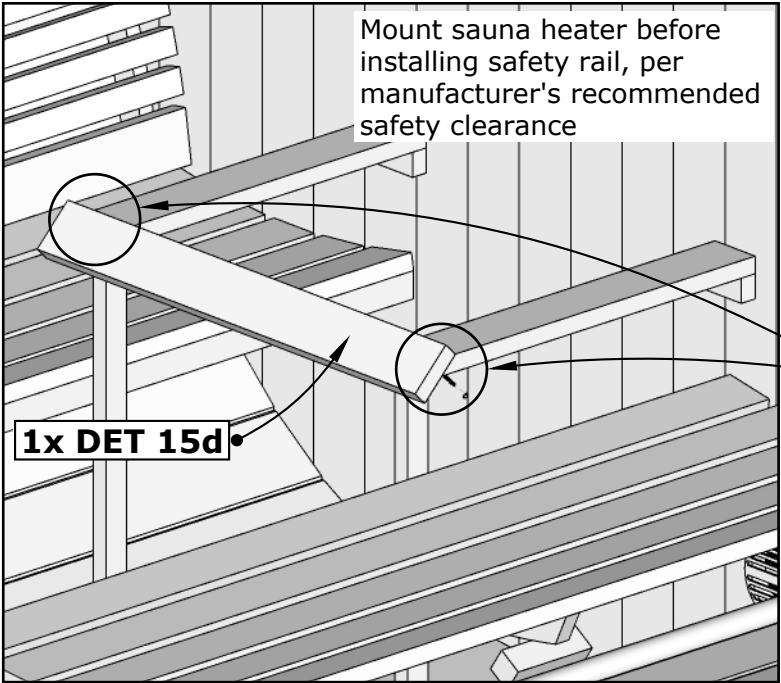
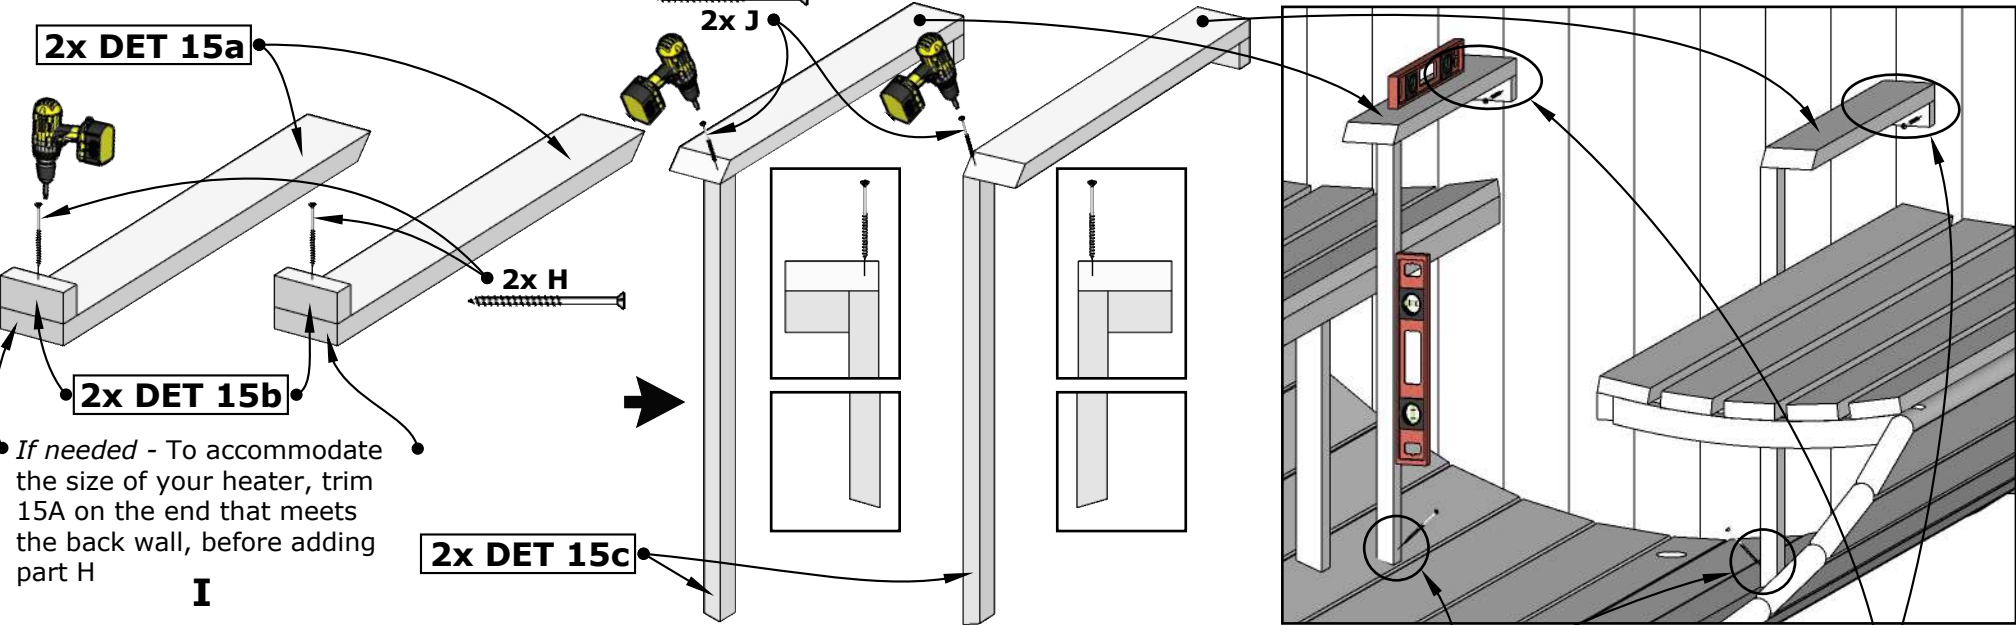


E8G Barrel Sauna 87D" x 81H"

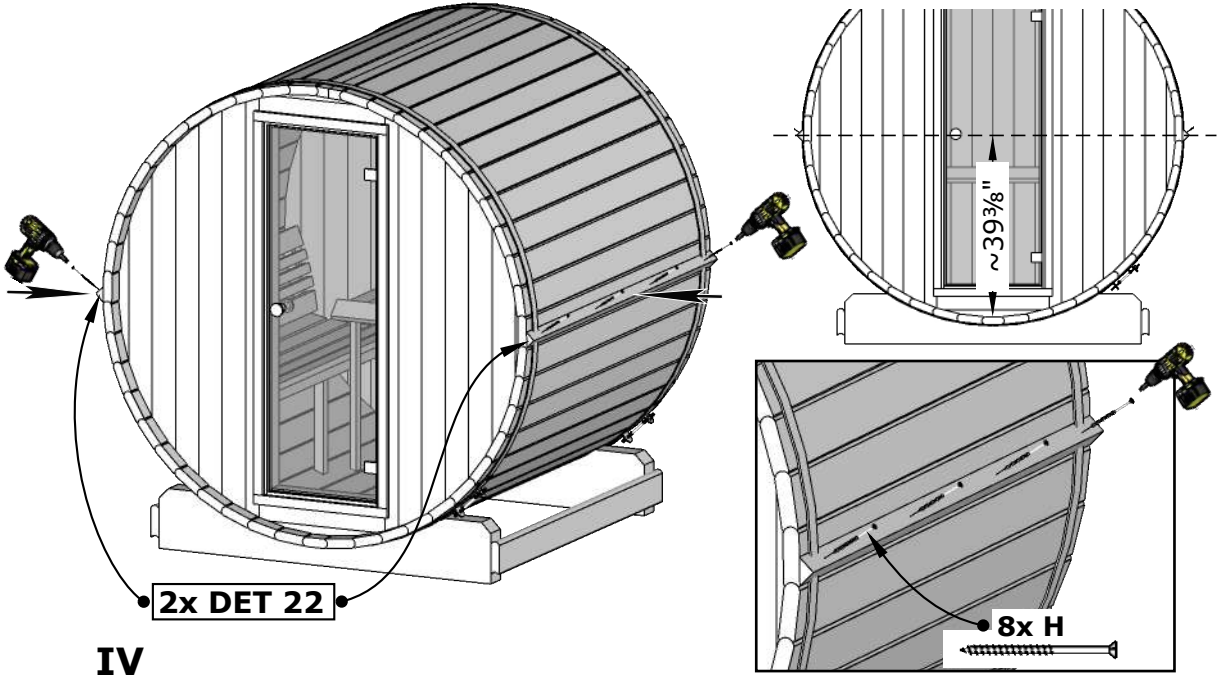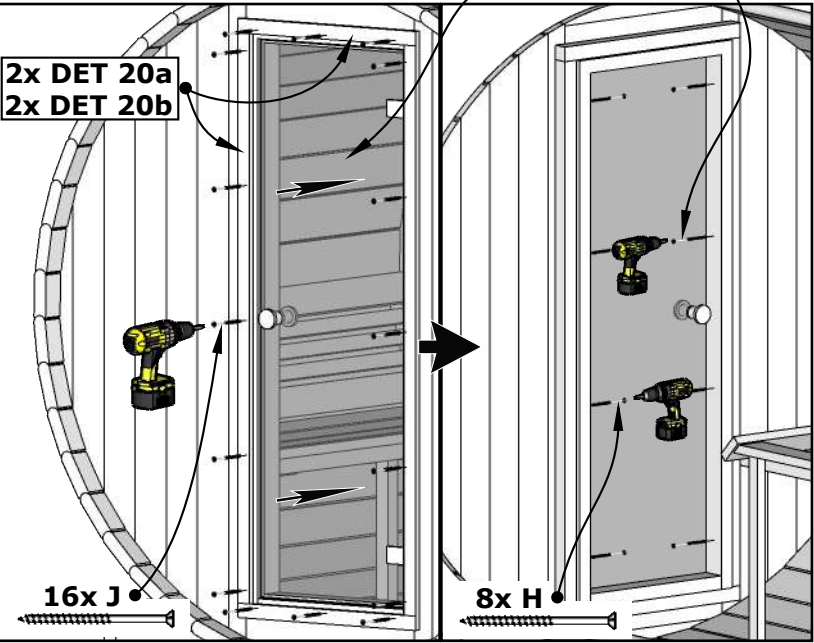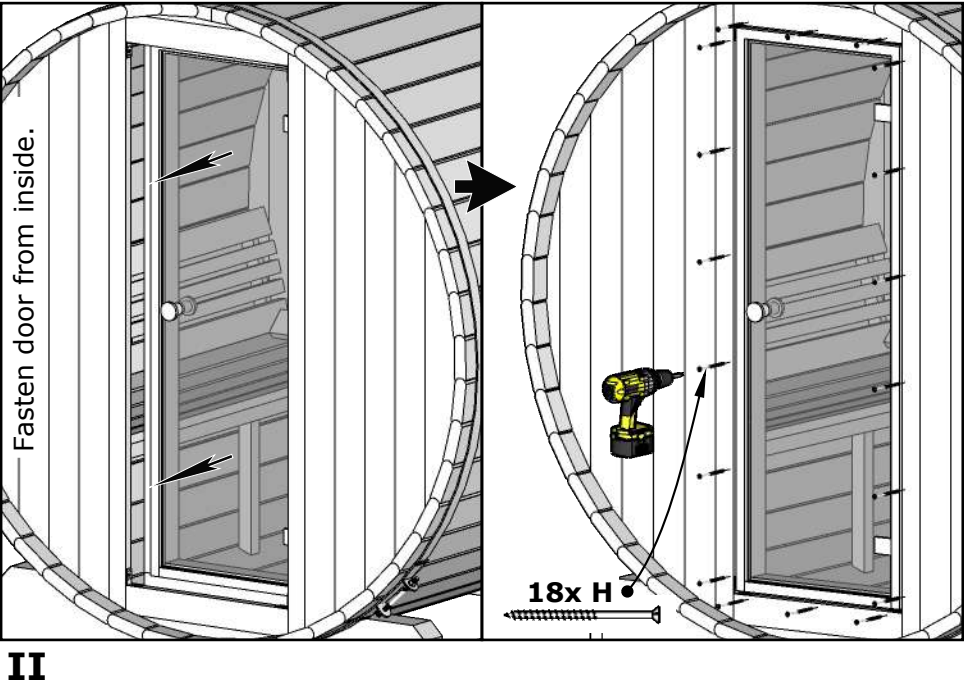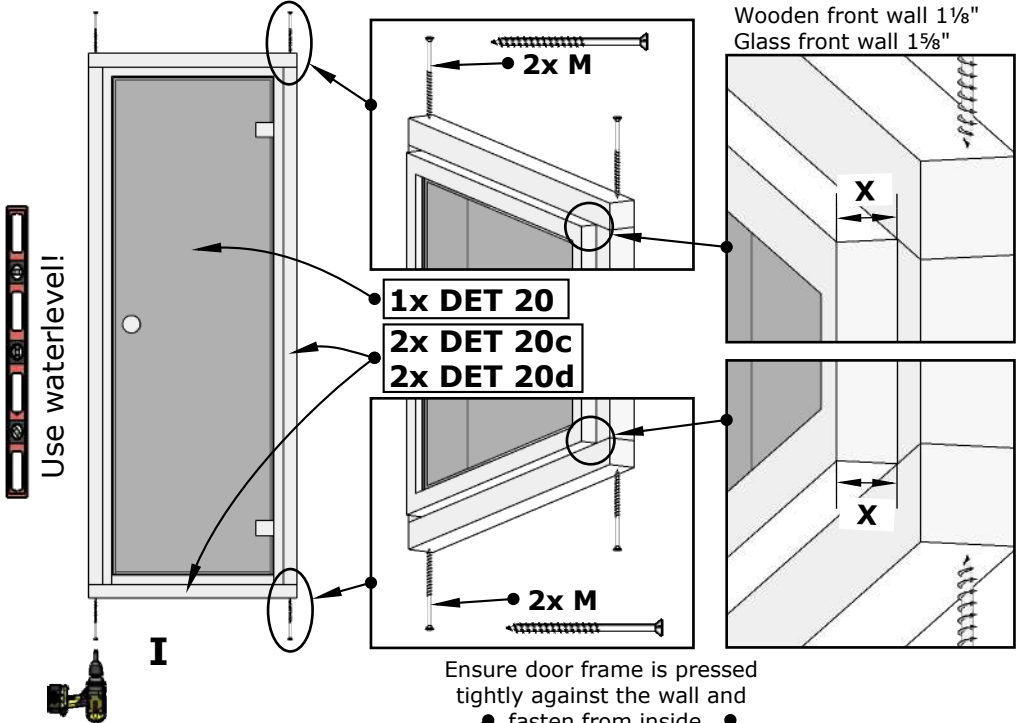


## E8G Barrel Sauna 87D" x 81H"

See the installation  
manual inside the  
shingles package

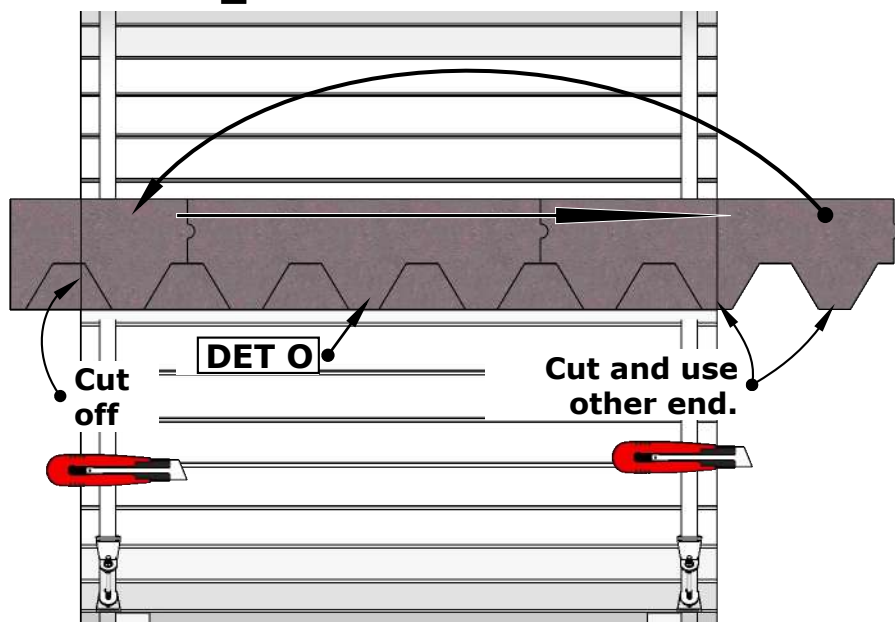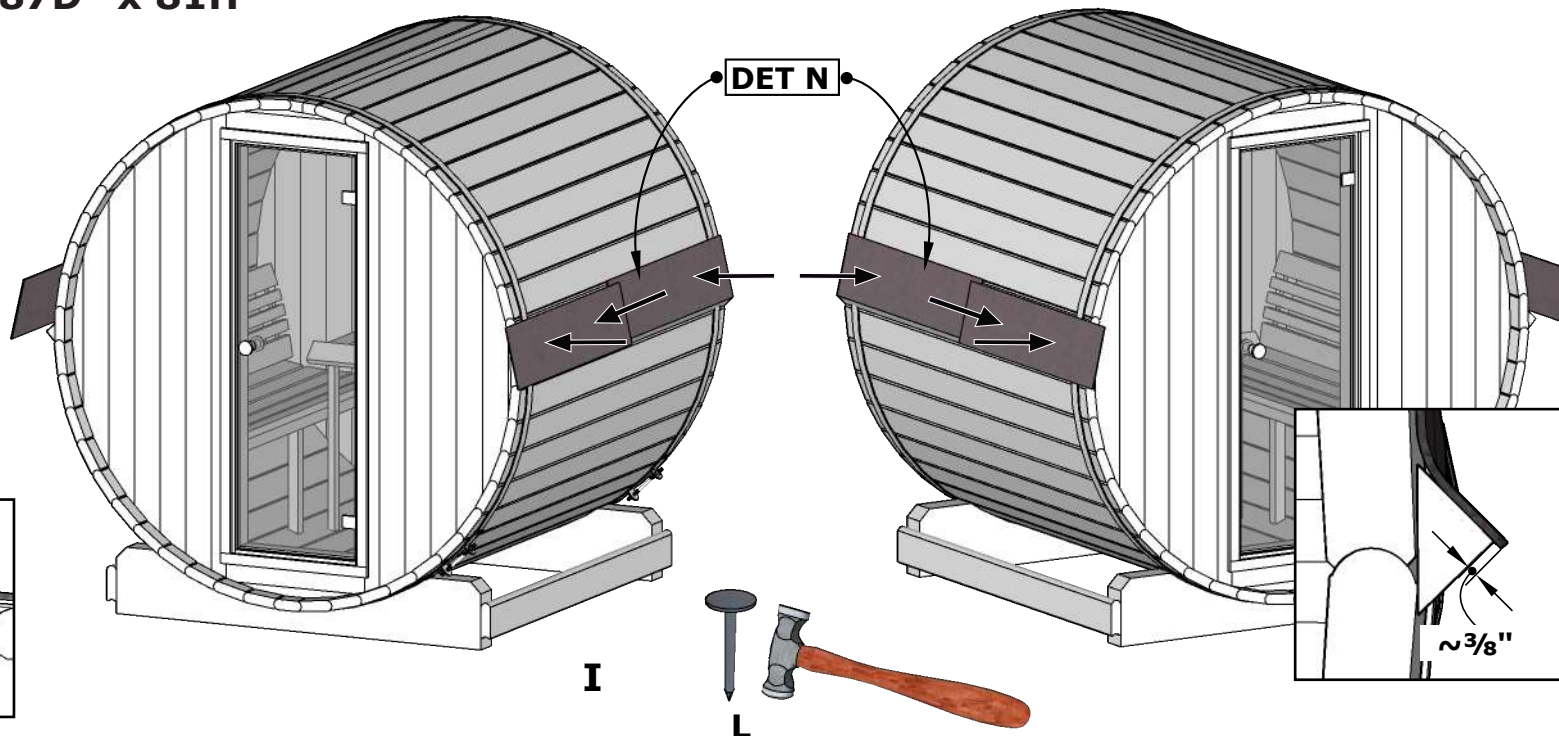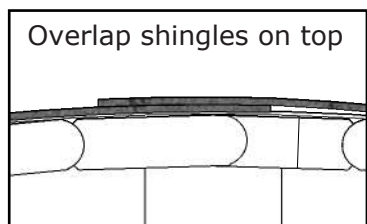

**Check also roof shingles  
installation manual inside package.**

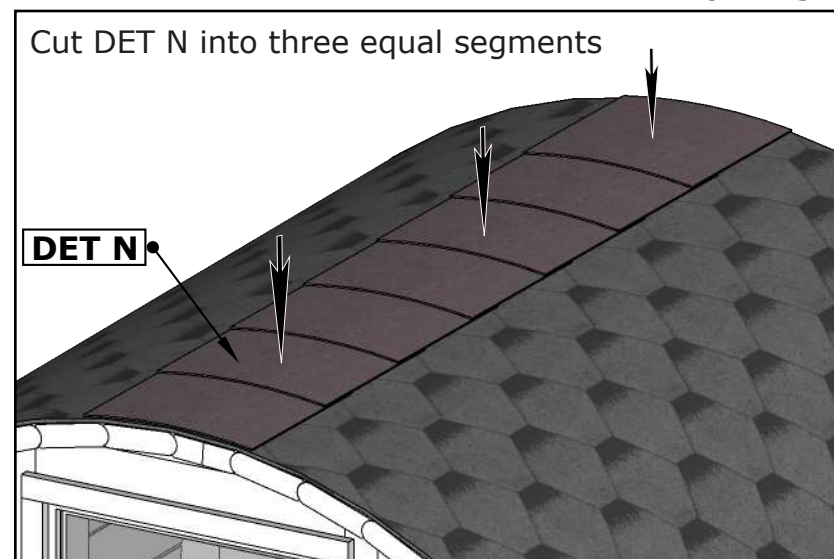

E8G Barrel Sauna 87D" x 81H"

