


# GATEWAY

## ASSEMBLY INSTRUCTIONS

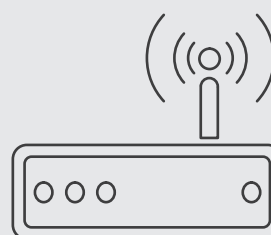


## 1. GATEWAY INSTALLATION AND ASSEMBLY

The Gateway must be mounted correctly to ensure correct operation of the locks. It needs to be positioned no greater than 50mtrs radius away from the locks and can be installed above ceiling level if required.

The position of the anchor points, as shown in figure 1.1, must be carried out correctly to prevent the Gateway from being damaged.

## 2. TECHNICAL DRAWINGS

Measurements in mm.

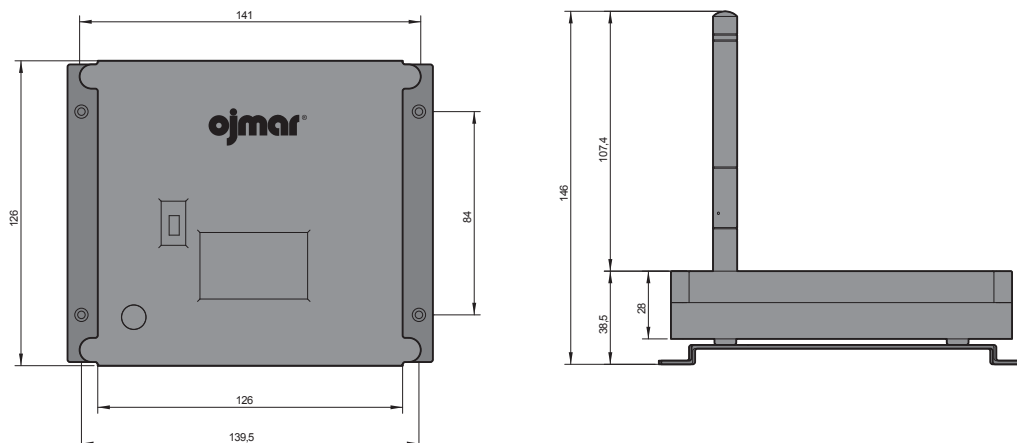

## 3. ASSEMBLY CONSIDERATIONS

The Gateway can be installed in above ceiling level.

1.-Recommended screws:

Countersunk head flat head screw  
diameter 3mm.




## 4. ASSEMBLY AND INSTALLATION PROCESS

The steps to follow for the fastening of a GW are as follows

- 1.- Mark the holes according to figure 1.1.
- 2.- Drill the holes for fastening the GW.
- 3.- Screw the GW using four fastening screws.

### 1.1

Measurements in mm.

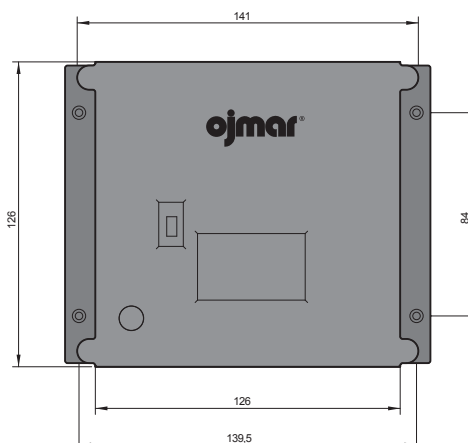



INTELLIGENT LOCKING SYSTEMS

CONTACT  
sales@ojmar.com  
+34.943.748.484

OJMAR HQ  
Polígono Industrial de Lerun  
20870 Elgoibar - SPAIN

OJMAR USA  
17155 Von Karman Ave, S111  
Irvine CA. 92614 - USA

[www.ojmar.com](http://www.ojmar.com)