


STEP: 4
SCREW IN TOP BULB

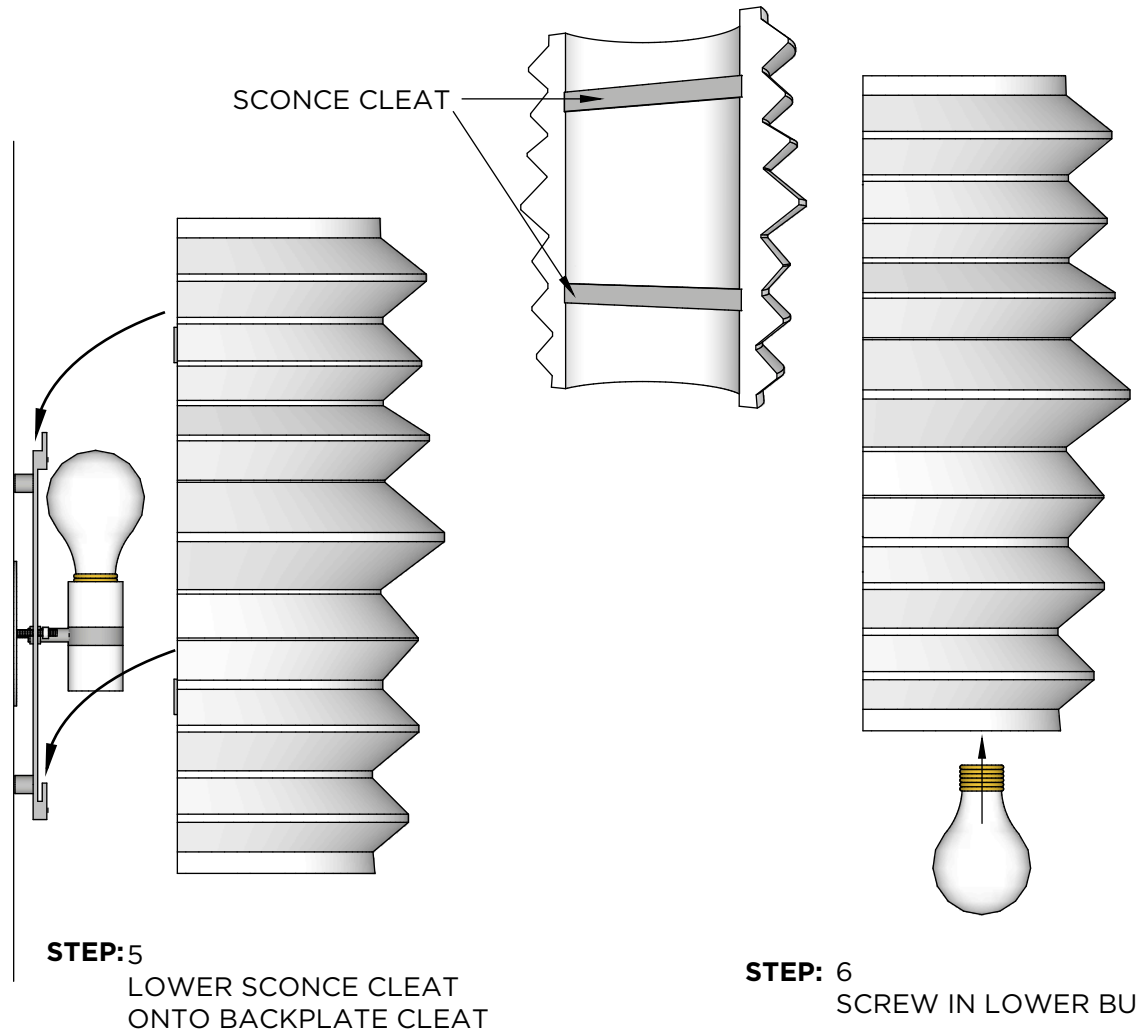

STEP: 5
LOWER SCENCE CLEAT
ONTO BACKPLATE CLEAT

STEP: 6
SCREW IN LOWER BULB