It's not rocket science, but following these <u>instructions</u> will make installing your seat covers a lot easier.

We promise.

PART:	**E82210**
PRODUCT:	**KOMATSU WA380-6 - WA500-6 WHEEL LOADER SEAT COVER**
PIECES:	(1) SEAT BACK COVER
	(1) SEAT BOTTOM COVER
	(1) HEADREST COVER
	(1) ARMREST COVER

2-YEAR

IT'S COVERED

UNCONDITIONAL WARRANTY

Basically, you break it, we buy it. Seriously.

Your new seat covers are covered by a two-year, unconditional, no B.S. warranty.

That means that if you manage to abuse them to a point that they can't perform like they're supposed to within two years of when you bought them, we'll make it right. Depending on what is more practical, we'll either repair or replace the damaged cover.

General care instructions:

1. In most cases dirt, debris, spills and pet hair can be removed by wiping with a damp cloth.
2. Seat covers can be removed and machine washed on low temperature setting using mild detergent.
   Drip dry or machine tumble dry on a no heat cycle.
   Straps should be coiled and secured with rubber bands for machine washing and drying.
3. Soil may be removed with spray cleaner or detergent and water.
4. Oil or grease stains should first be treated with a dry cleaning solvent followed by a spray cleaner or detergent and water.
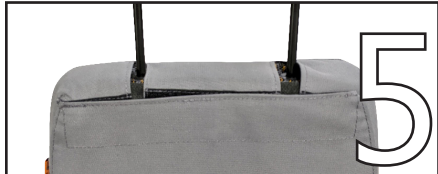5. Do not use bleach.

Install Cover

Start with the seat back. Undo all the velcro tabs on the cover. Slide cover over the headrest.

The flaps at the bottom should be facing you.

1

Fasten the three flaps under the headrest.

5

Work the cover the rest of the way down the seat back.

Push cover around the armrest.

2

Place cover over the seat bottom with velcro flap towards the back.

6

Push flaps from the front between the seat back and bottom.

3

Push flap in between the seat back and seat bottom.

7

[View from back of seat]

Pull tabs tight and secure to velcro.

4

Pull tight and secure velcro.

8

Pull headrest cover on with the long velcro flap towards the front.

9

Slide armrest cover on

11

Fasten the flap to the velcro inside the headrest.

10

Fasten velcro flap at the back.

12

MISSION ACCOMPLISHED