




1. Apply teflon tape
2. Push on cover plate and
screw on diverter valve

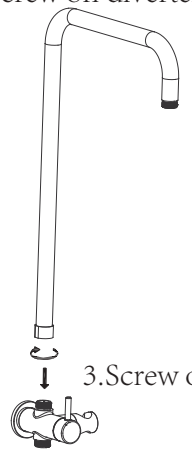


3. Screw on the overhead arm

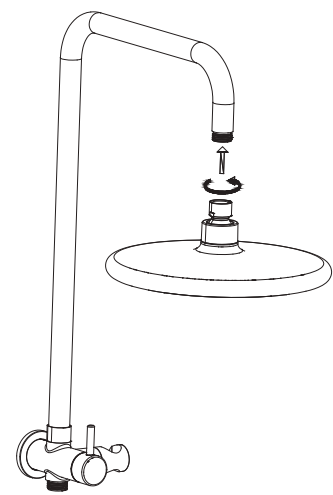

4. Screw on shower head

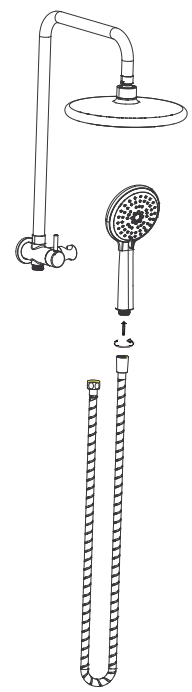

5. Screw on the hand shower

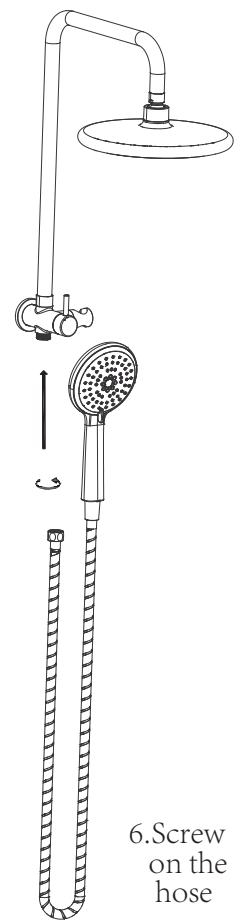

6. Screw on the
hose