


Self-Cleaning All Directional Shower


Revolution
SHOWERS

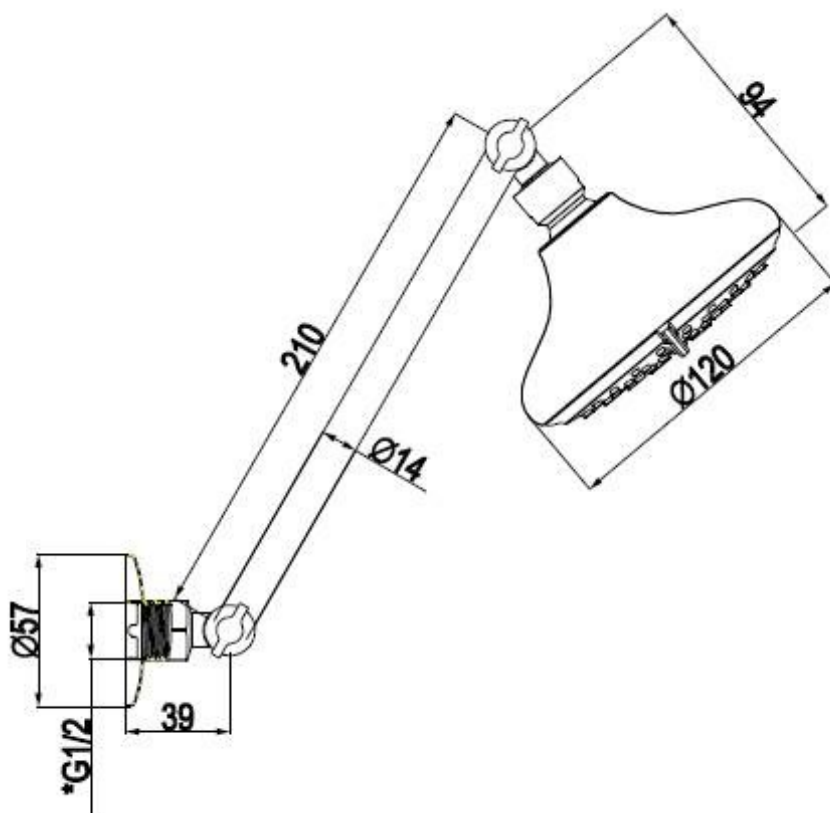



Installation Guide: SCS1




1. Apply teflon tape

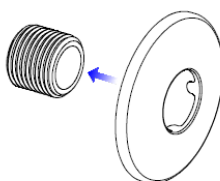

2. Push on cover plate

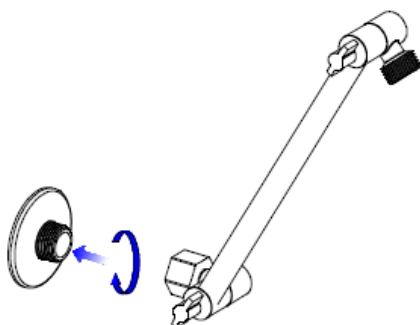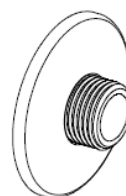

3. Screw on the shower arm

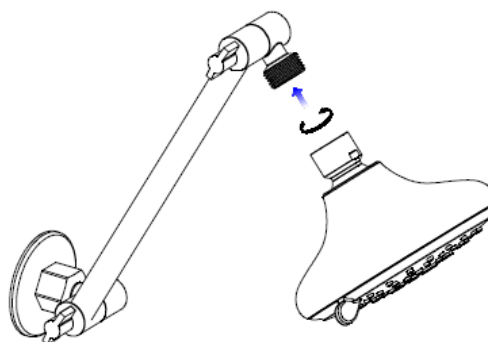

4. Screw on the shower head