

The Perimeter Pro1 comes with no extra parts and requires no assembly



- 1 Simply place your new Perimeter Pro1 on top of any basketball goal, and align the rim cut out so that it fits around the base of the rim




- 2 Firmly press down on the Perimeter Pro 1 to ensure that it is properly placed.

Thank you for choosing success with Perfect Jumper's Perimeter Pro 1!



The Perimeter Pro 2 comes with no extra parts and requires no assembly

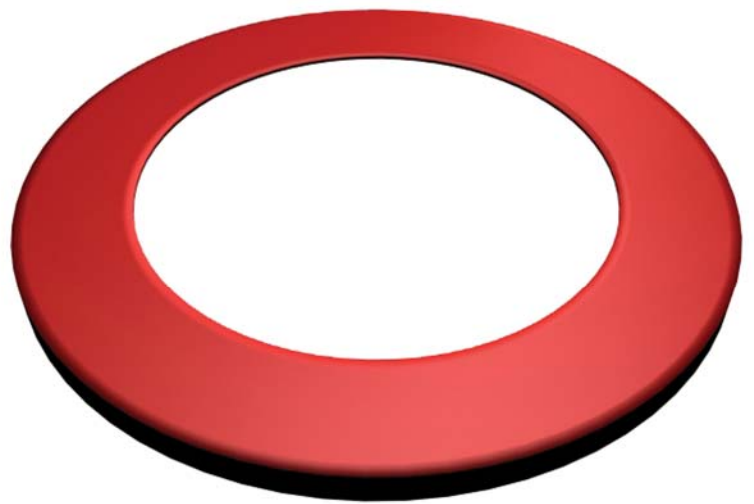

1



Simply place the Perimeter Pro 2 on top of the rim, and align it so that the rim cut out fits around the base of the rim



Precut grooves fit around the base of the rim

Firmly press down on the Perimeter Pro 2 to ensure that it is properly placed.

2



Thank you for choosing success with Perfect Jumper's Perimeter Pro 2!



The Free Throw King will require some assembly. Prior to assembly, make sure all of the parts are included.



A (1)



B (1)



C (2)



D (9)




E (18)




F (9)

1

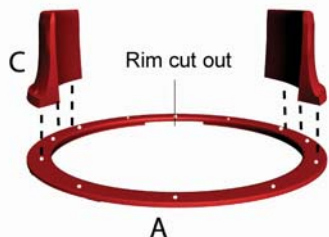


Align parts C with the holes in part A

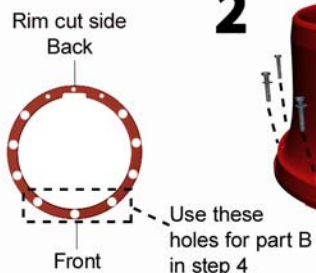

The highlighted holes on part A are the holes used to assemble your Free Throw King.

2

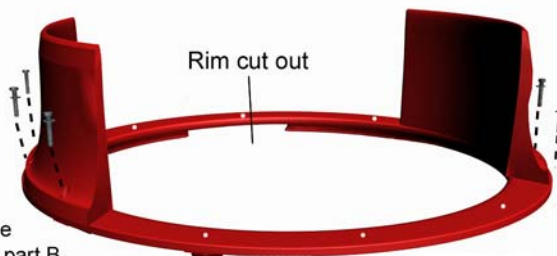


Insert the screws (F) with washers (E) into the holes provided to secure parts C

3




Secure screws from the underside using another washer (E) and tighten nut (D)

4

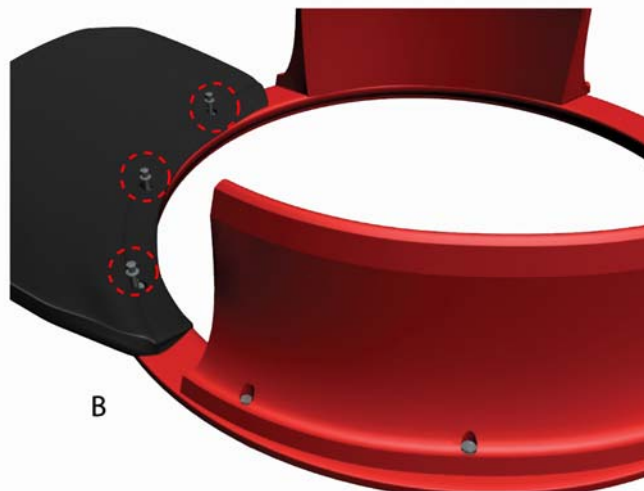

Repeat steps 2 and 3 in order to secure the front guard (B)

5

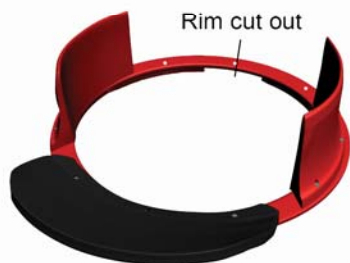

The assembly is finished! Now place the Free Throw King on top of any basketball rim and snap it down firmly.

Thank you for choosing success with Perfect Jumper's Free Throw King!



The Baseline Bomber will require some assembly. Prior to assembly, make sure all of the parts are included.



A (1)



B (2)



C (6)




D (12)




E (6)

1

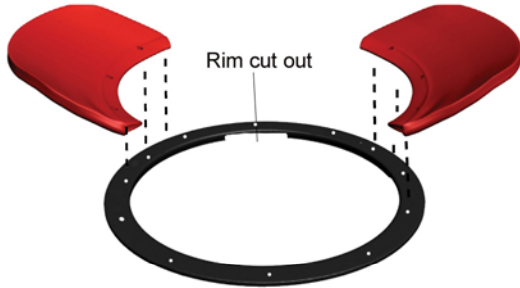


Align parts B with the holes in part A

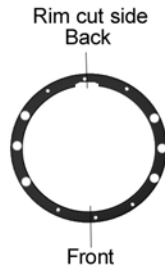

The highlighted holes on part A are the holes used to assemble your Baseline Bomber.

2

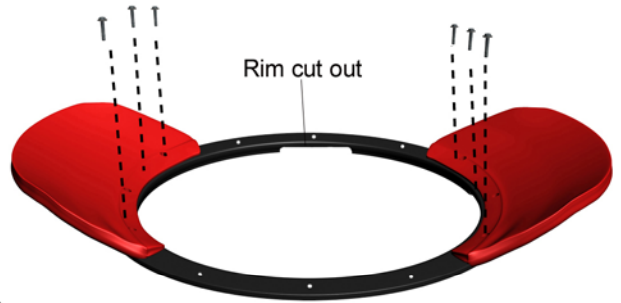

Insert the screws (E) with washers (D) into the holes provided to secure parts B




3

Secure screws from the underside using another washer (D) and tighten nut (C)



The precut groove on the underside of part A is used in step 4 for aligning the Baseline Bomber on the rim. The groove will fit around the base of the rim

4

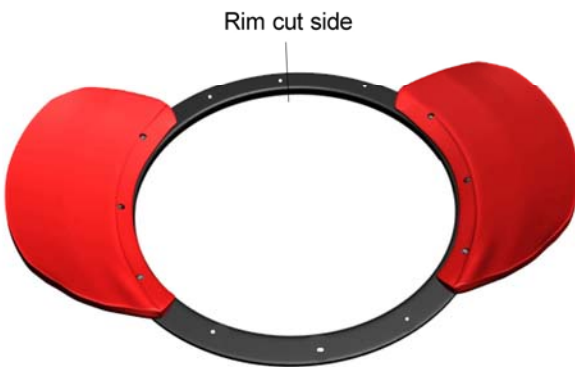

The assembly is finished! Now place the Baseline Bomber on top of any basketball rim and snap it down firmly.



Thank you for choosing success with Perfect Jumper's Baseline Bomber!

