

How to Measure Blinds

Measuring Guide



Replacing an Existing Blind

When replacing an existing blind with one of the same size, it's a straightforward process. Begin by measuring the full length of the blind, encompassing all controls and fittings, typically across the top. Then, measure the drop from the top to the bottom of the blind. Ensure precision in your measurements order replacement without hassle.

Step 1: Measure Width


Start by measuring the full width of the existing blind, including all controls and fittings. This is typically done across the very top of the blind.

Step 2: Measure Drop

Measure the length from the top to the bottom of the blind, including all components. For a precise fitting, ensure to account for the entire blind's structure.

Ordering Information

When ordering your replacement, if your measurements are based on an existing blind select the "exact fitting" option. This ensures that we know you've included all necessary allowances in your measurements.

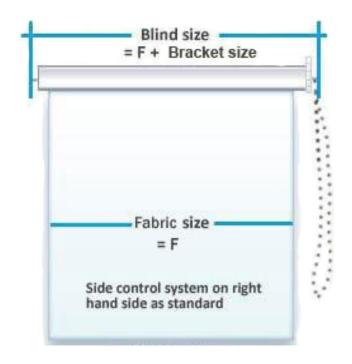




Measuring Recess vs Exact Fit

In a recess fit, the blinds are mounted inside the window recess offering a sleek appearance and a seamless fit where measurements are taken inside the recess. An exact fit involves covering the entire window area, where measurements are taken outside the recess to ensure complete coverage and minimise light leakage.

Recess

blinds are mounted inside the window recess, this option is commonly preferred by many.

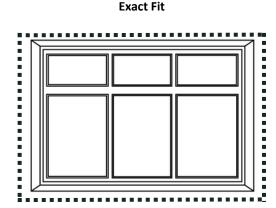

the blind covers the entire window recess or if your windows are flush with the wall.



How to Measure Recess


For a recess fitting, it's essential to measure the narrowest width from left to right and the shortest measurement from top to bottom. These measurements ensure a proper fit within the window recess, providing a neat and streamlined appearance.

Step 1: Measure Width

Take three measurements across the top, middle, and bottom of the recess. (dark green arrows in the image below). The smallest measurement is your blind width.

Step 2: Measure Drop

Take three measurements from top to bottom along the left, middle, and right of the recess. (light green arrows in the image below). The smallest measurement is your blind drop.

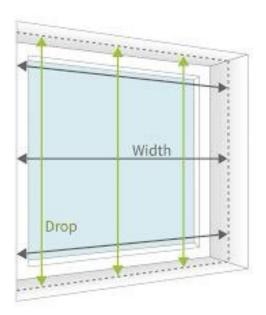



How to Measure Exact Fit

For an exact fitting, where the blind covers the entire window recess or if your windows are flush with the wall, follow these steps for precise measurements:

Step 1: Measure Width

Measure outside the recess from one side to the other, starting and finishing where you want the edges of your blind.

Step 2: Measure Drop

Measure from top to bottom, starting where you want the rail to be and ending where you want the bottom of your blind to be.

