


INTERIOR PVC WALL CLADDING-2024

WHY INTERIOR WALL CLADDING?



Water Resistant

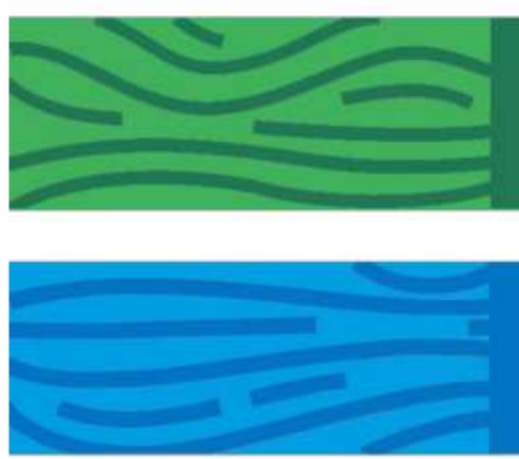

Natural Wood Pattern



Eco Friendly



Easy Installation



Easy Maintenance




Long Life Span



Moth Resistant



No Stain

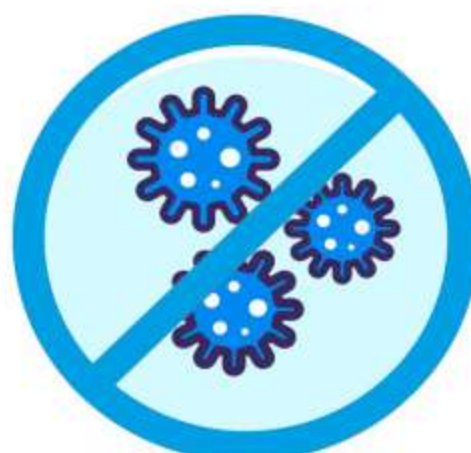

Mould Resistant

INDOOR WPC WALL CLADDING



HP Brown&Black



HP Brown



Round Slat-Cream



Round Slat Leather



Round Slat Ash



Six Pier Venilla



Five Pier Metalic



Wide Slat Leather



Wide Slat-Golden tan



Hp Royal Black



Hp Dark Grey



Hp White



Hp Teak



Big Slat Teak



Flat Slat-Cement



HP Brown&Black


Panel Size: 160x24x2900mm
Edge cover: 30x30x2900mm






HP BROWN

Panel Size: 160x24x2900mm
160x24x5400mm
Edge cover: 30x30x2900mm

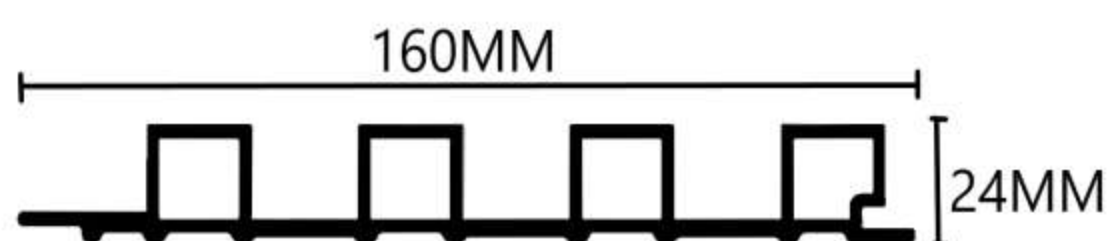

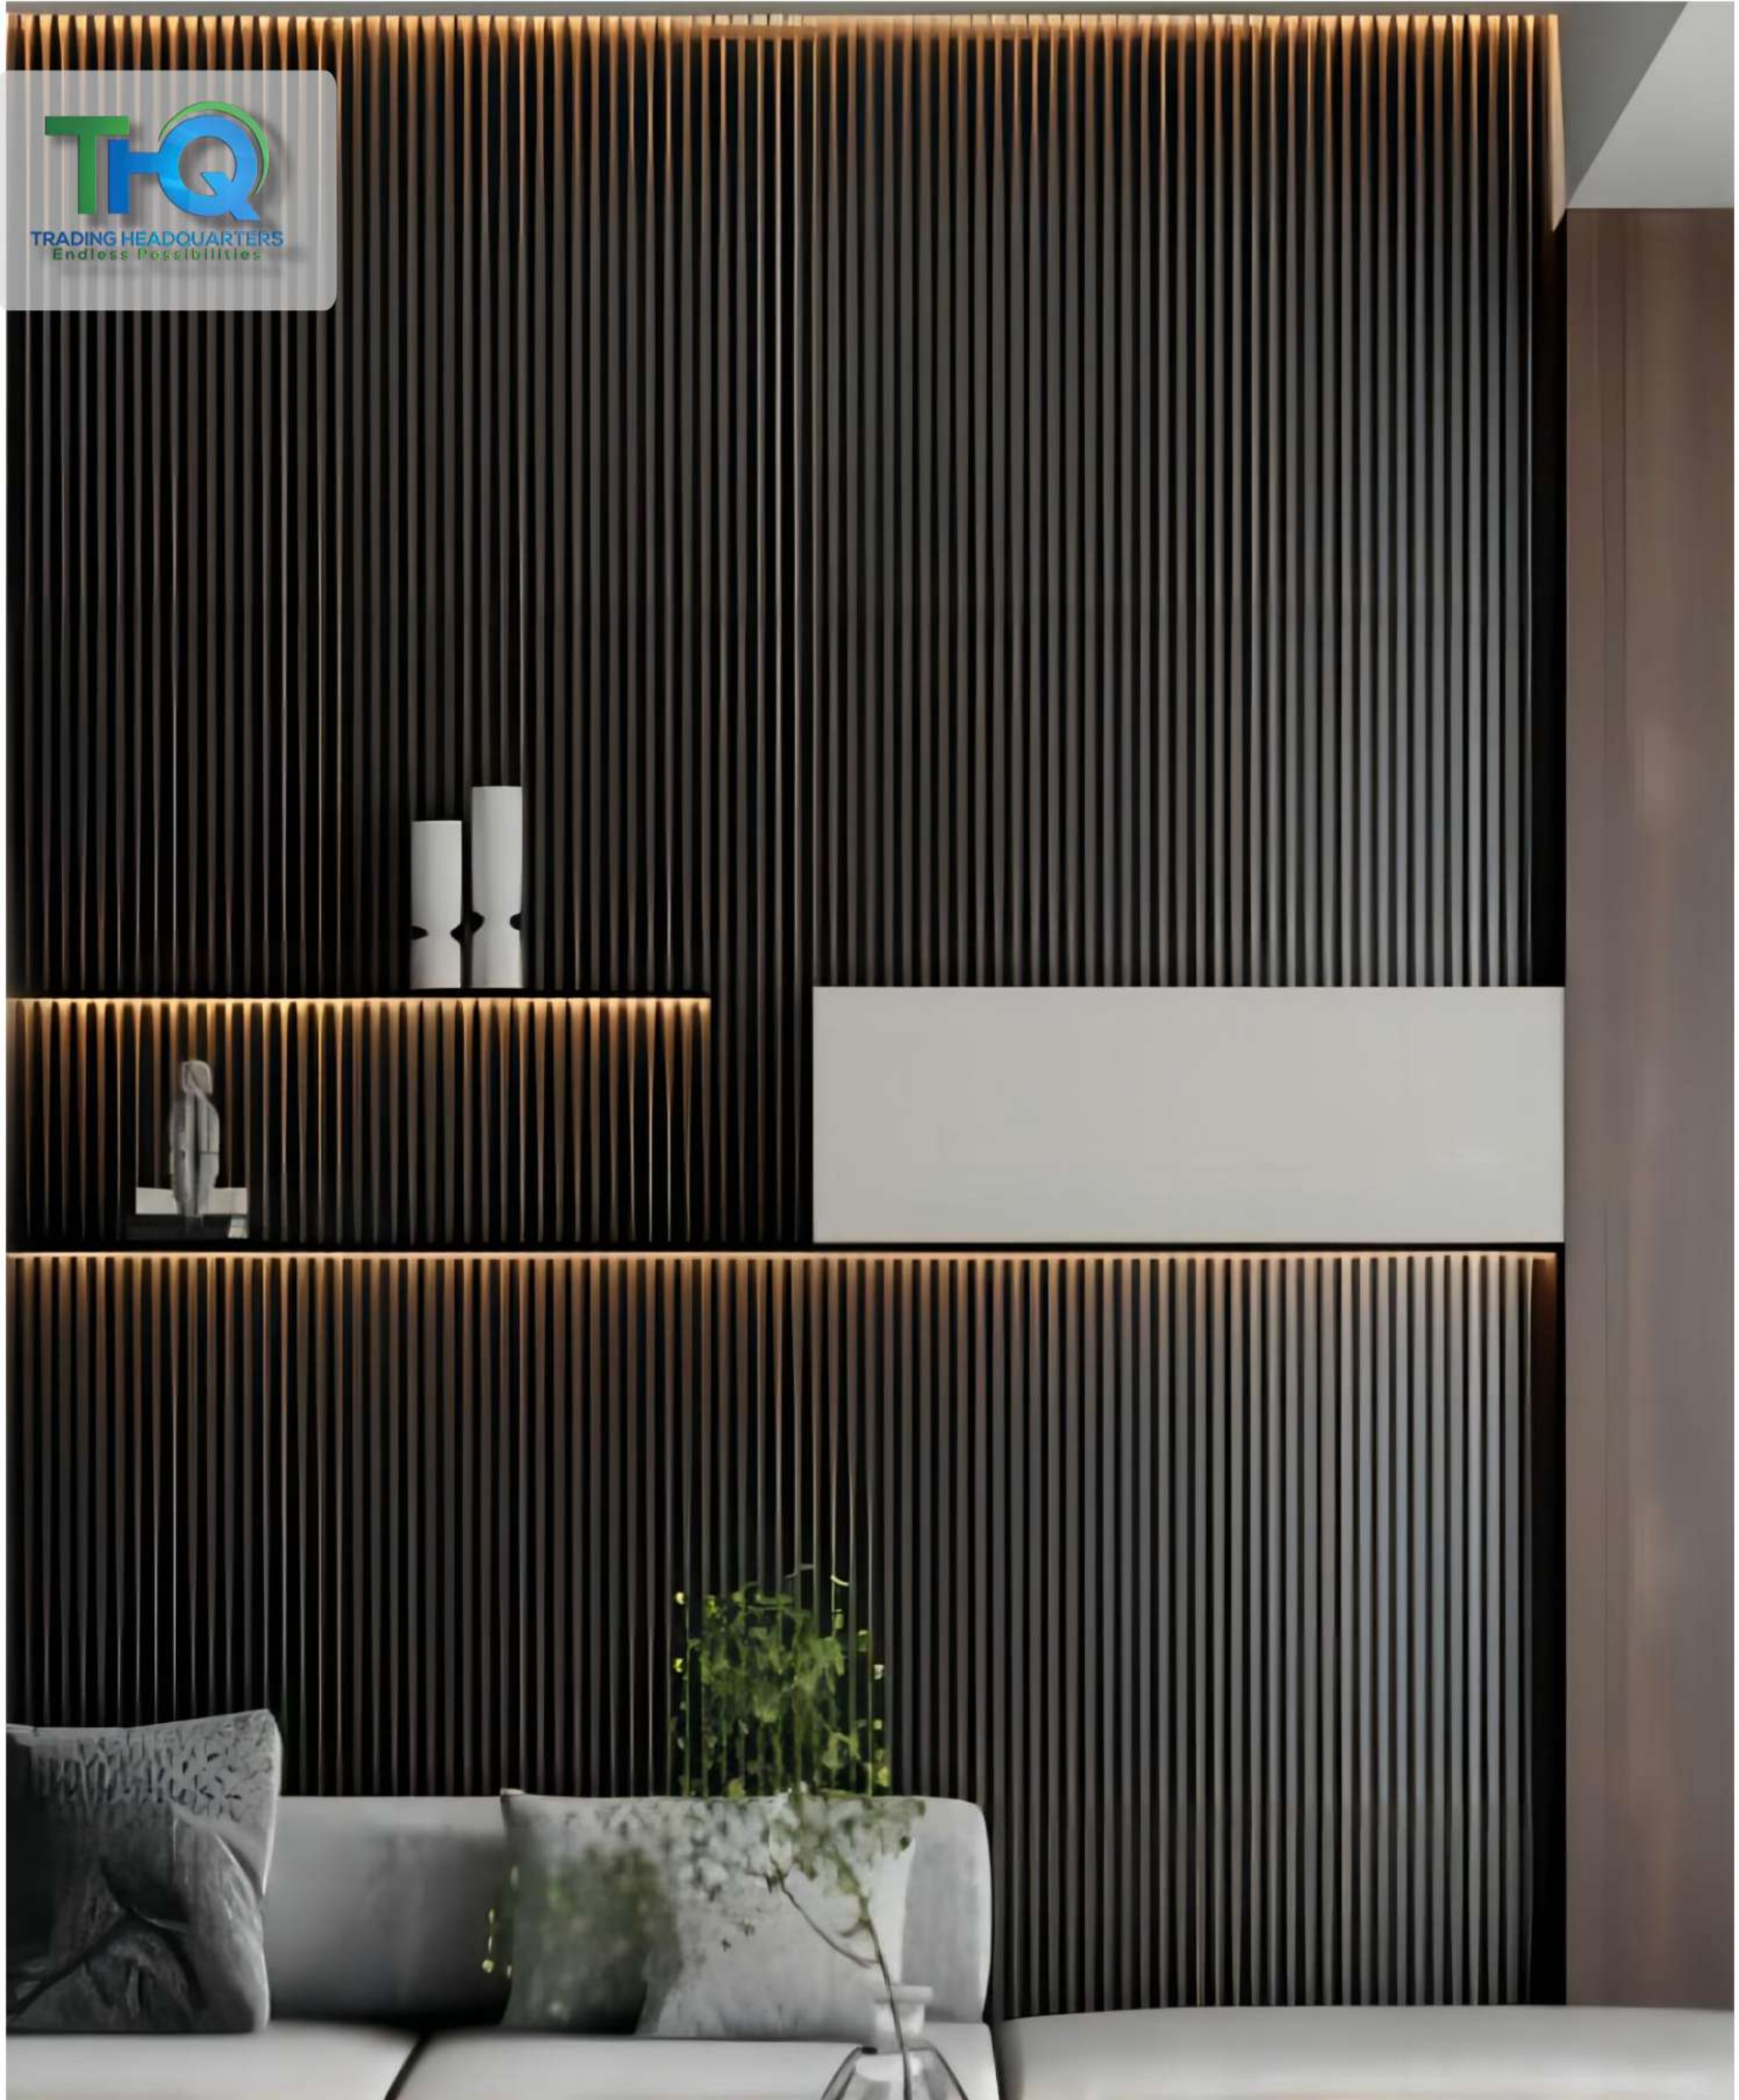

HP Royal Black

Panel Size: 160x24x2900mm
Edge cover: 30x30x2900mm





Round Slat Leather

Panel Size: 160x15x2900mm
Edge cover: 30x30x2900mm





Round Slat Ash

Panel Size: 160x15x2900mm
Edge cover: 30x30x2900mm





Round Slat-Cream

Panel Size: 160x15x2900mm
Edge cover: 30x30x2900mm





Five Pier Metallic

Panel Size: 150*9*2900mm
 Edge cover: 30x30x2900mm





Wide Slat Leather



Panel Size: 195*12*2900mm
Edge cover: 30x30x2900mm





Wide Slat-Golden tan

Panel Size: 195*12*2900mm
Edge cover: 30x30x2900mm






Six Pier-Venilla

Panel Size: 170*18*2900mm
Edge cover: 30x30x2900mm



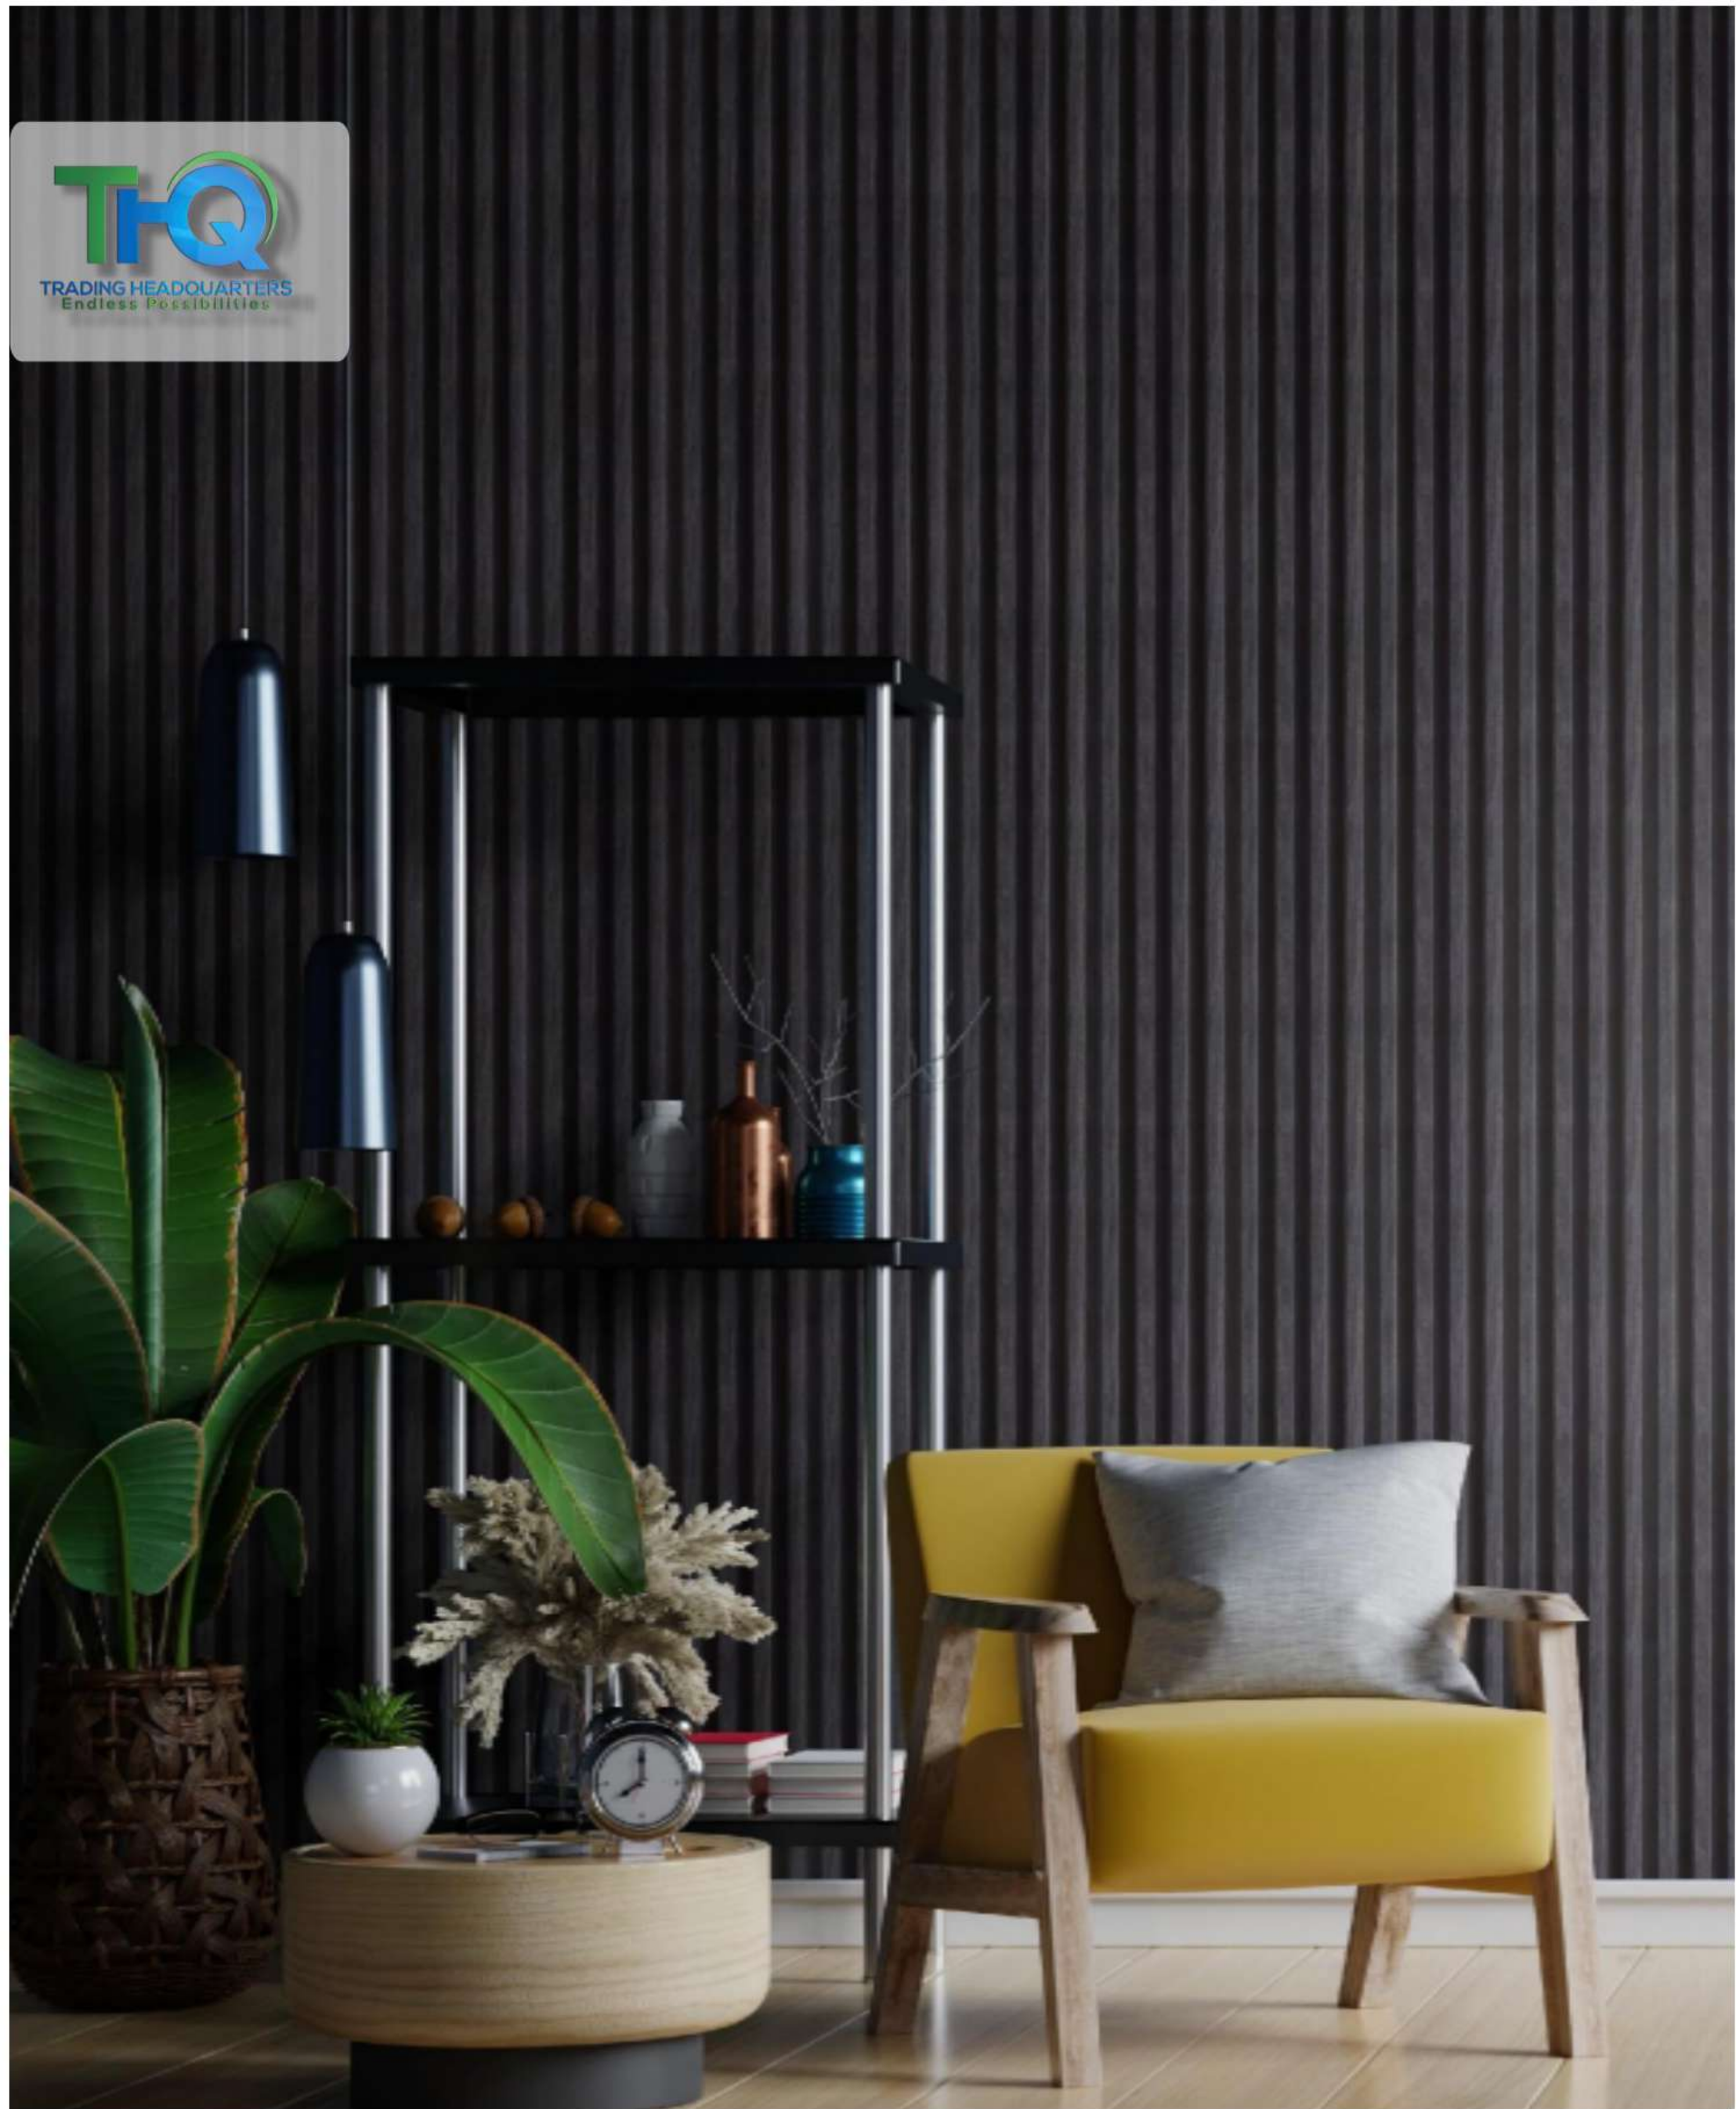


HP Dark Grey

Panel Size: 160x24x2900mm

Edge cover: 30x30x2900mm



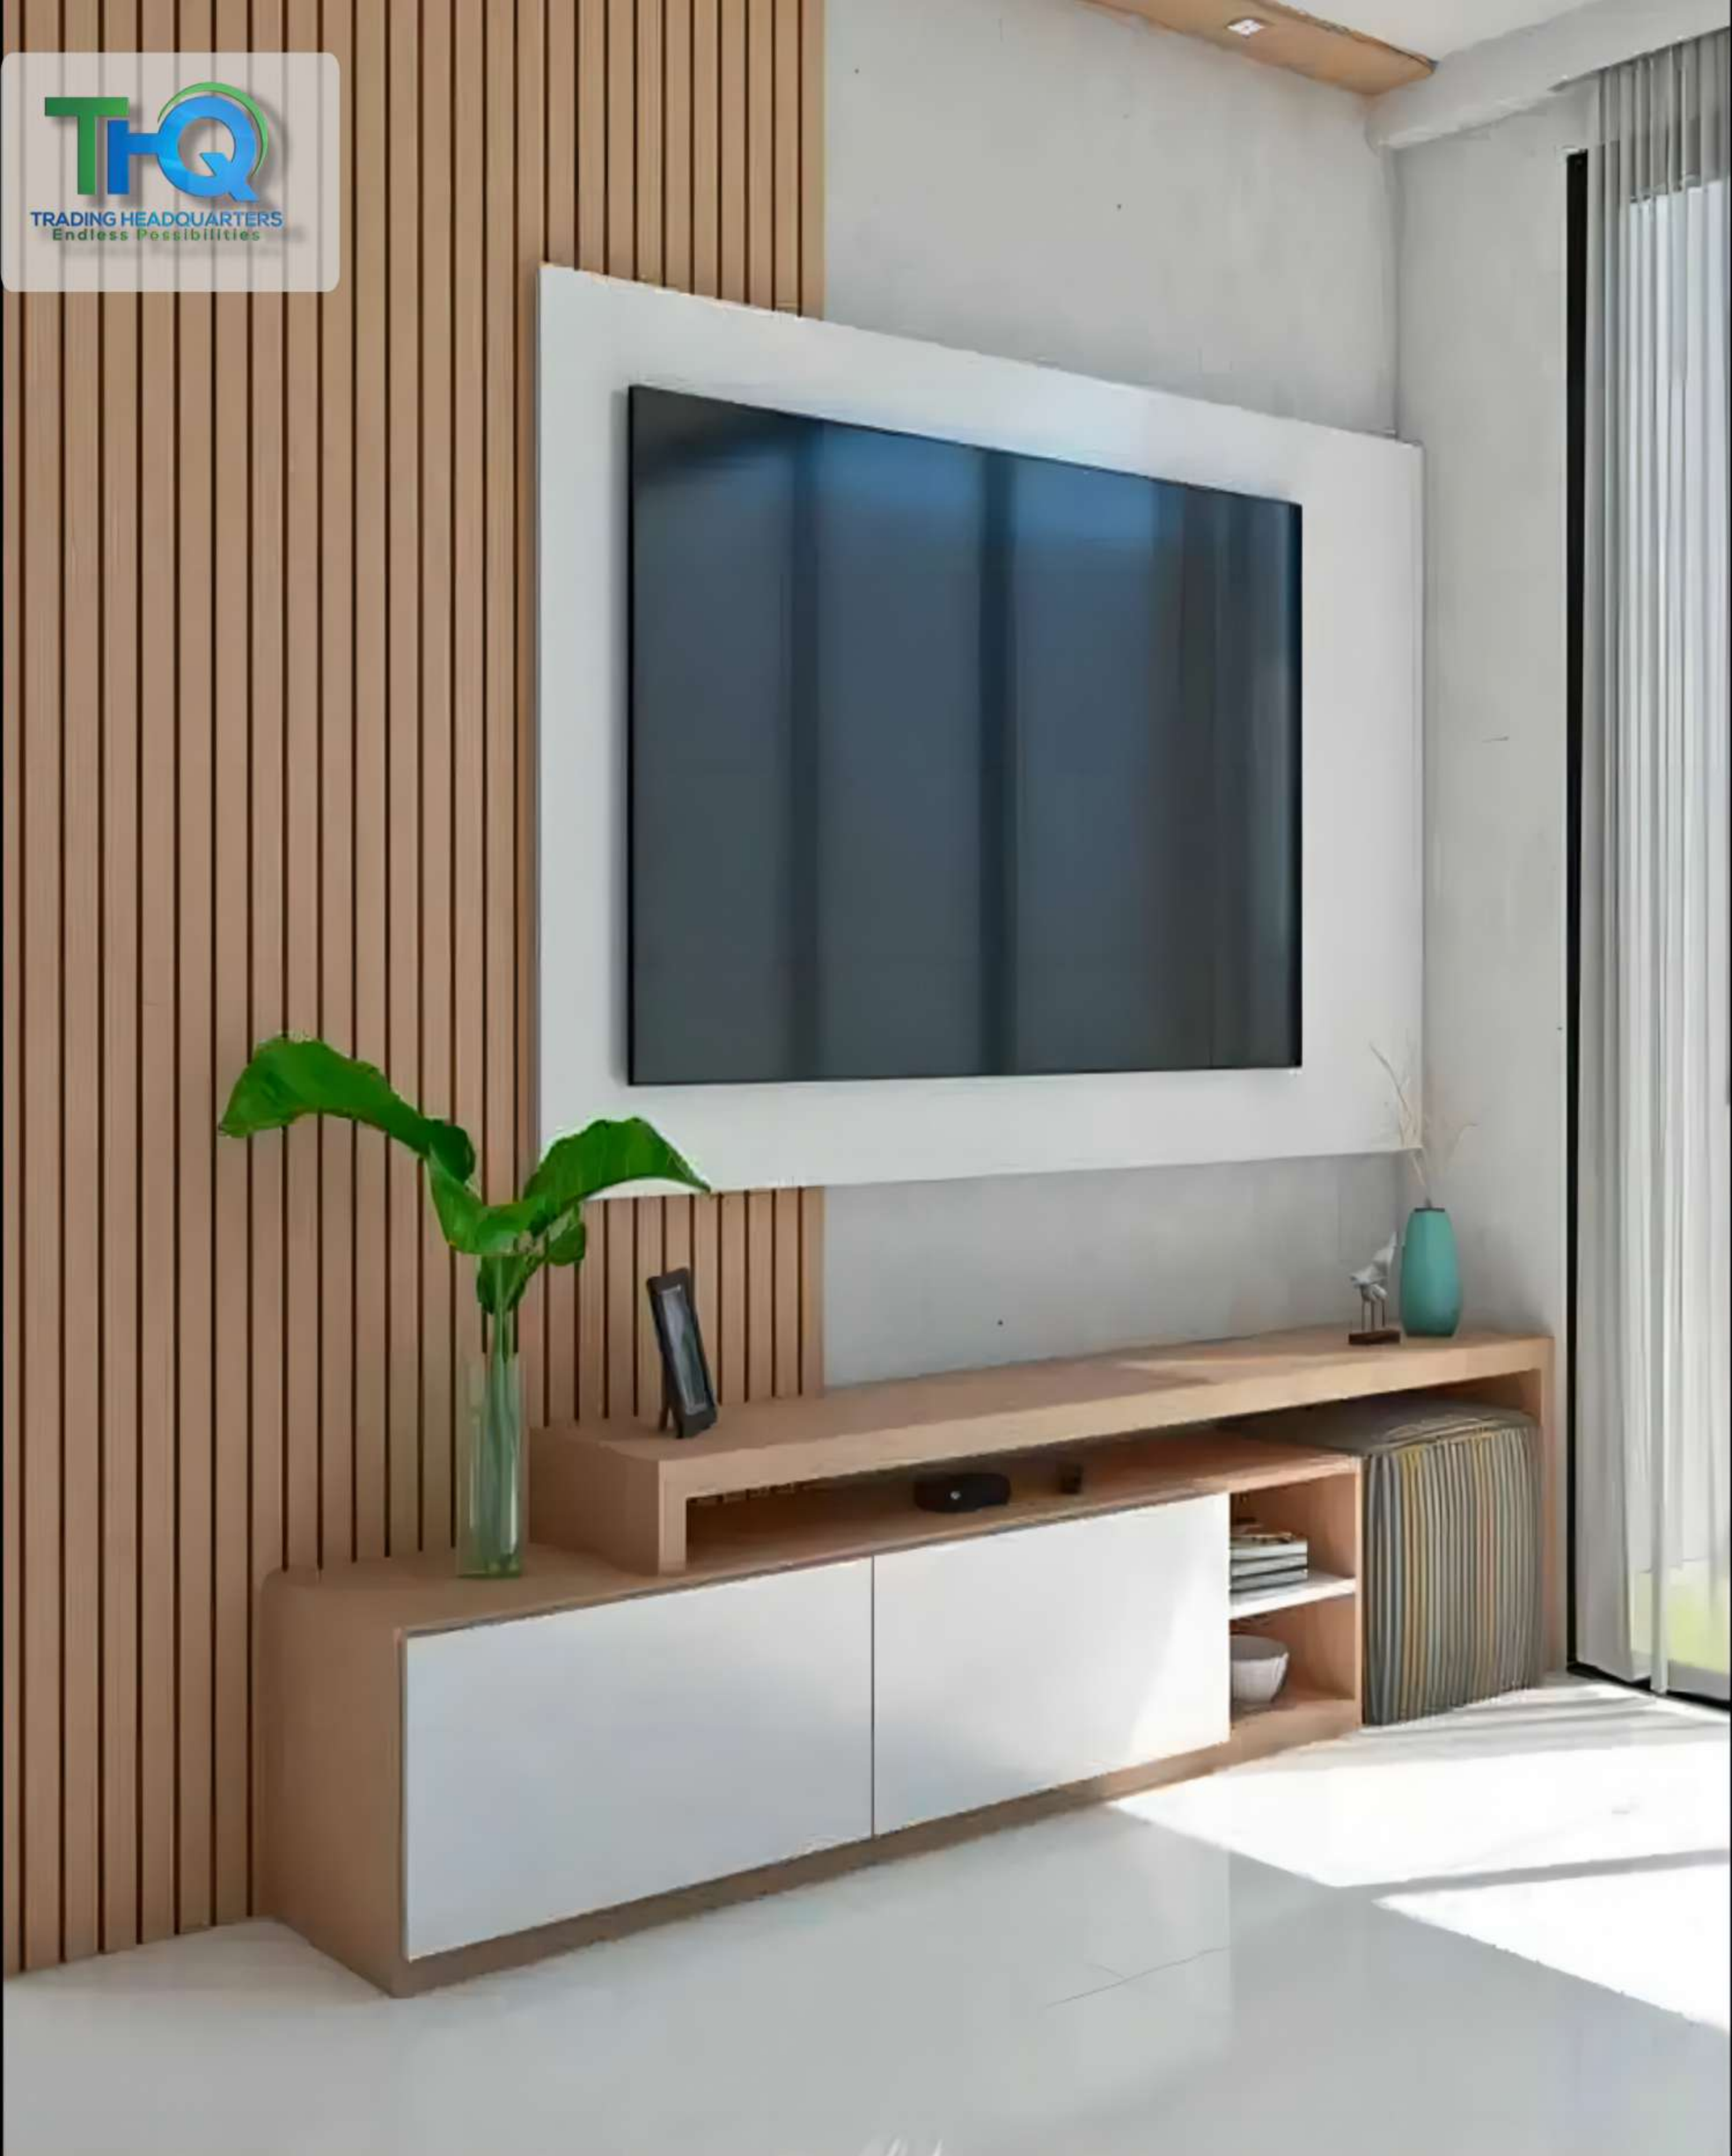

Big slat teak

Panel Size: 195x28x2900mm
Edge cover: 30x40x2900mm




195MM
28MM



FlatSlat-Cement



Panel Size: 200x10x2900mm
Edge cover: 30x30x2900mm

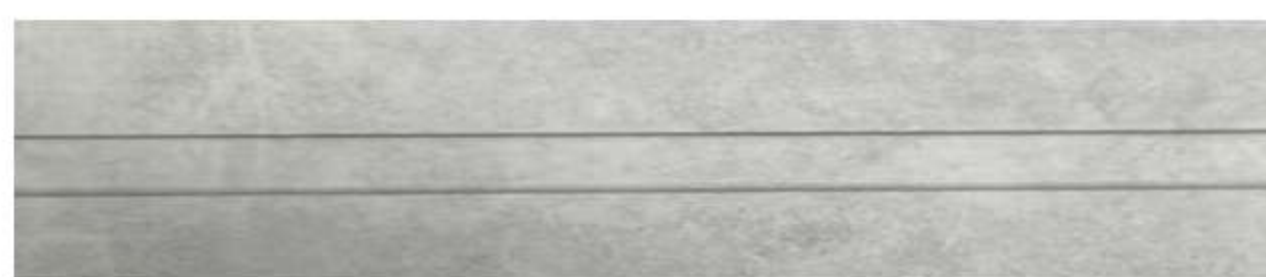



HP White

Panel Size: 160x24x2900mm
Edge cover: 30x30x2900mm

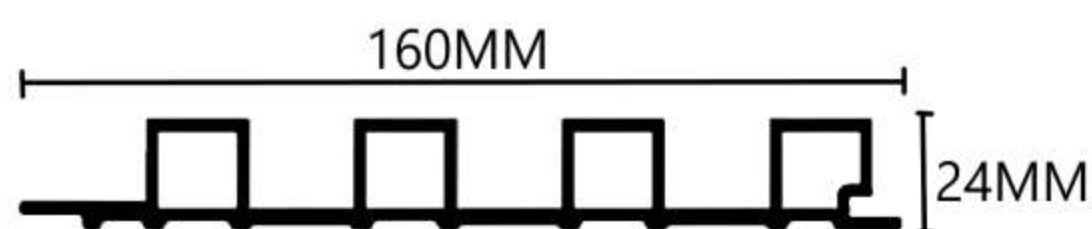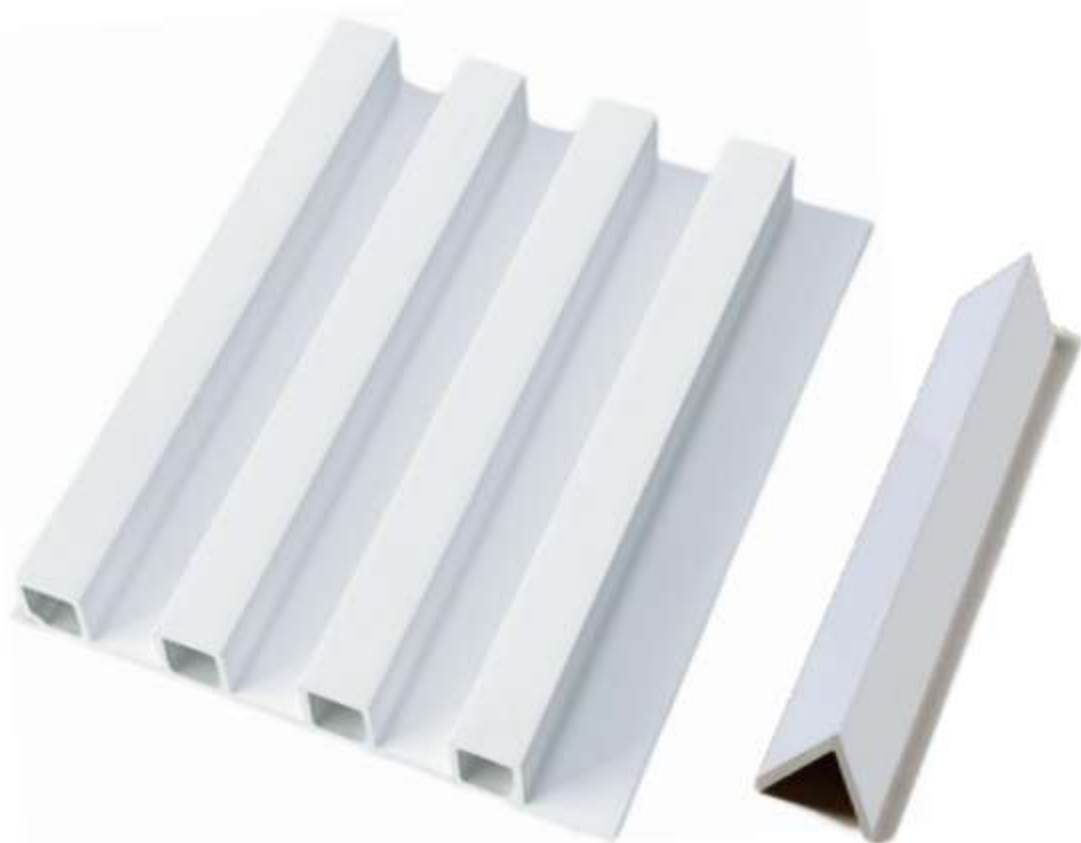



HP Teak



Panel Size: 160x24x2900mm
Edge cover: 30x30x2900mm





MAIN COMPONENTS

Without Joist

(Note: Before installation, please make sure the wall is smooth and solid.)



PVC wall panel



Edge cover



SS clip



Nail free glue



Cutting Saw



Nail gun
Nail: F Brad - Gauge 18



Level



Measure tape

With Joist

(Note: Pls use joist if the wall is not even and smooth)



Hammer



expansion screw



Electric drill



Timber Joist

Accessories:

We supply professional installation tools and accessories, pls contact us for more information.




Nail Free Glue




Caulking Gun



304SS Clip

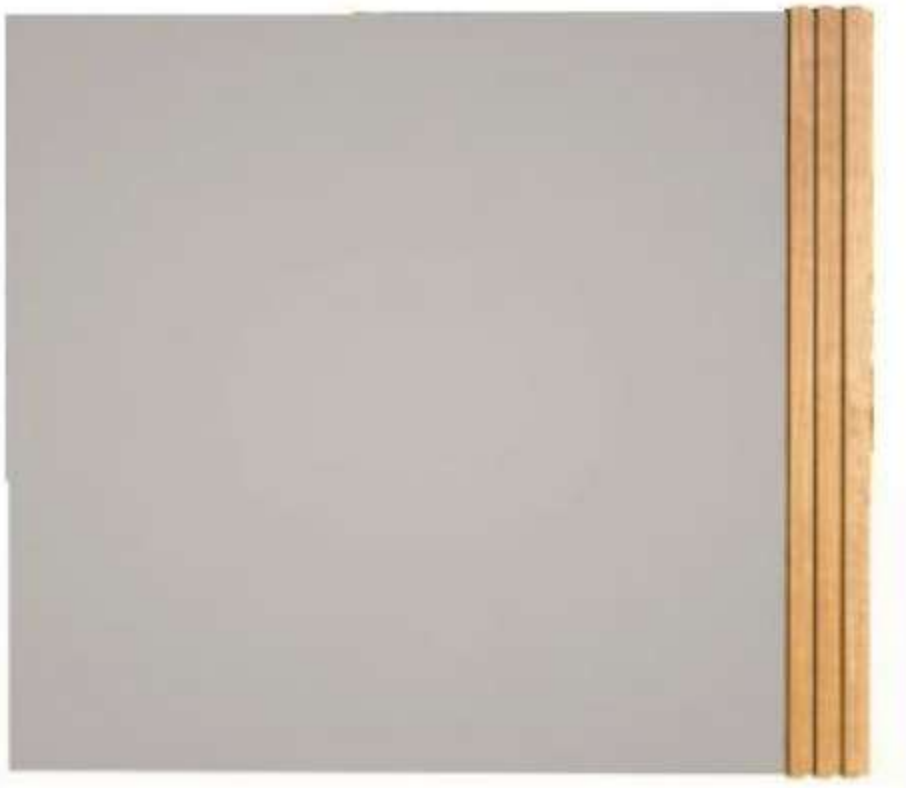

Step 1. Place the first wall panel on the wall with its tongue side flush with the wall edge.
Note: Wall panels can be installed by liquid nail + clip + screws, can make panels fixed more strongly.

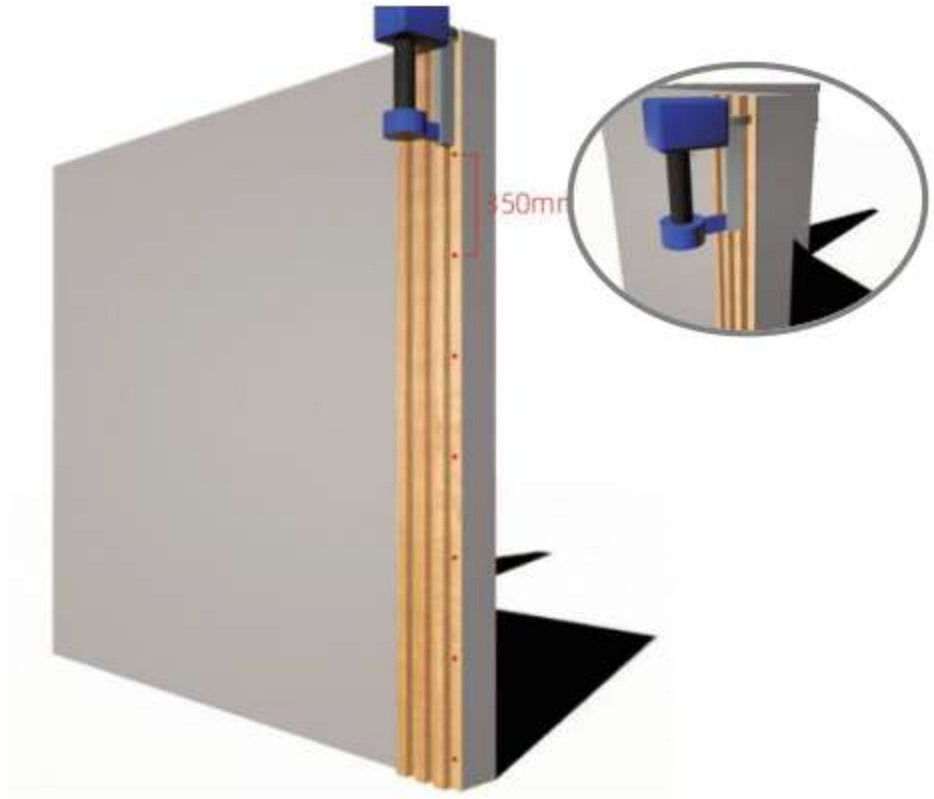

Step 2. Use an nail gun to fix the panel to the wall with nails seated at the tongue at an interval of 350 mm.
Note: Nail span can be 500mm if liquid nail used on the back of the wall panel.




Step 3. On the other side, attach clips to the panel at an interval of 350 mm, then fix them to the wall with an air nailer.
Note: Clip span can be 500mm if liquid nail used on the back of the wall panel




Step 4. Snap the second panel into place, the tongue of the second panel should fit into the groove of the first. Finish the rest in the same manner.



Step 5. Around the corner, cut the panel to a suitable width.

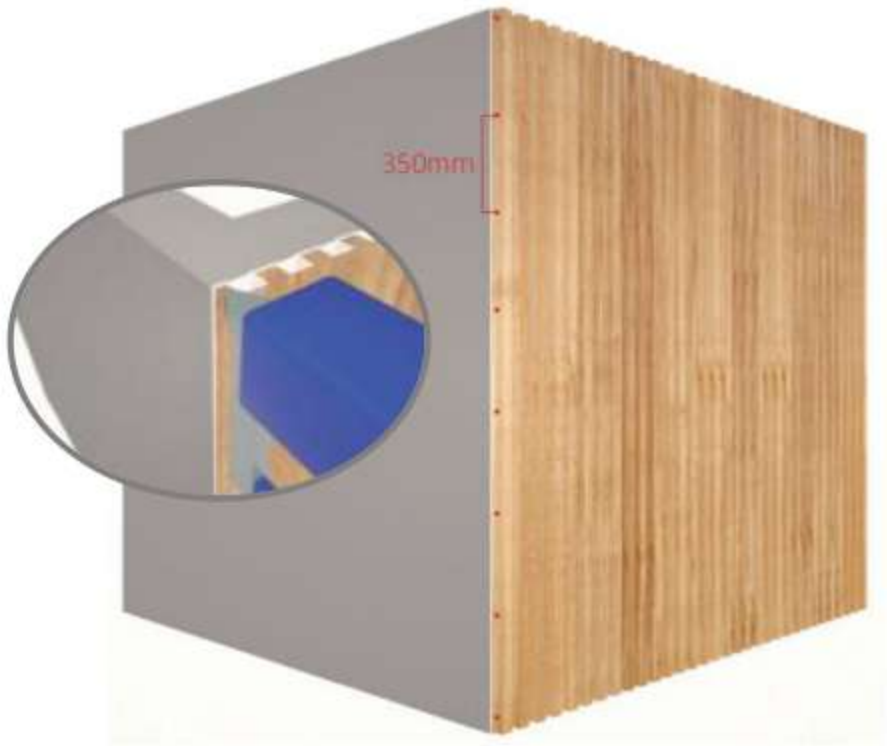

Step 6. Fix it to the wall with an air nailer

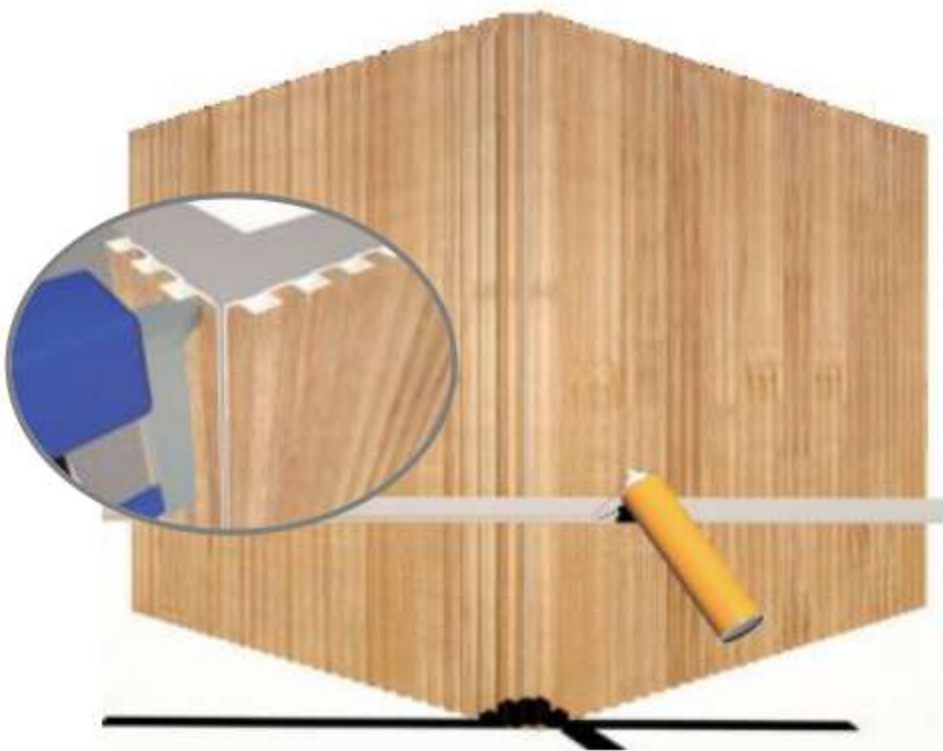

Step 7. Complete the rest in the same manner and apply glue on the L-corner and attach it around the corner



Step 8. Installation finished.

Welcome to contact us or visit our showroom to get more information!

Trading Headquarters

Address:

866 Cooper Street Somerton VIC 3062

6 Production Way, Pakenham VIC 3810

1/15 Logic Court, Truganina, VIC 3029

1/9 Industrial Circuit Cranbourne West VIC 3977

Ph: 1800 084 700

Email: sales@thq.com.au

Web: www.thq.com.au

Follow us



@ Trading Headquarter



@ Trading Headquarters