



Ergo-Series E7W Barrel Sauna Half Glass Window 71D" x 81H"




Note: Please read manual before construction

Front & Back Walls

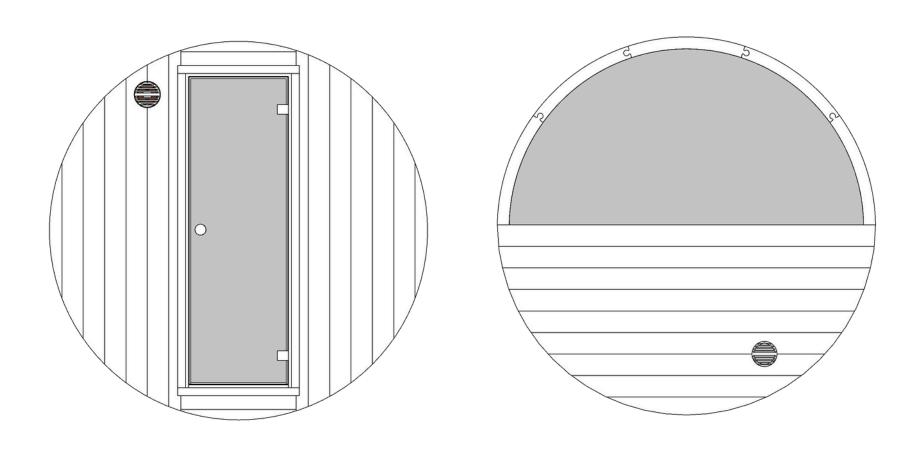


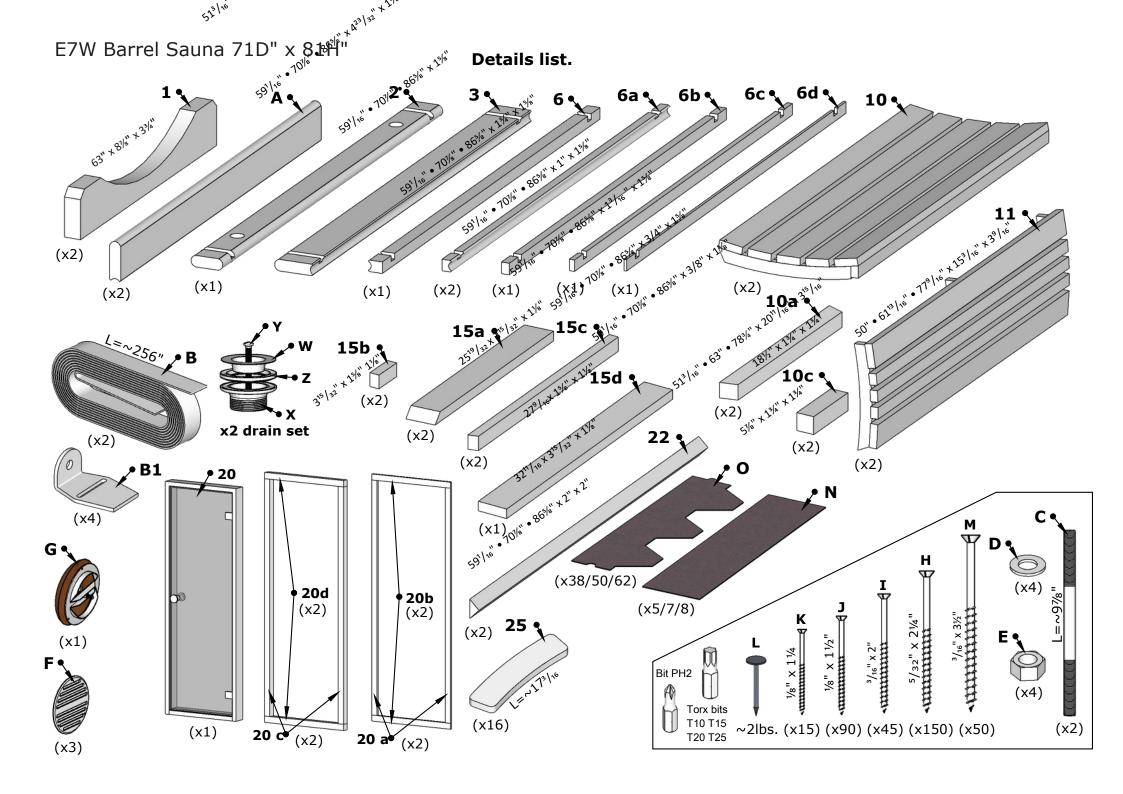


Tools needed

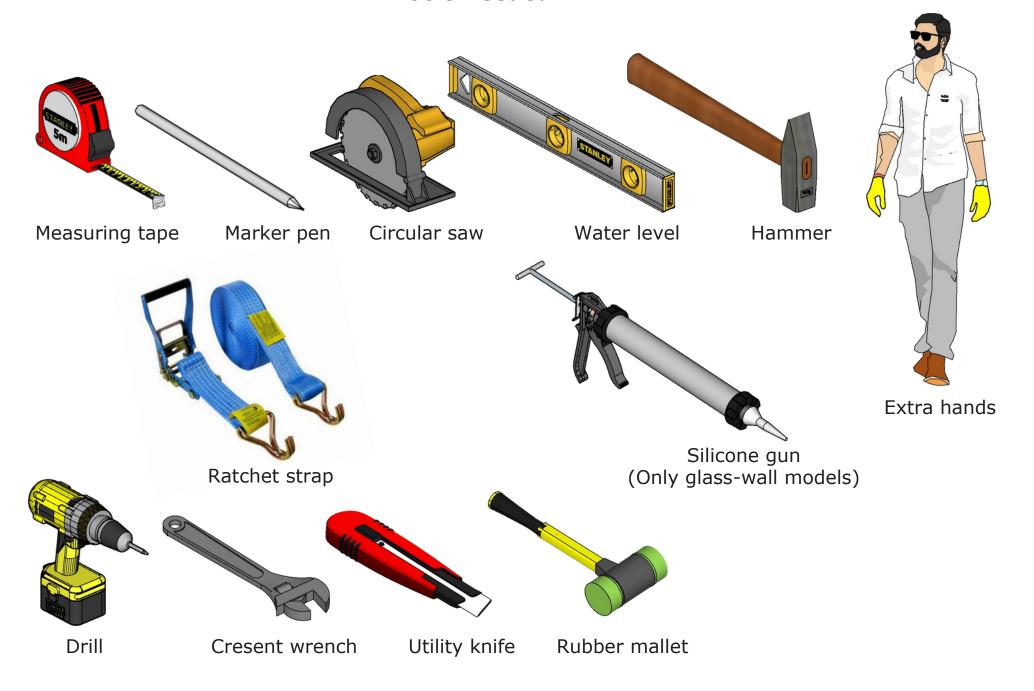


Wooden front wall installation

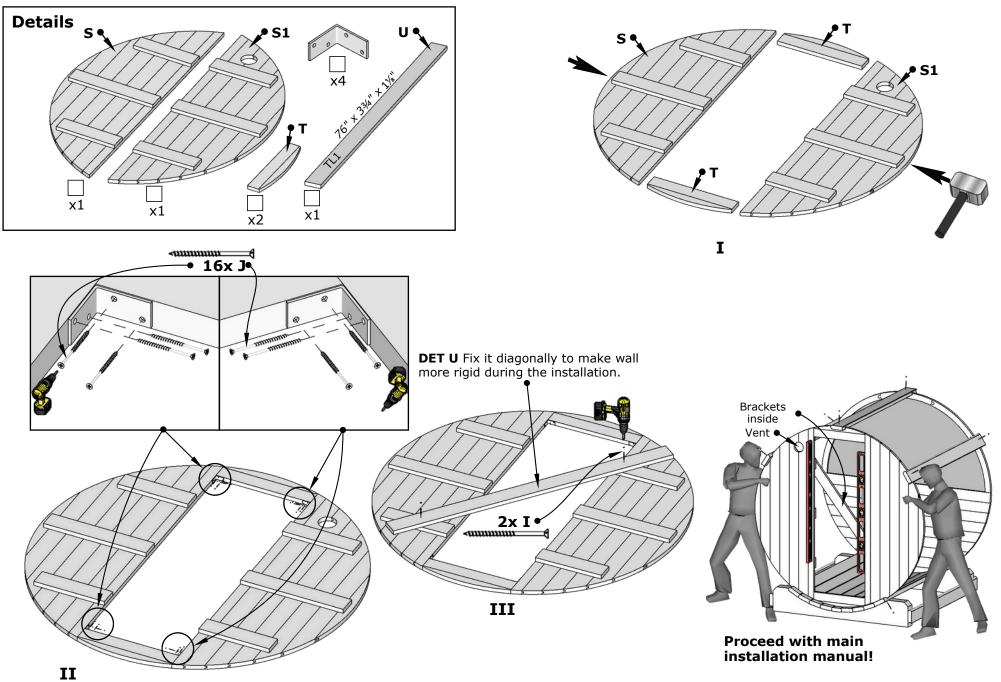



Half-moon wall installation

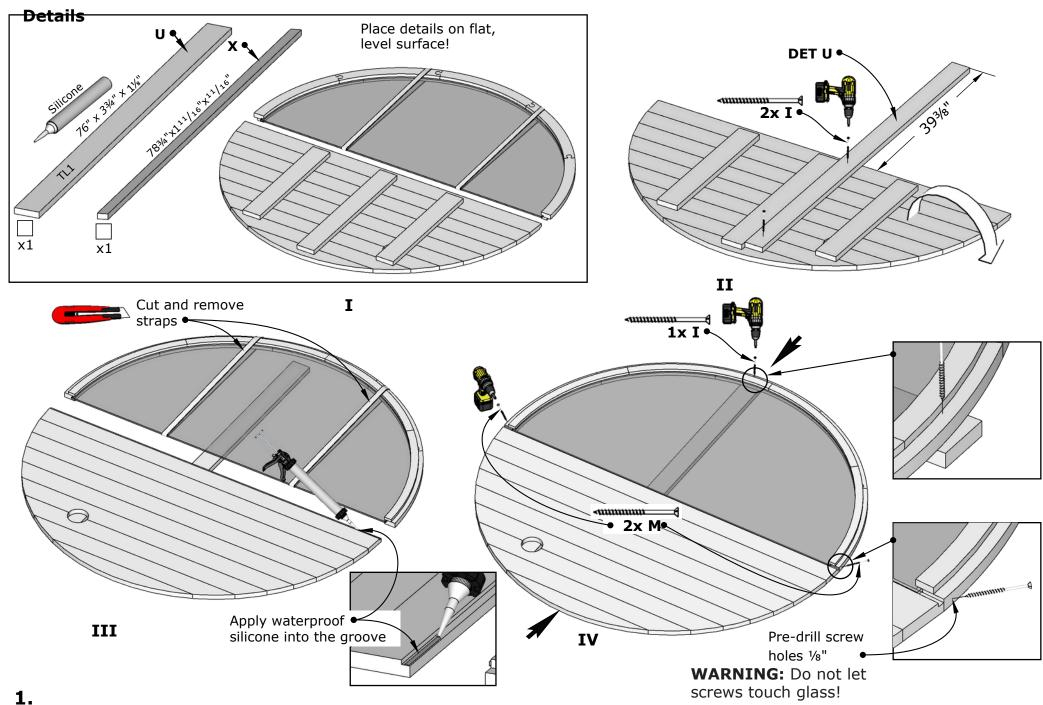



Half-moon wall installation

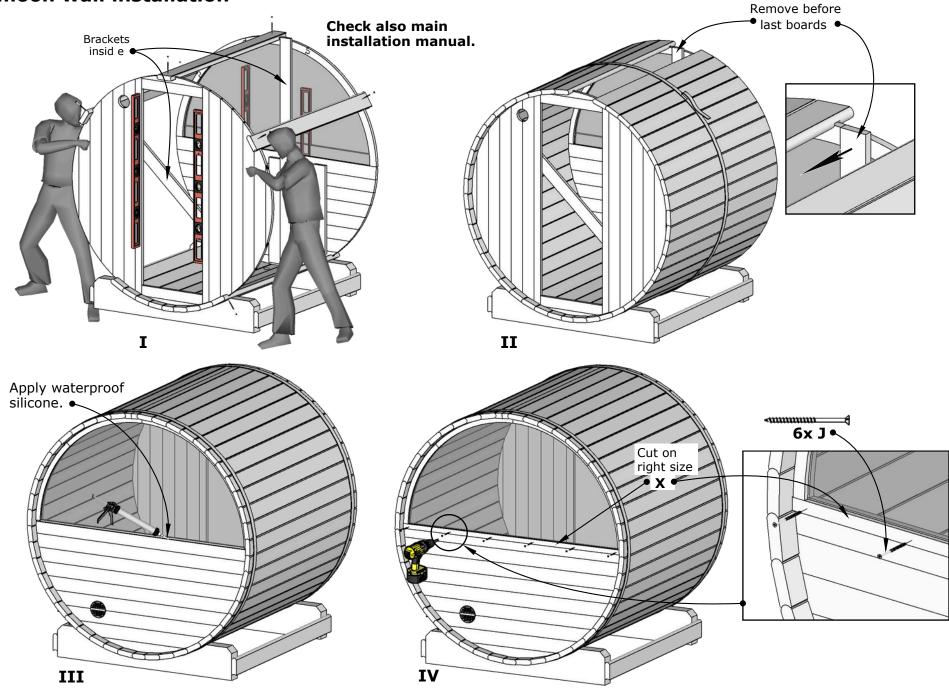


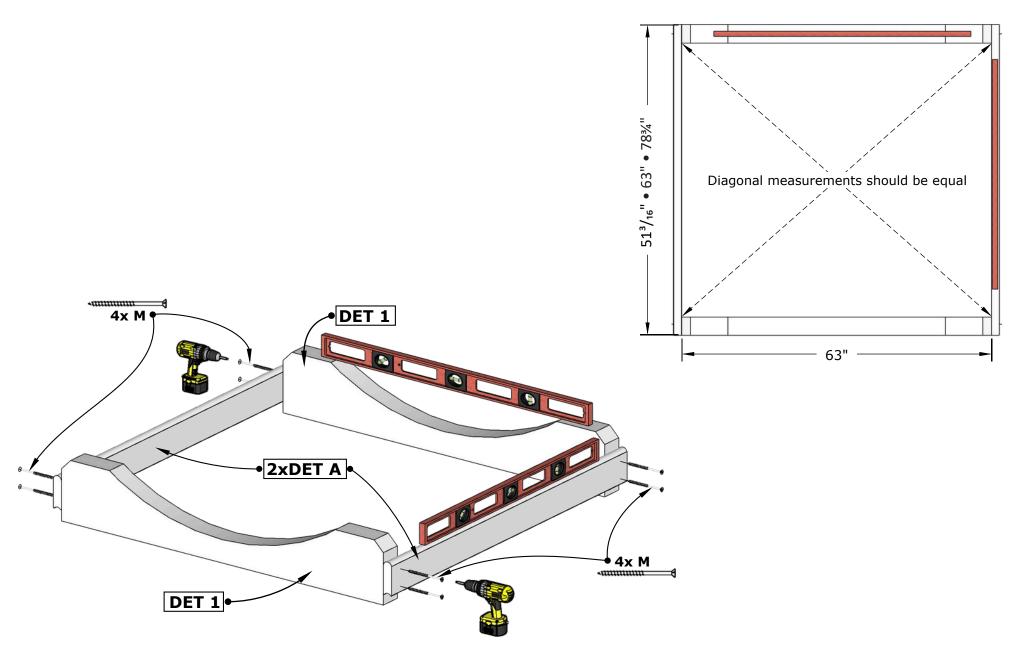


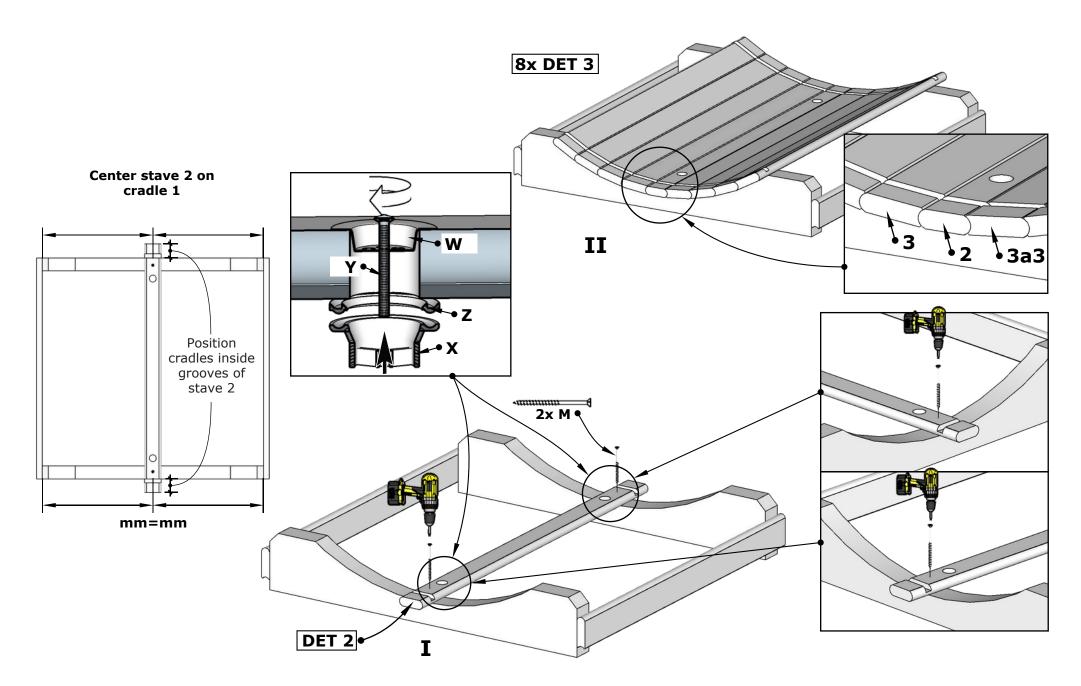


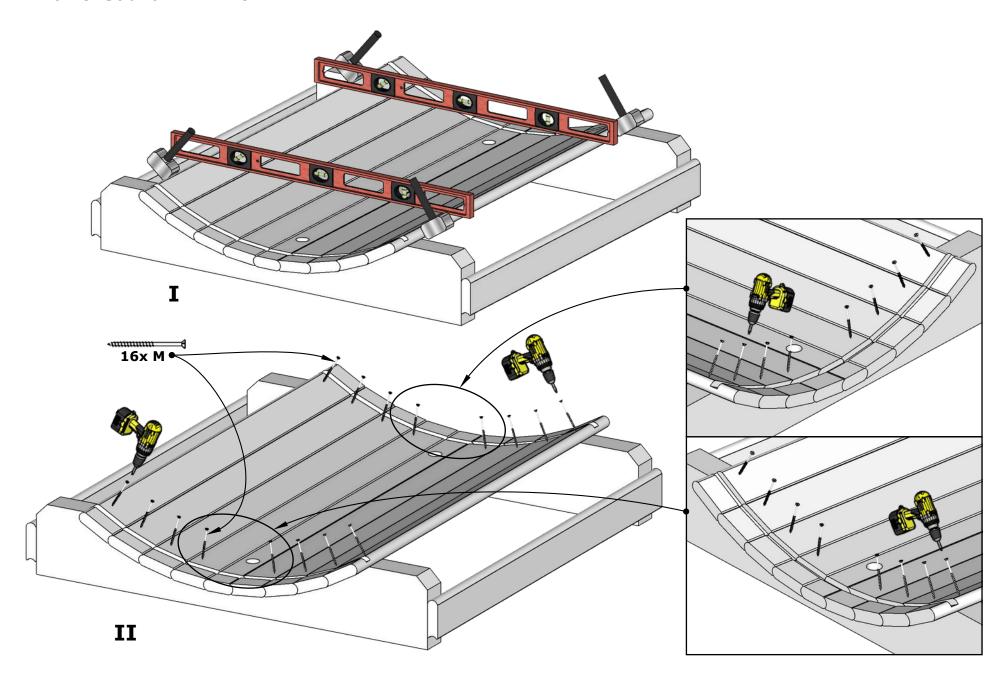

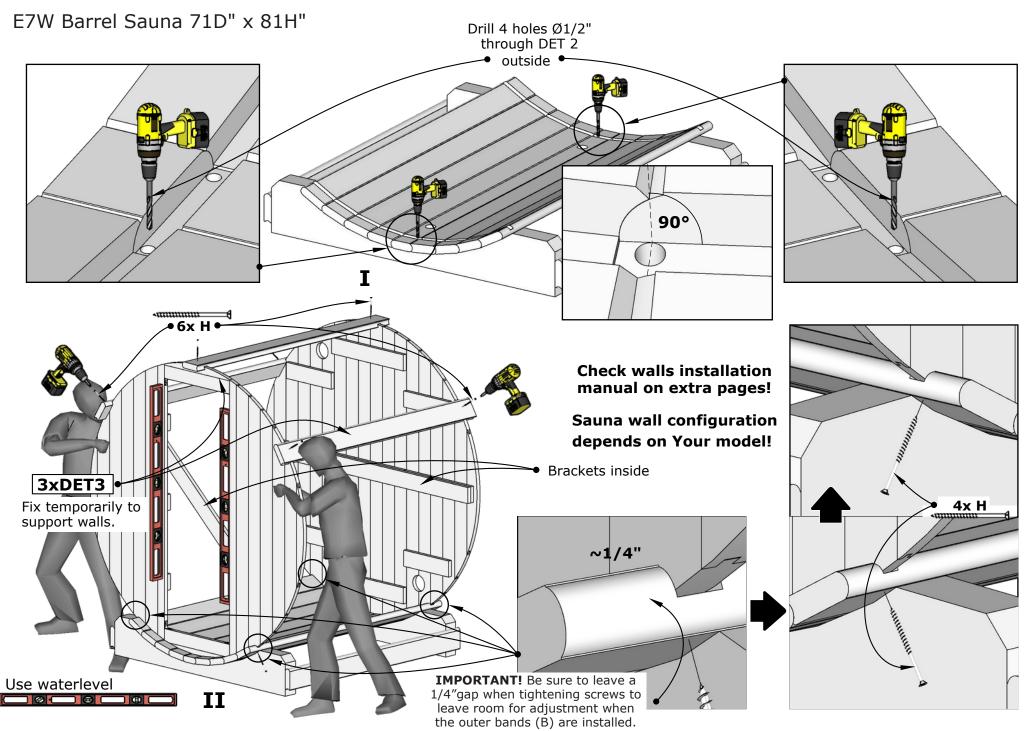


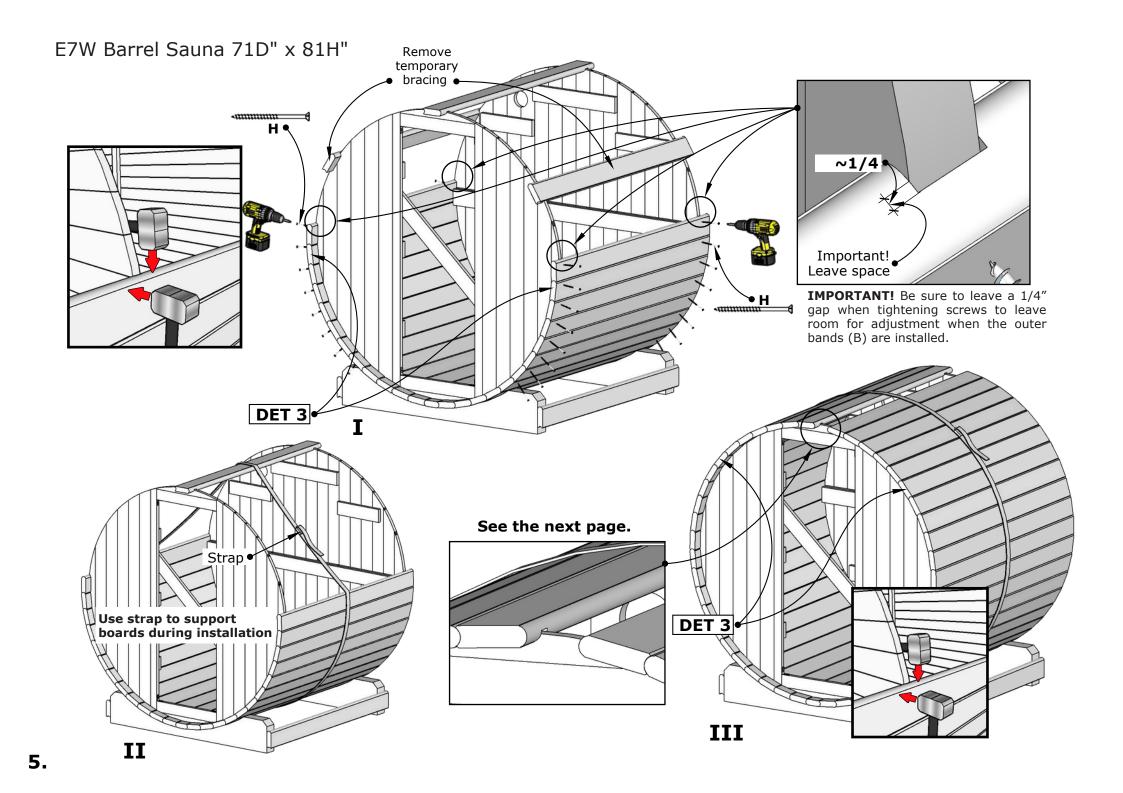




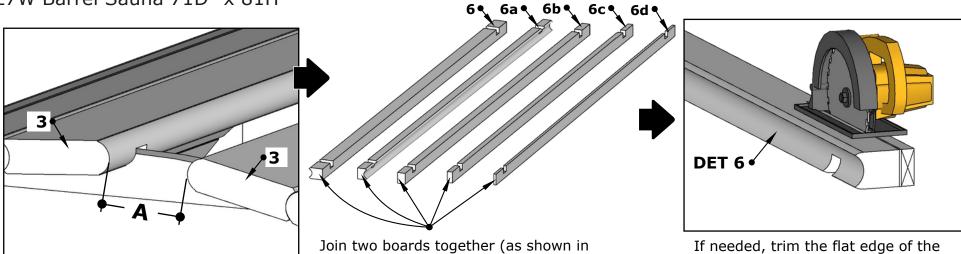

Join two boards together (as shown in diagram II) that will bridge the width of the "A" gap. It is recommended that the combined boards are approximately 1/4" wider than the gap.

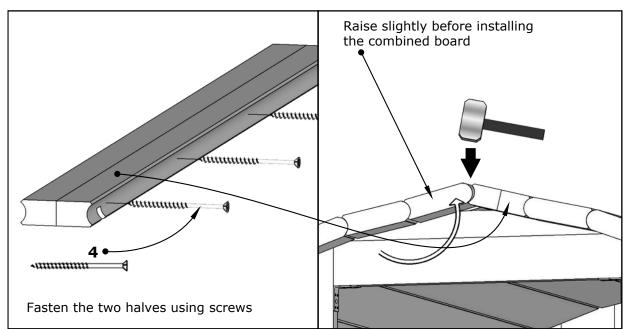

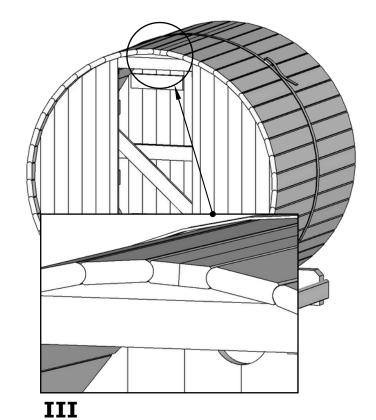

board to create the desired width.

II

