





Ergo-Series E7W Barrel Sauna  
Half Glass Window 71D" x 81H"



Note: Please read manual before construction


Rev 4/2023

# Front & Back Walls

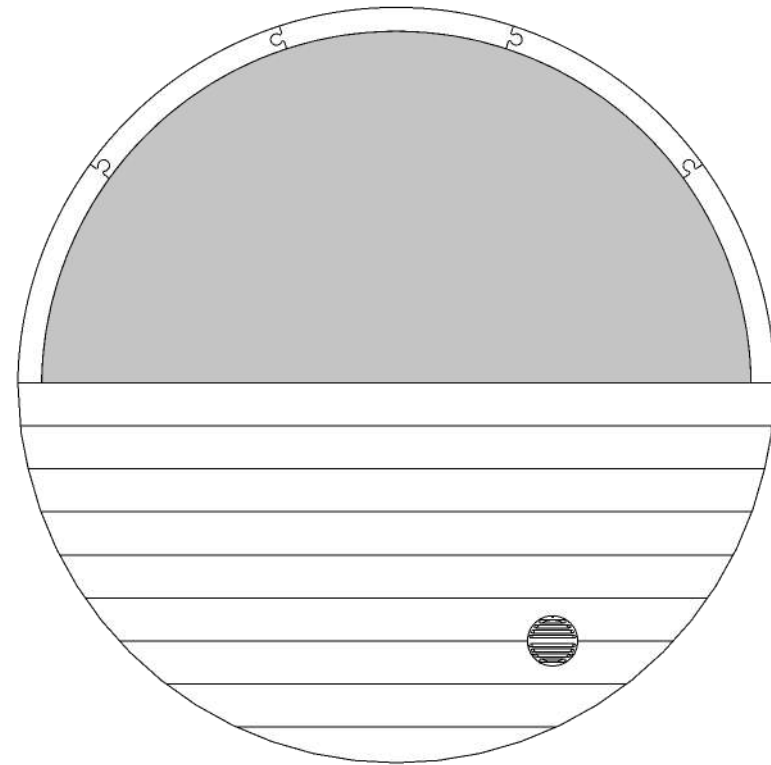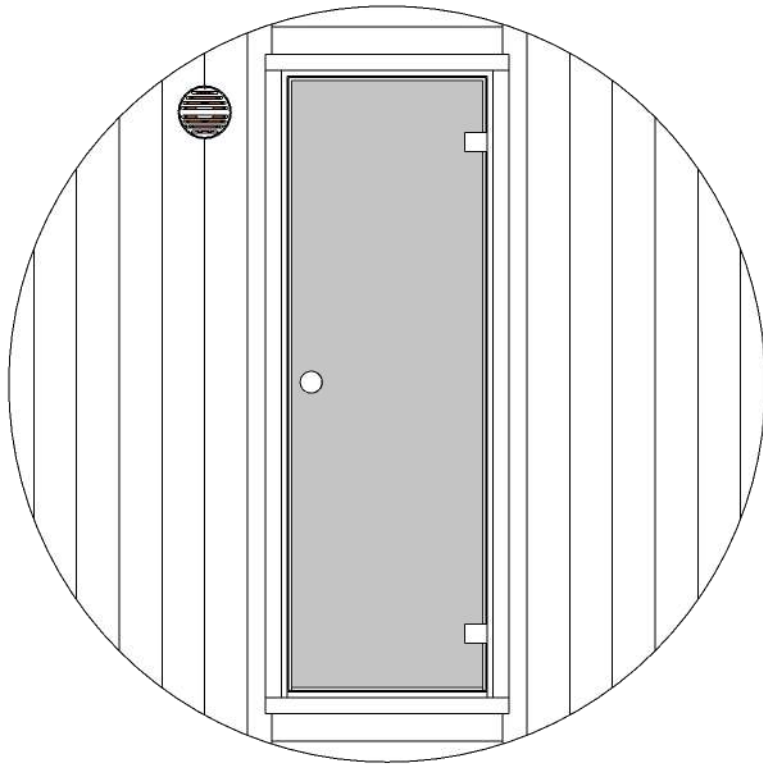


E7W Barrel Sauna 71D" x 81H"


Details list.

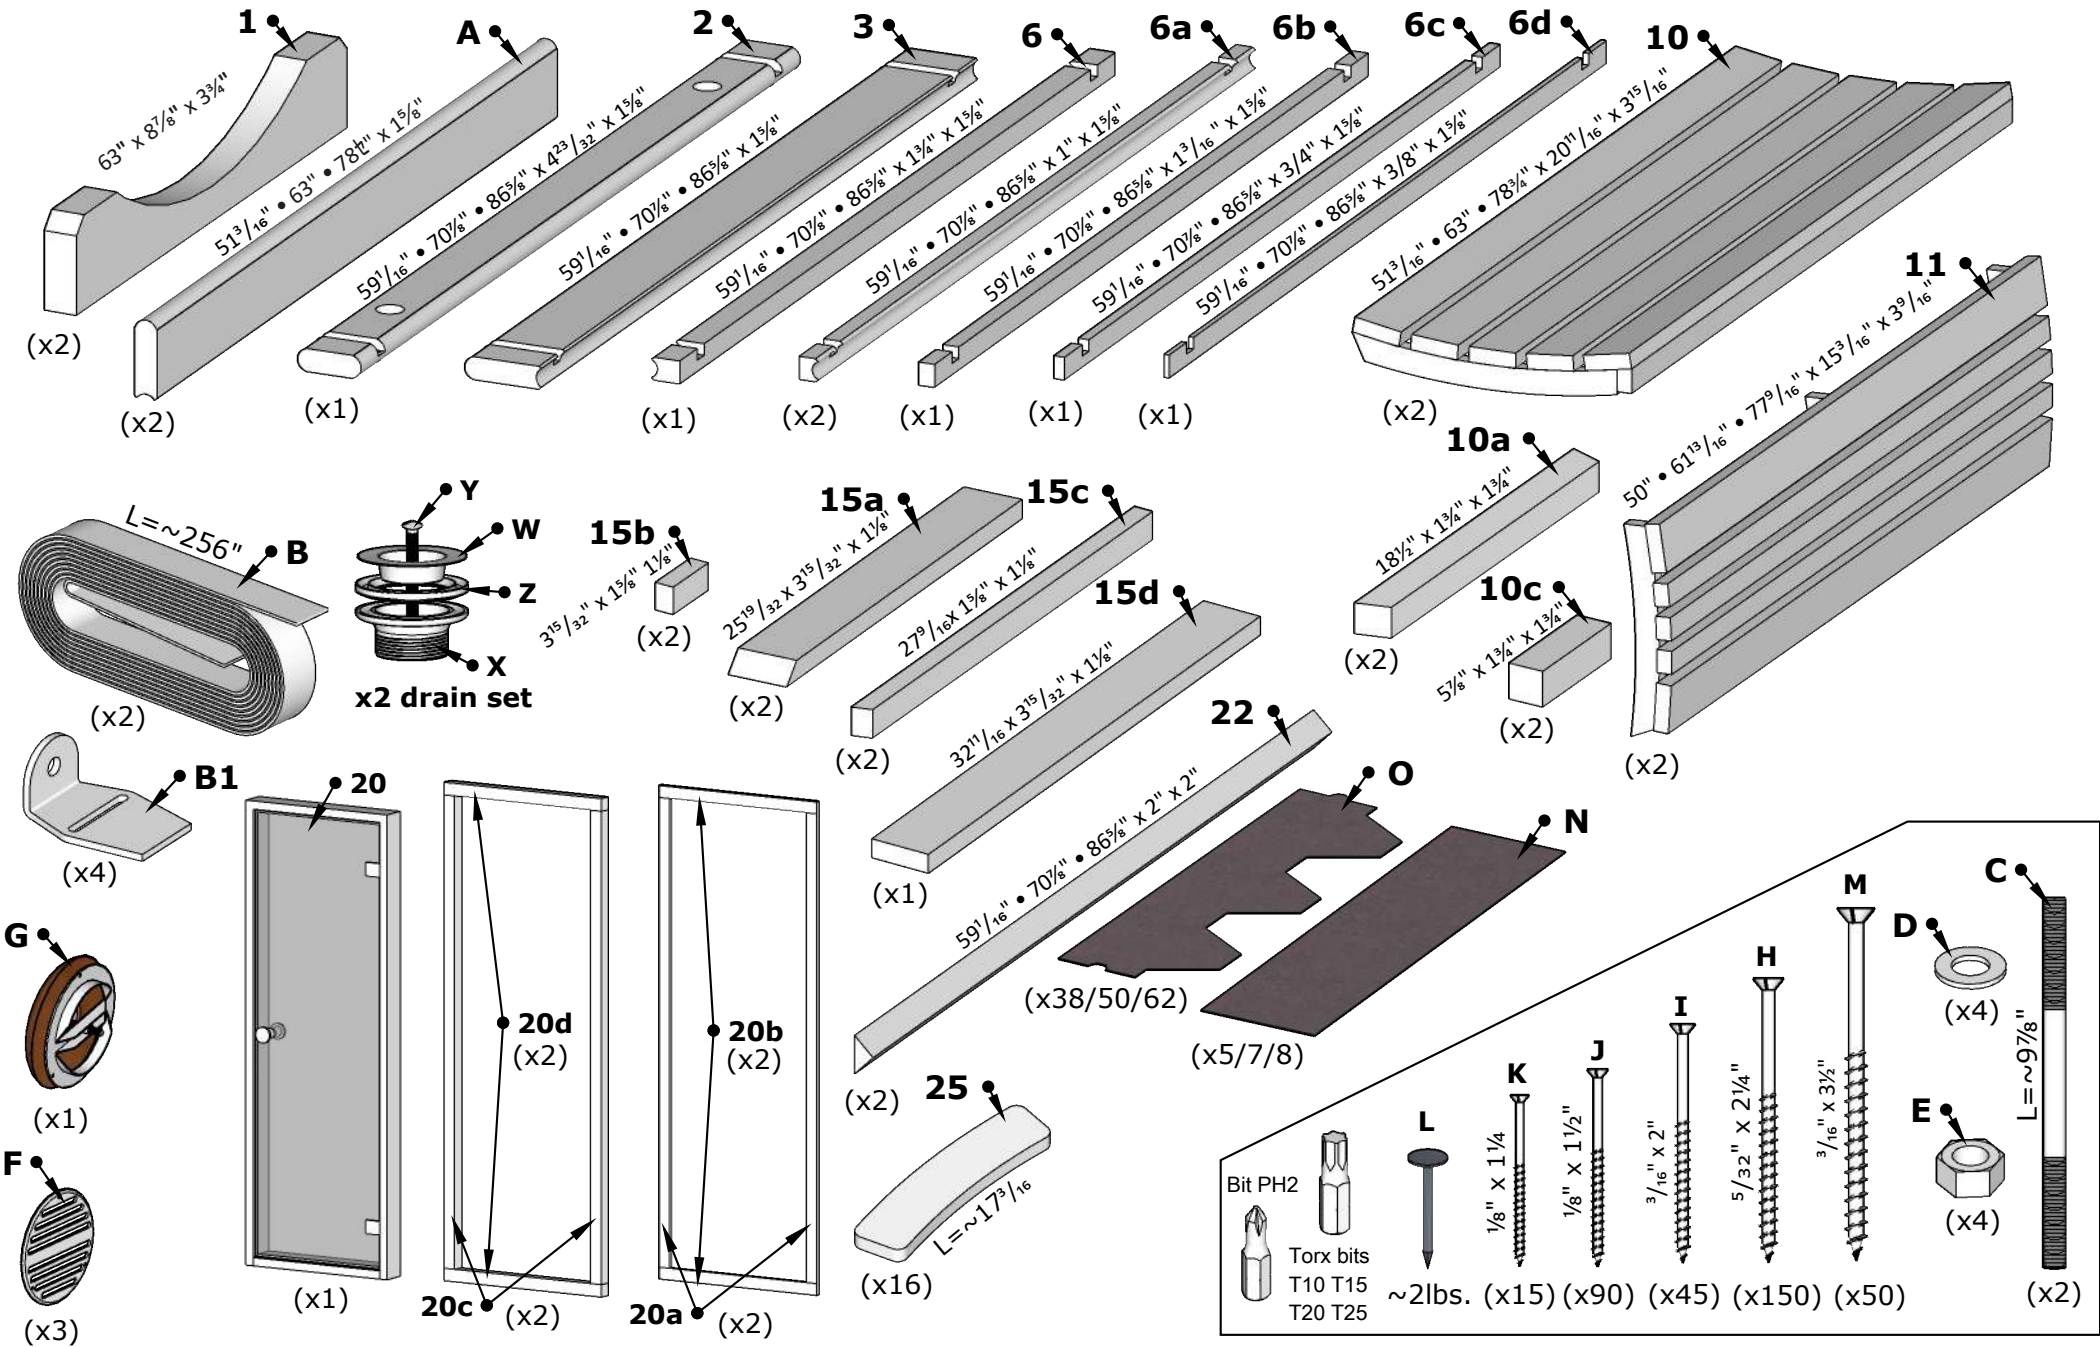


## Tools needed

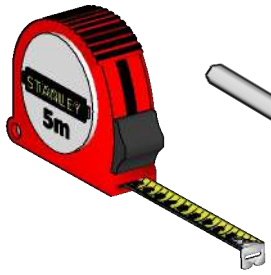


Measuring tape

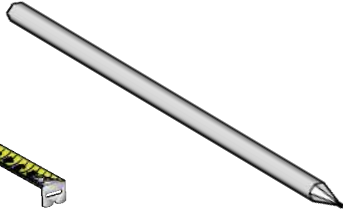


Marker pen

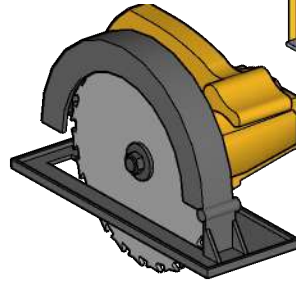

Circular saw

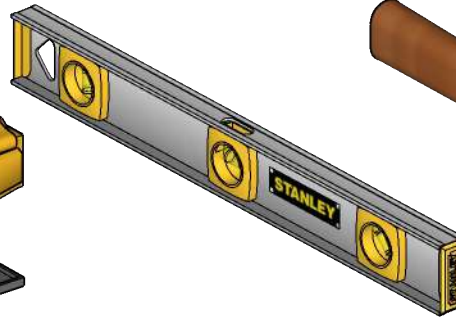

Water level

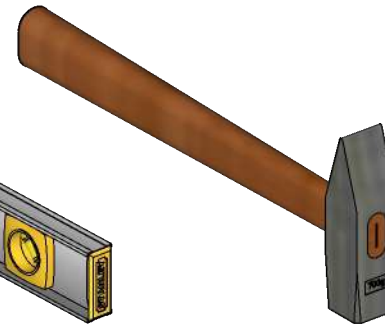


Hammer




Extra hands




Ratchet strap

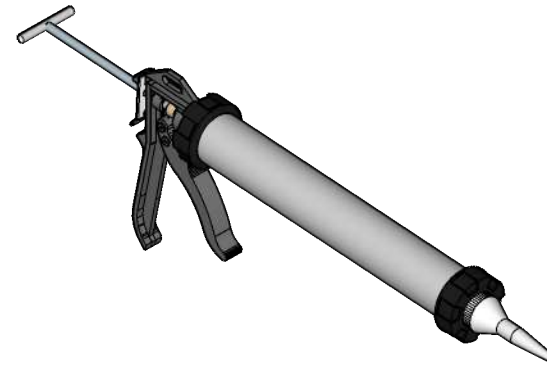

Silicone gun  
(Only glass-wall models)

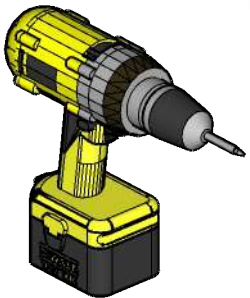


Drill

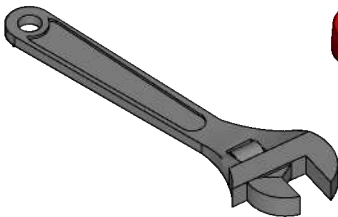

Crescent wrench



Utility knife


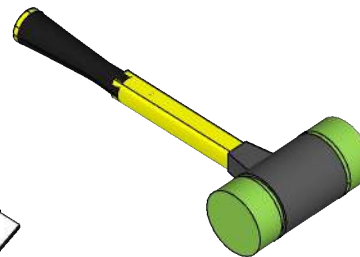


Rubber mallet





# Wooden front wall installation

## Details

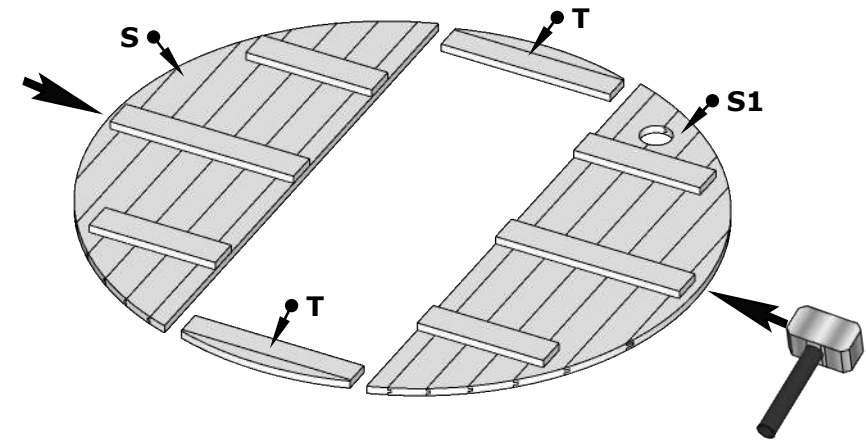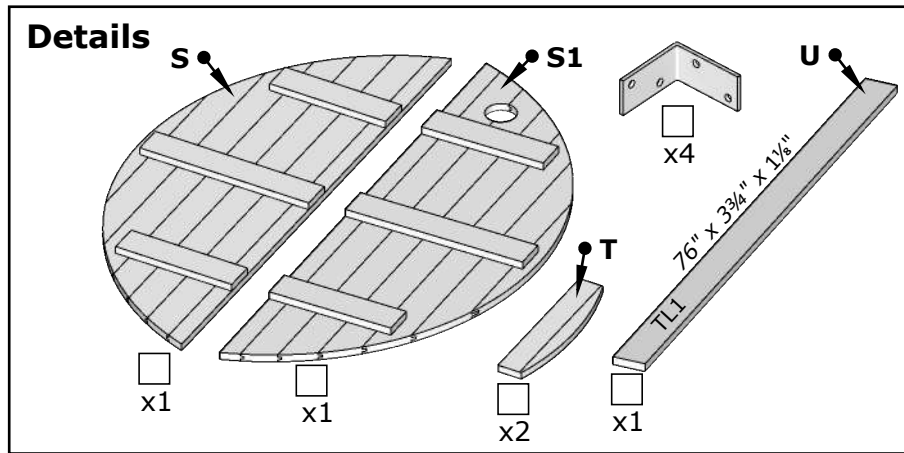


I

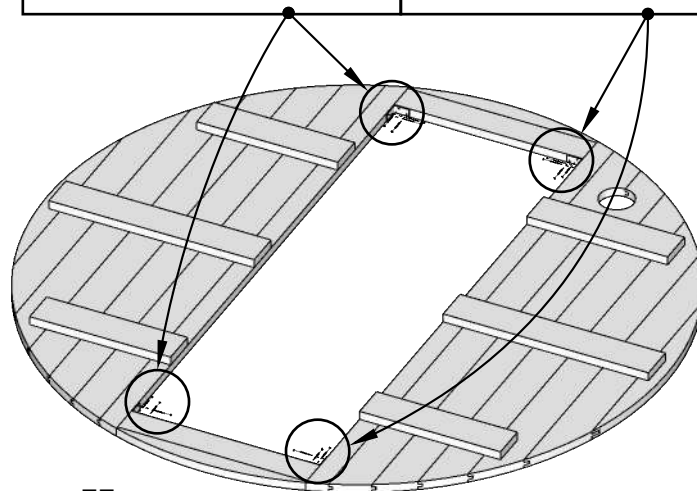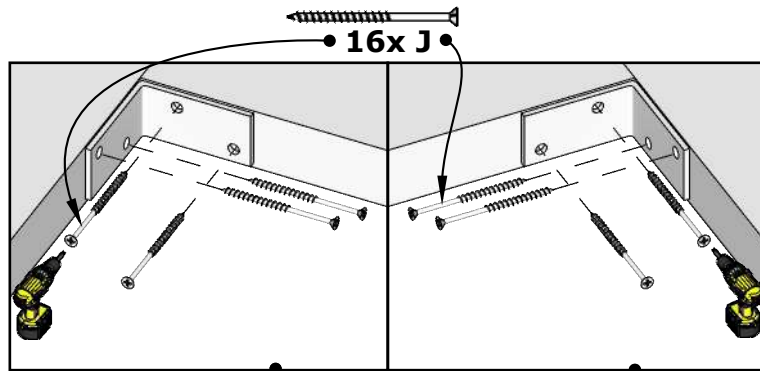


II

**DET U** Fix it diagonally to make wall more rigid during the installation.





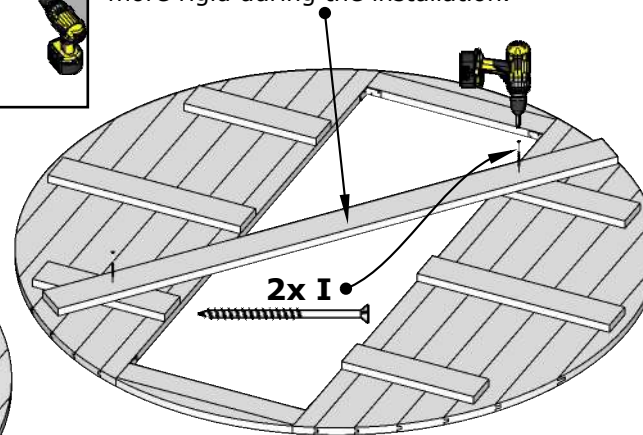


III

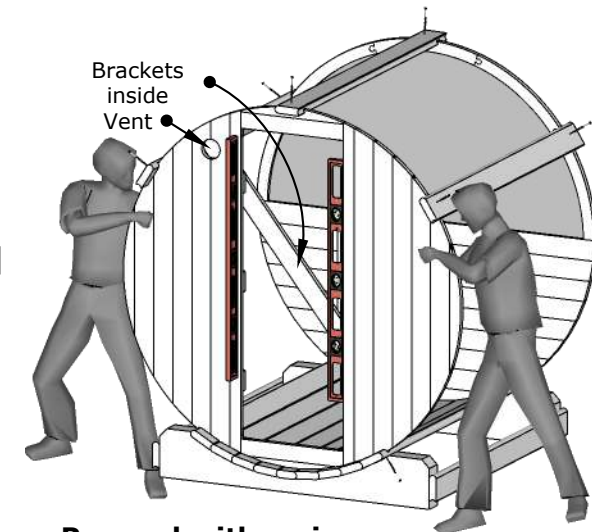

**Proceed with main installation manual!**


# Half-moon wall installation

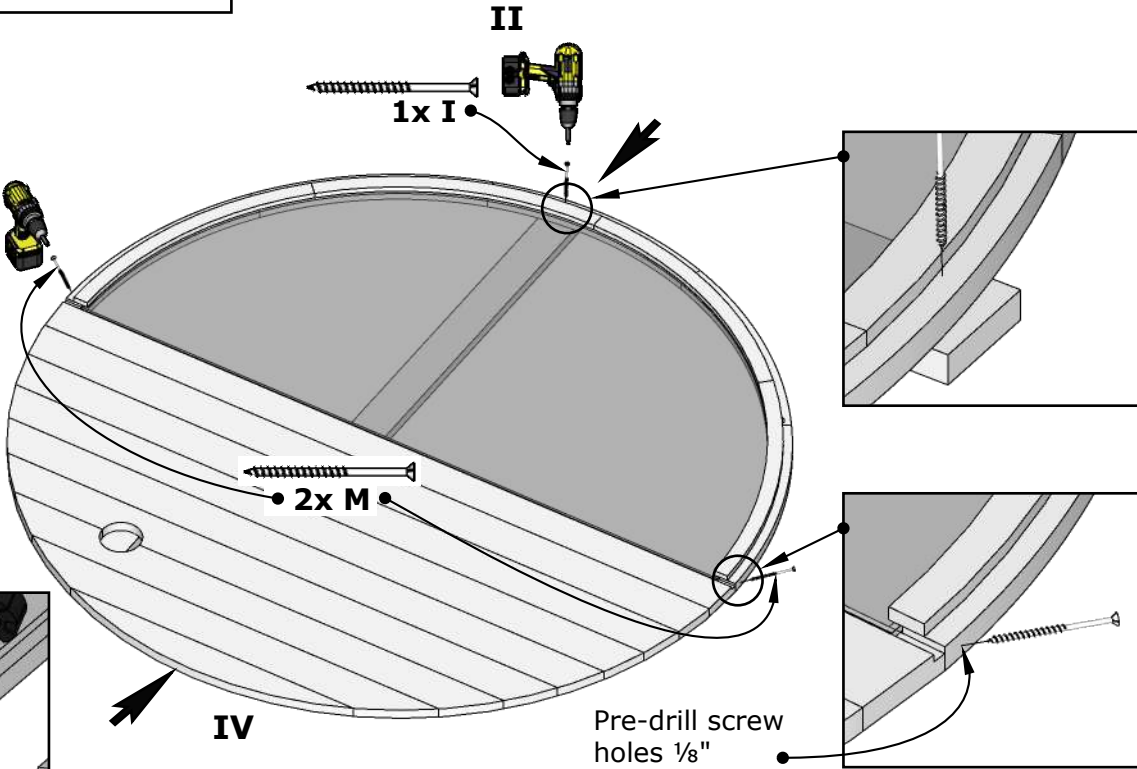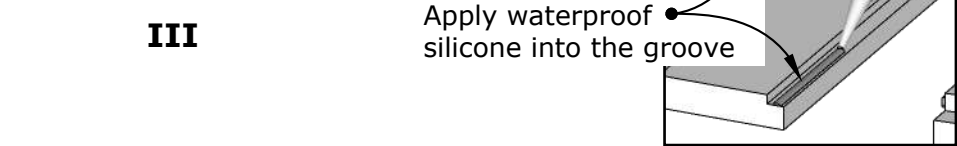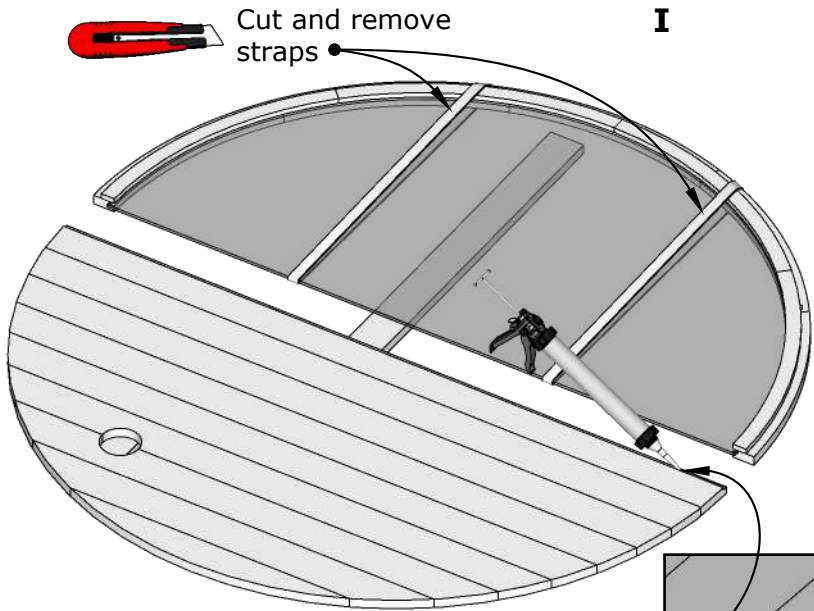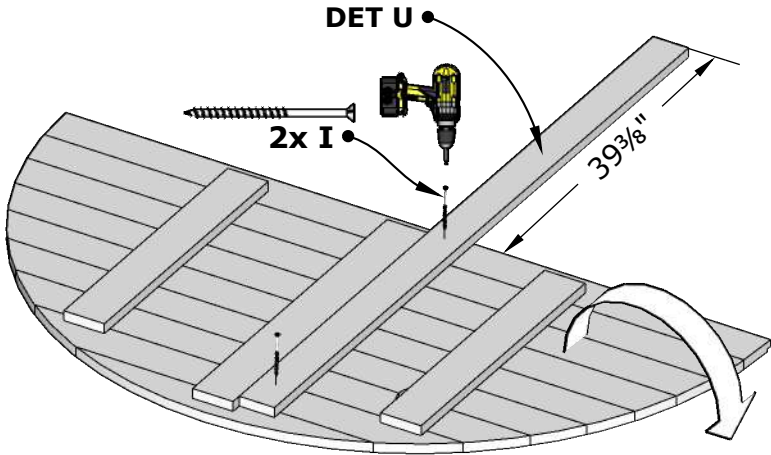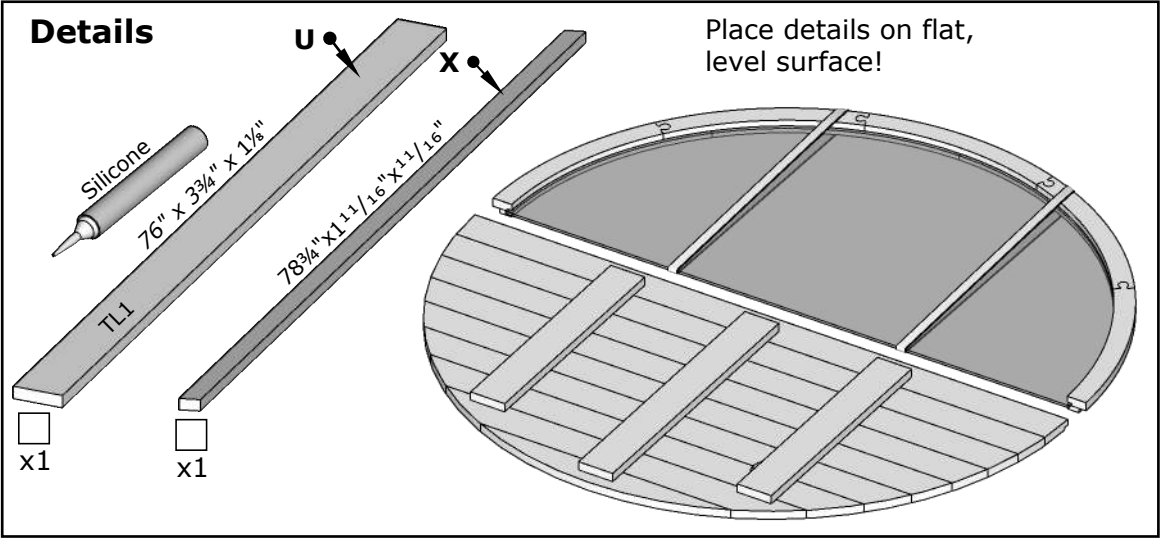


**WARNING:** Do not let screws touch glass!



# Half-moon wall installation

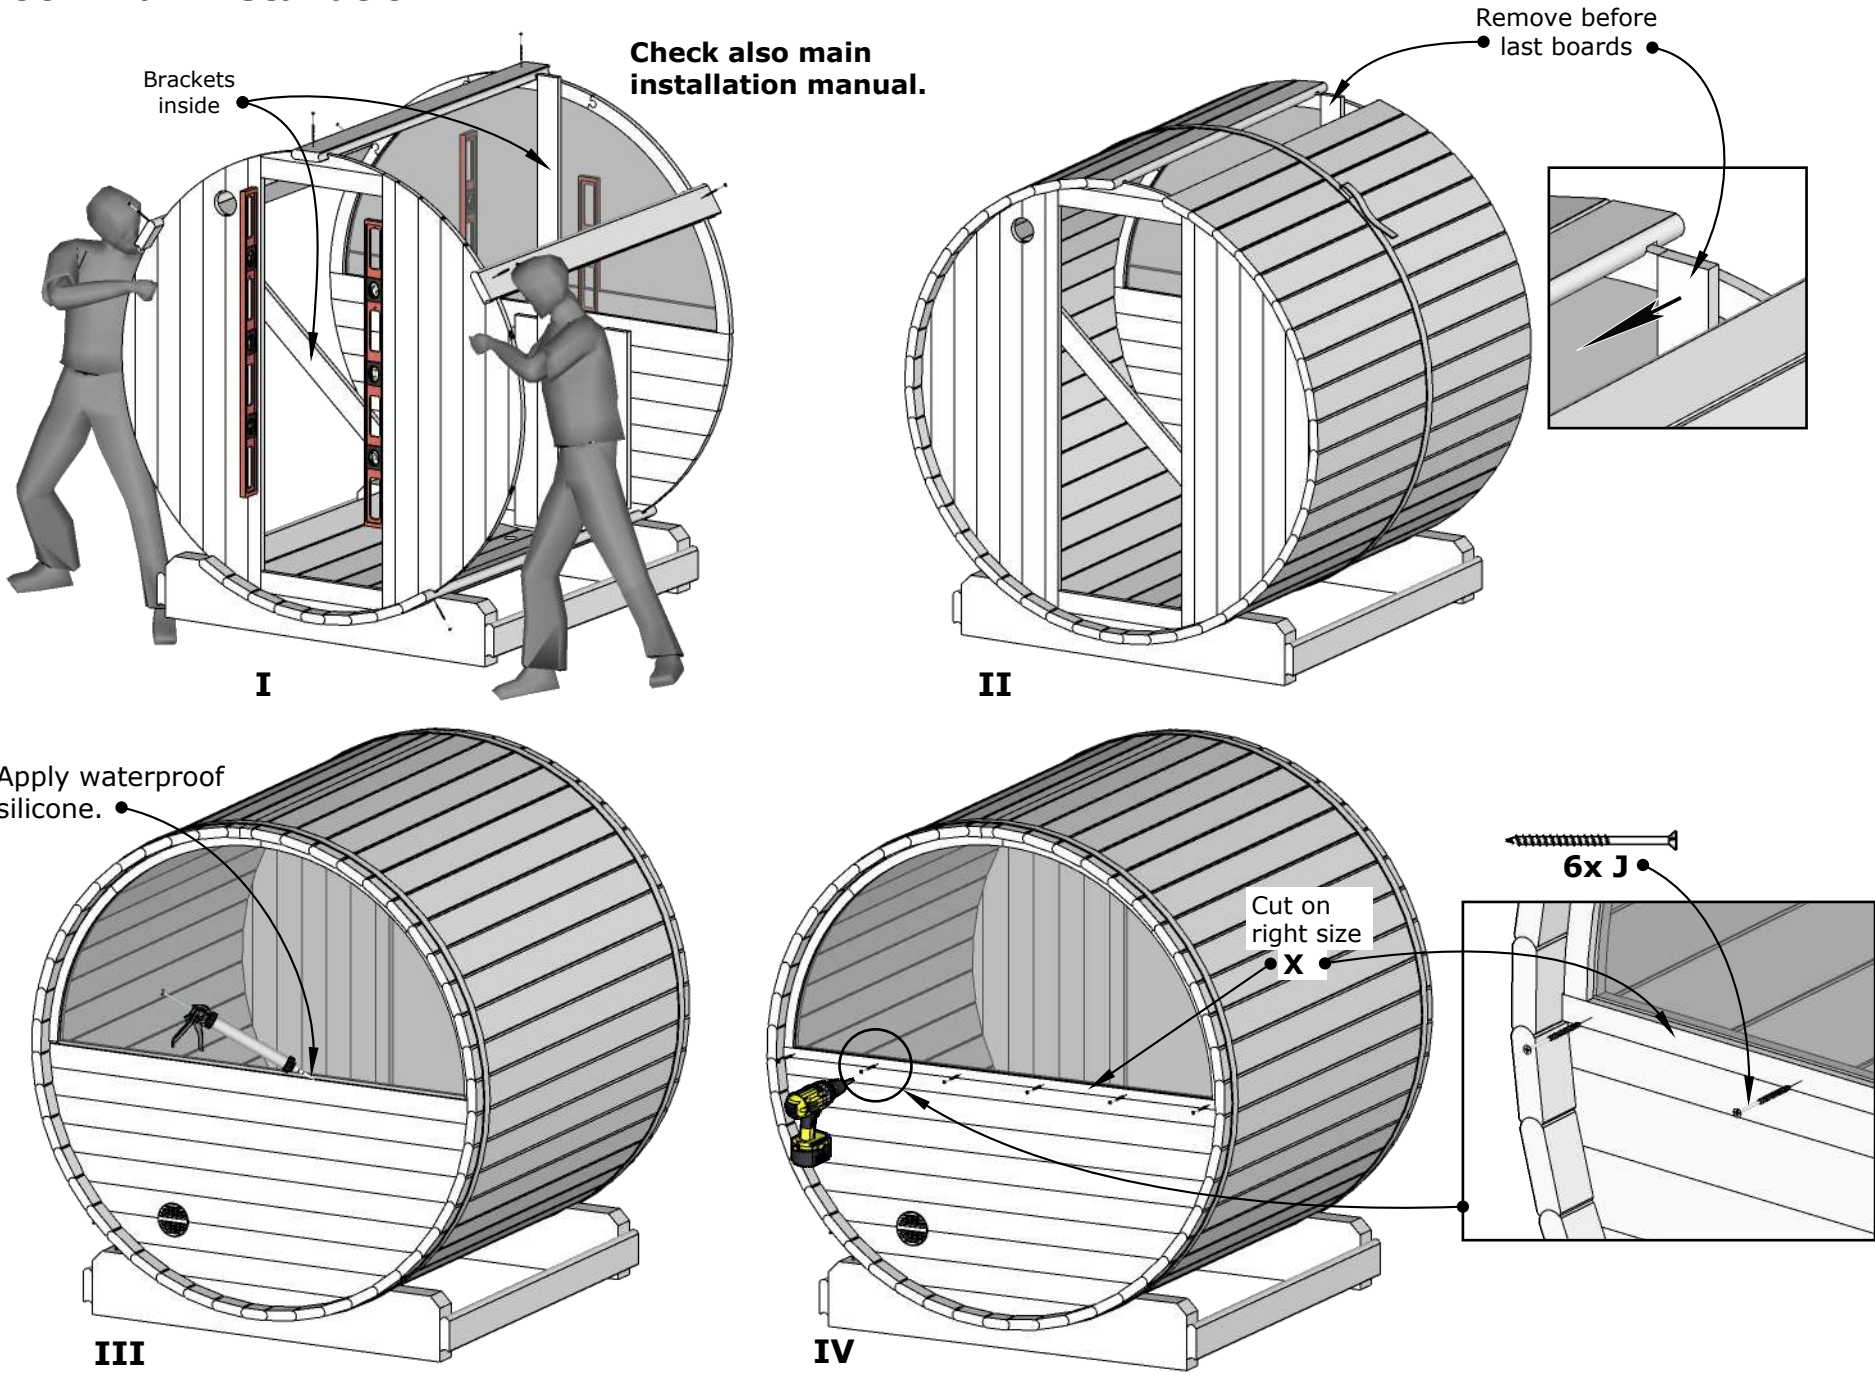


E7W Barrel Sauna 71D" x 81H"

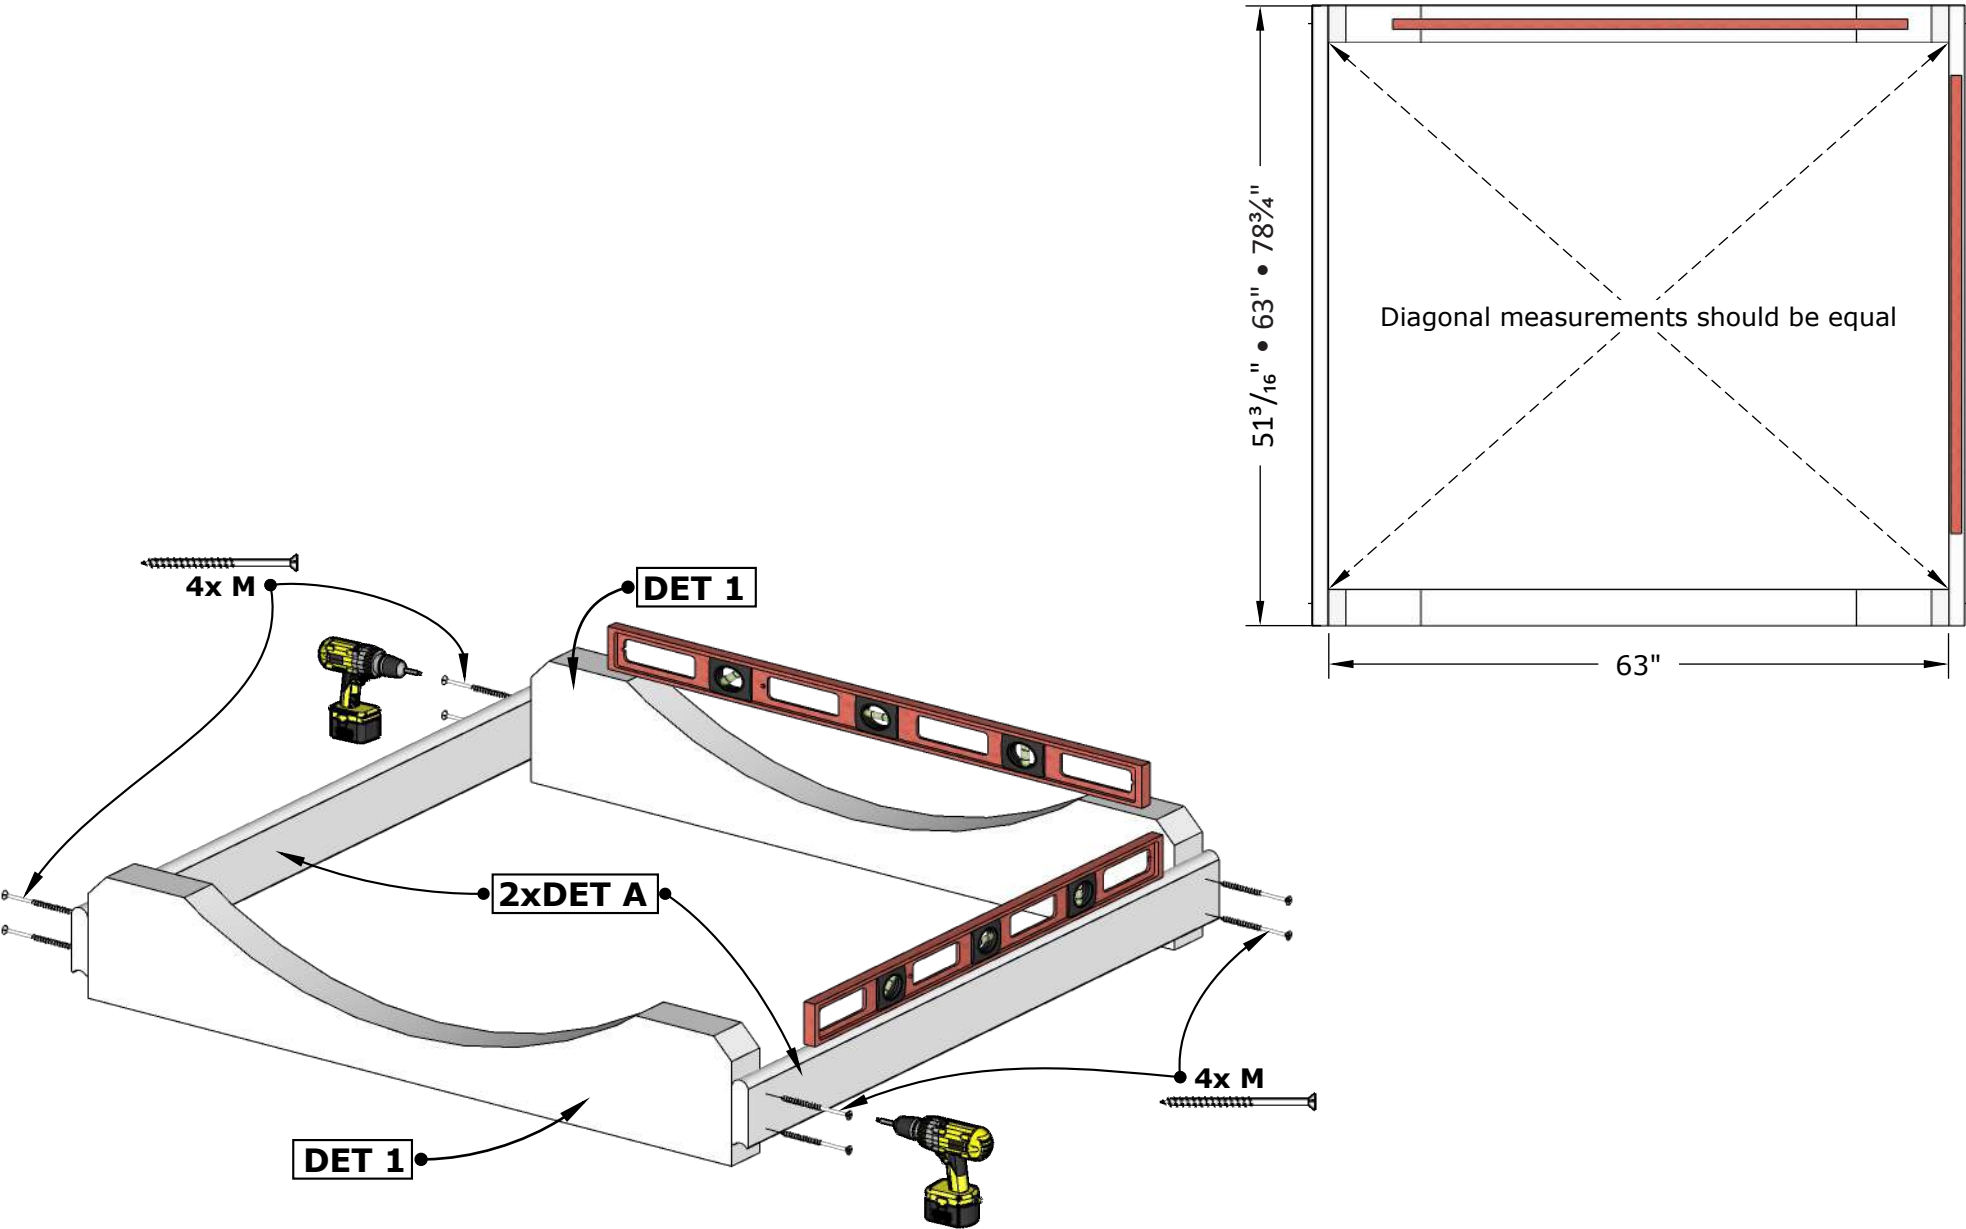




E7W Barrel Sauna 71D" x 81H"

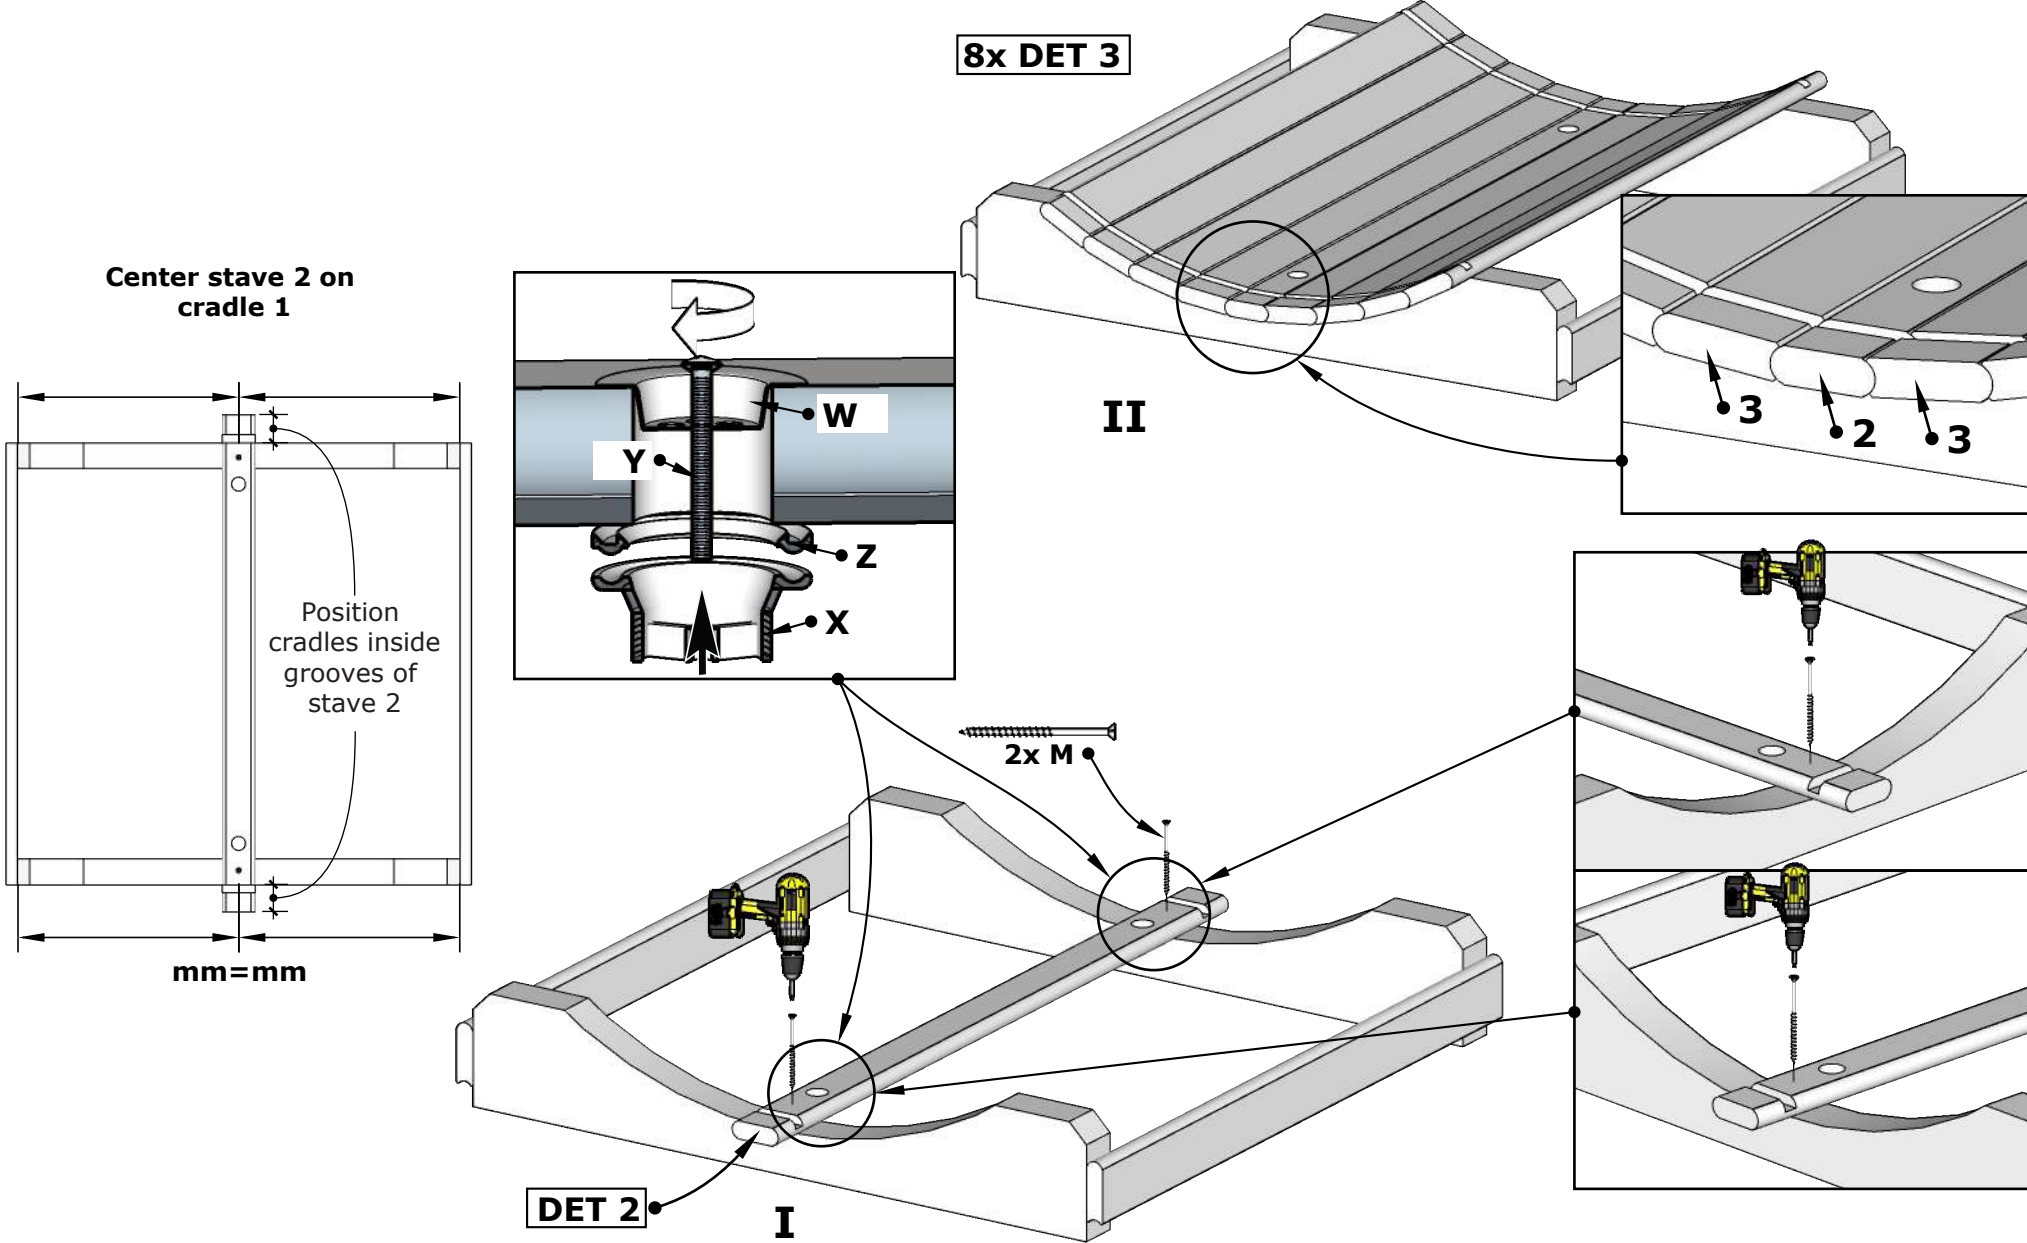


E7W Barrel Sauna 71D" x 81H"

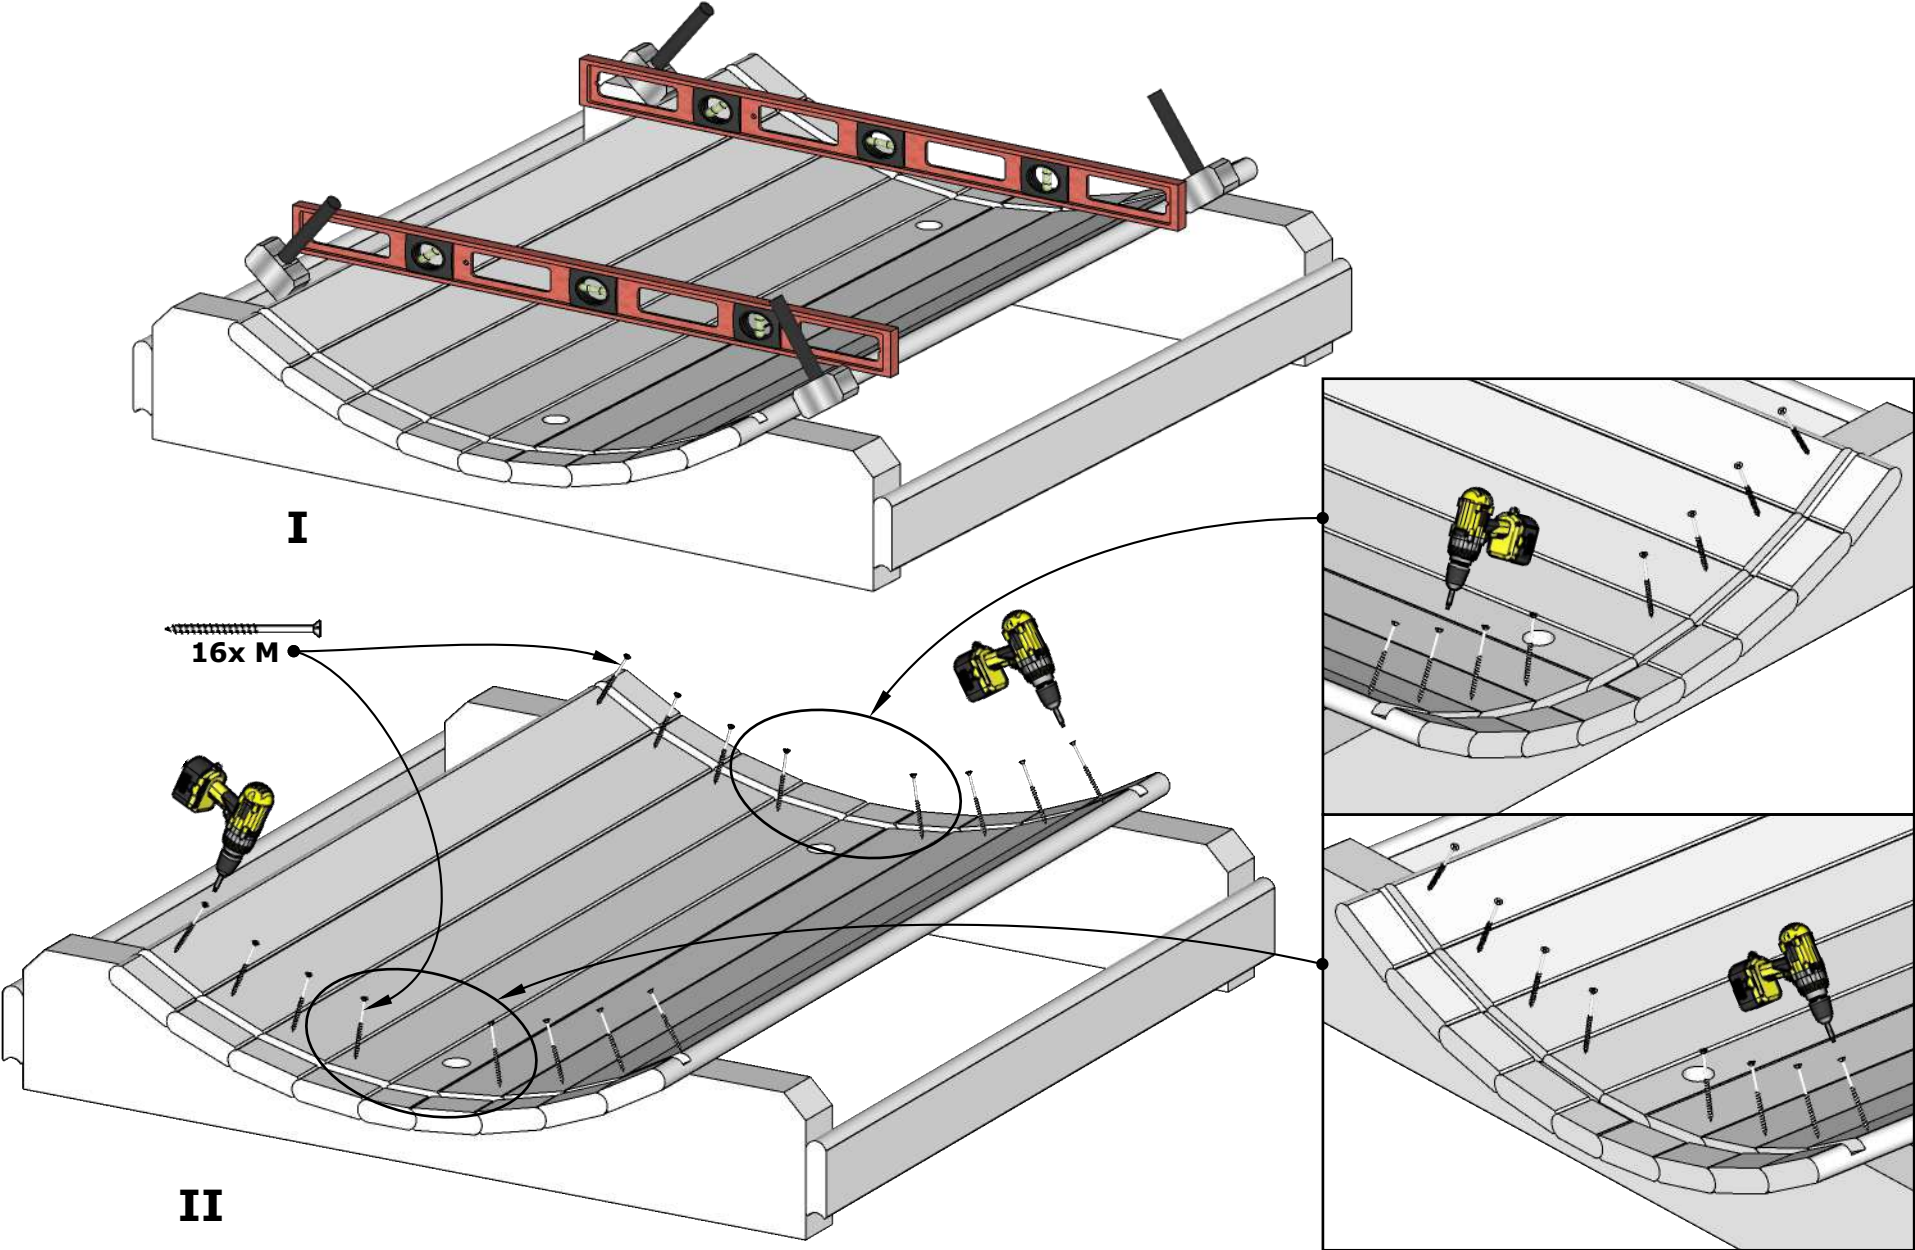

E7W Barrel Sauna 71D" x 81H"


Drill 4 holes Ø1/2"  
through DET 2  
outside

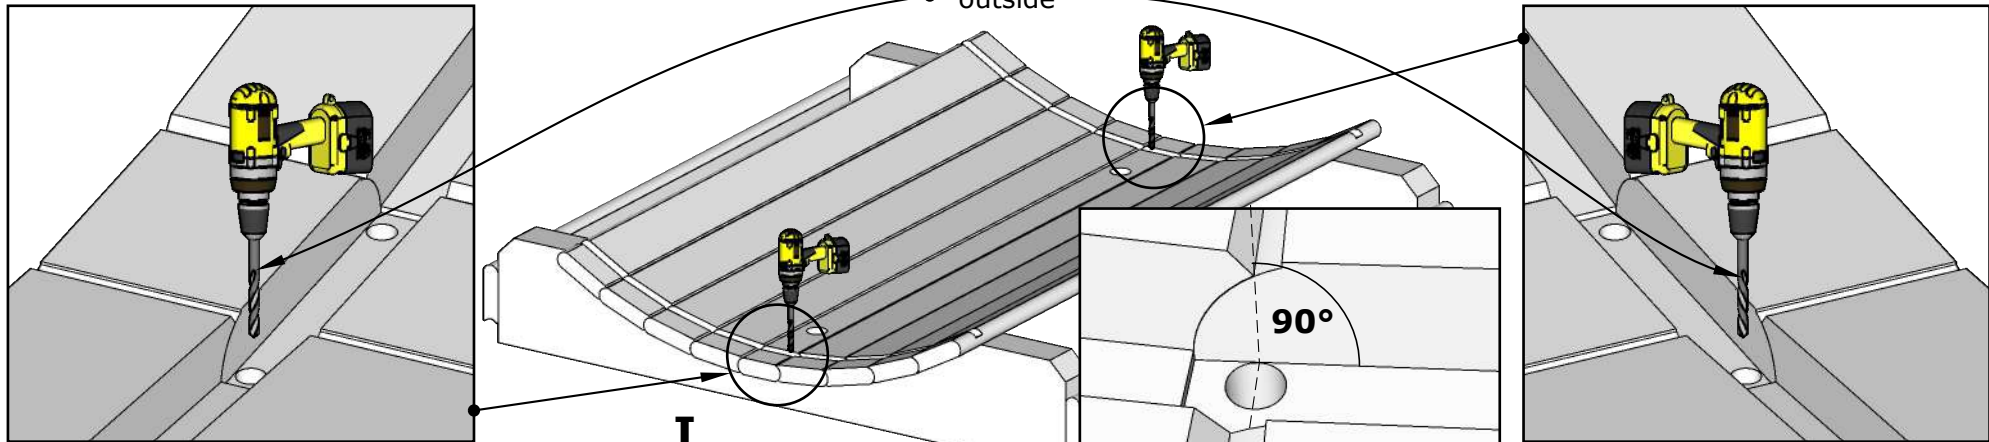

I

Check walls installation  
manual on extra pages!

Sauna wall configuration  
depends on Your model!

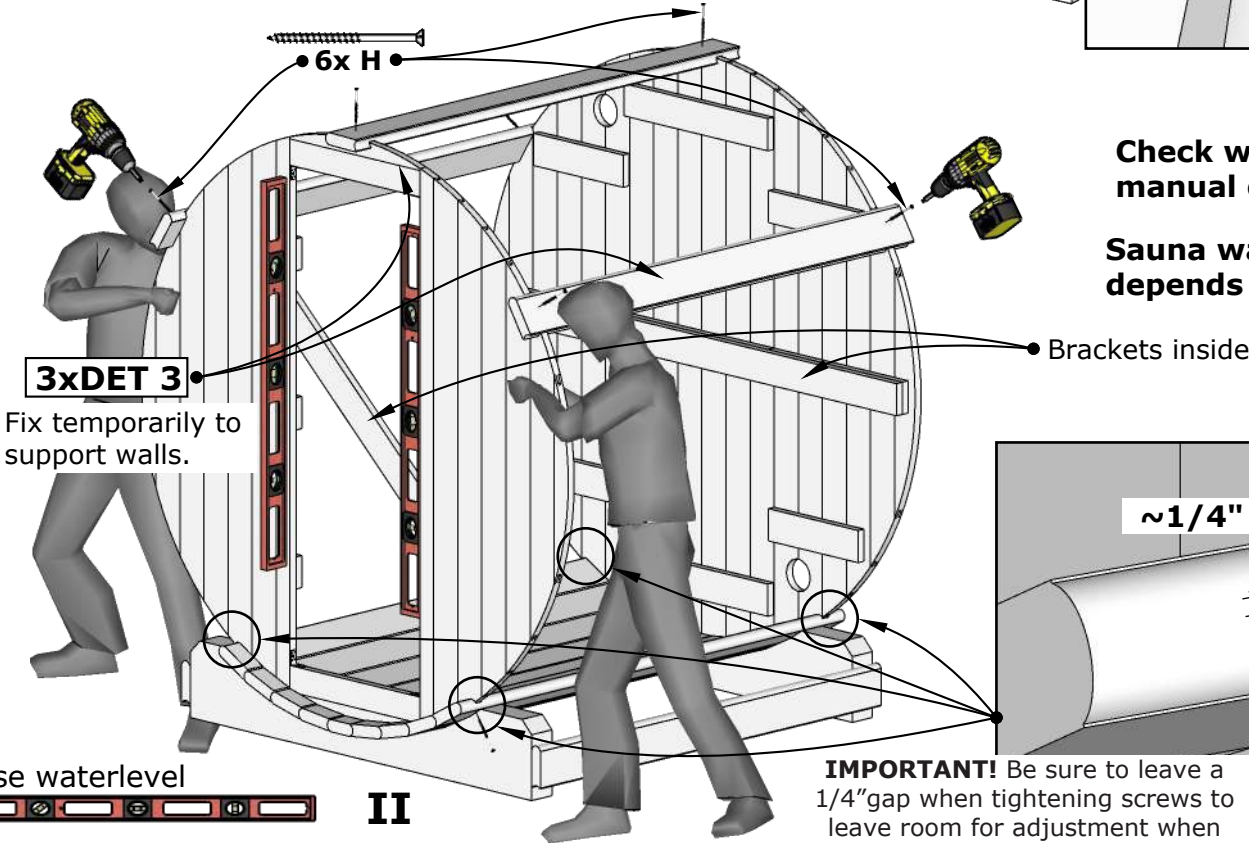

3xDET 3

Fix temporarily to  
support walls.

6x H

Brackets inside

Use waterlevel

II


**IMPORTANT!** Be sure to leave a  
1/4" gap when tightening screws to  
leave room for adjustment when  
the outer bands (B) are installed.

~1/4"


4x H




E7W Barrel Sauna 71D" x 81H"

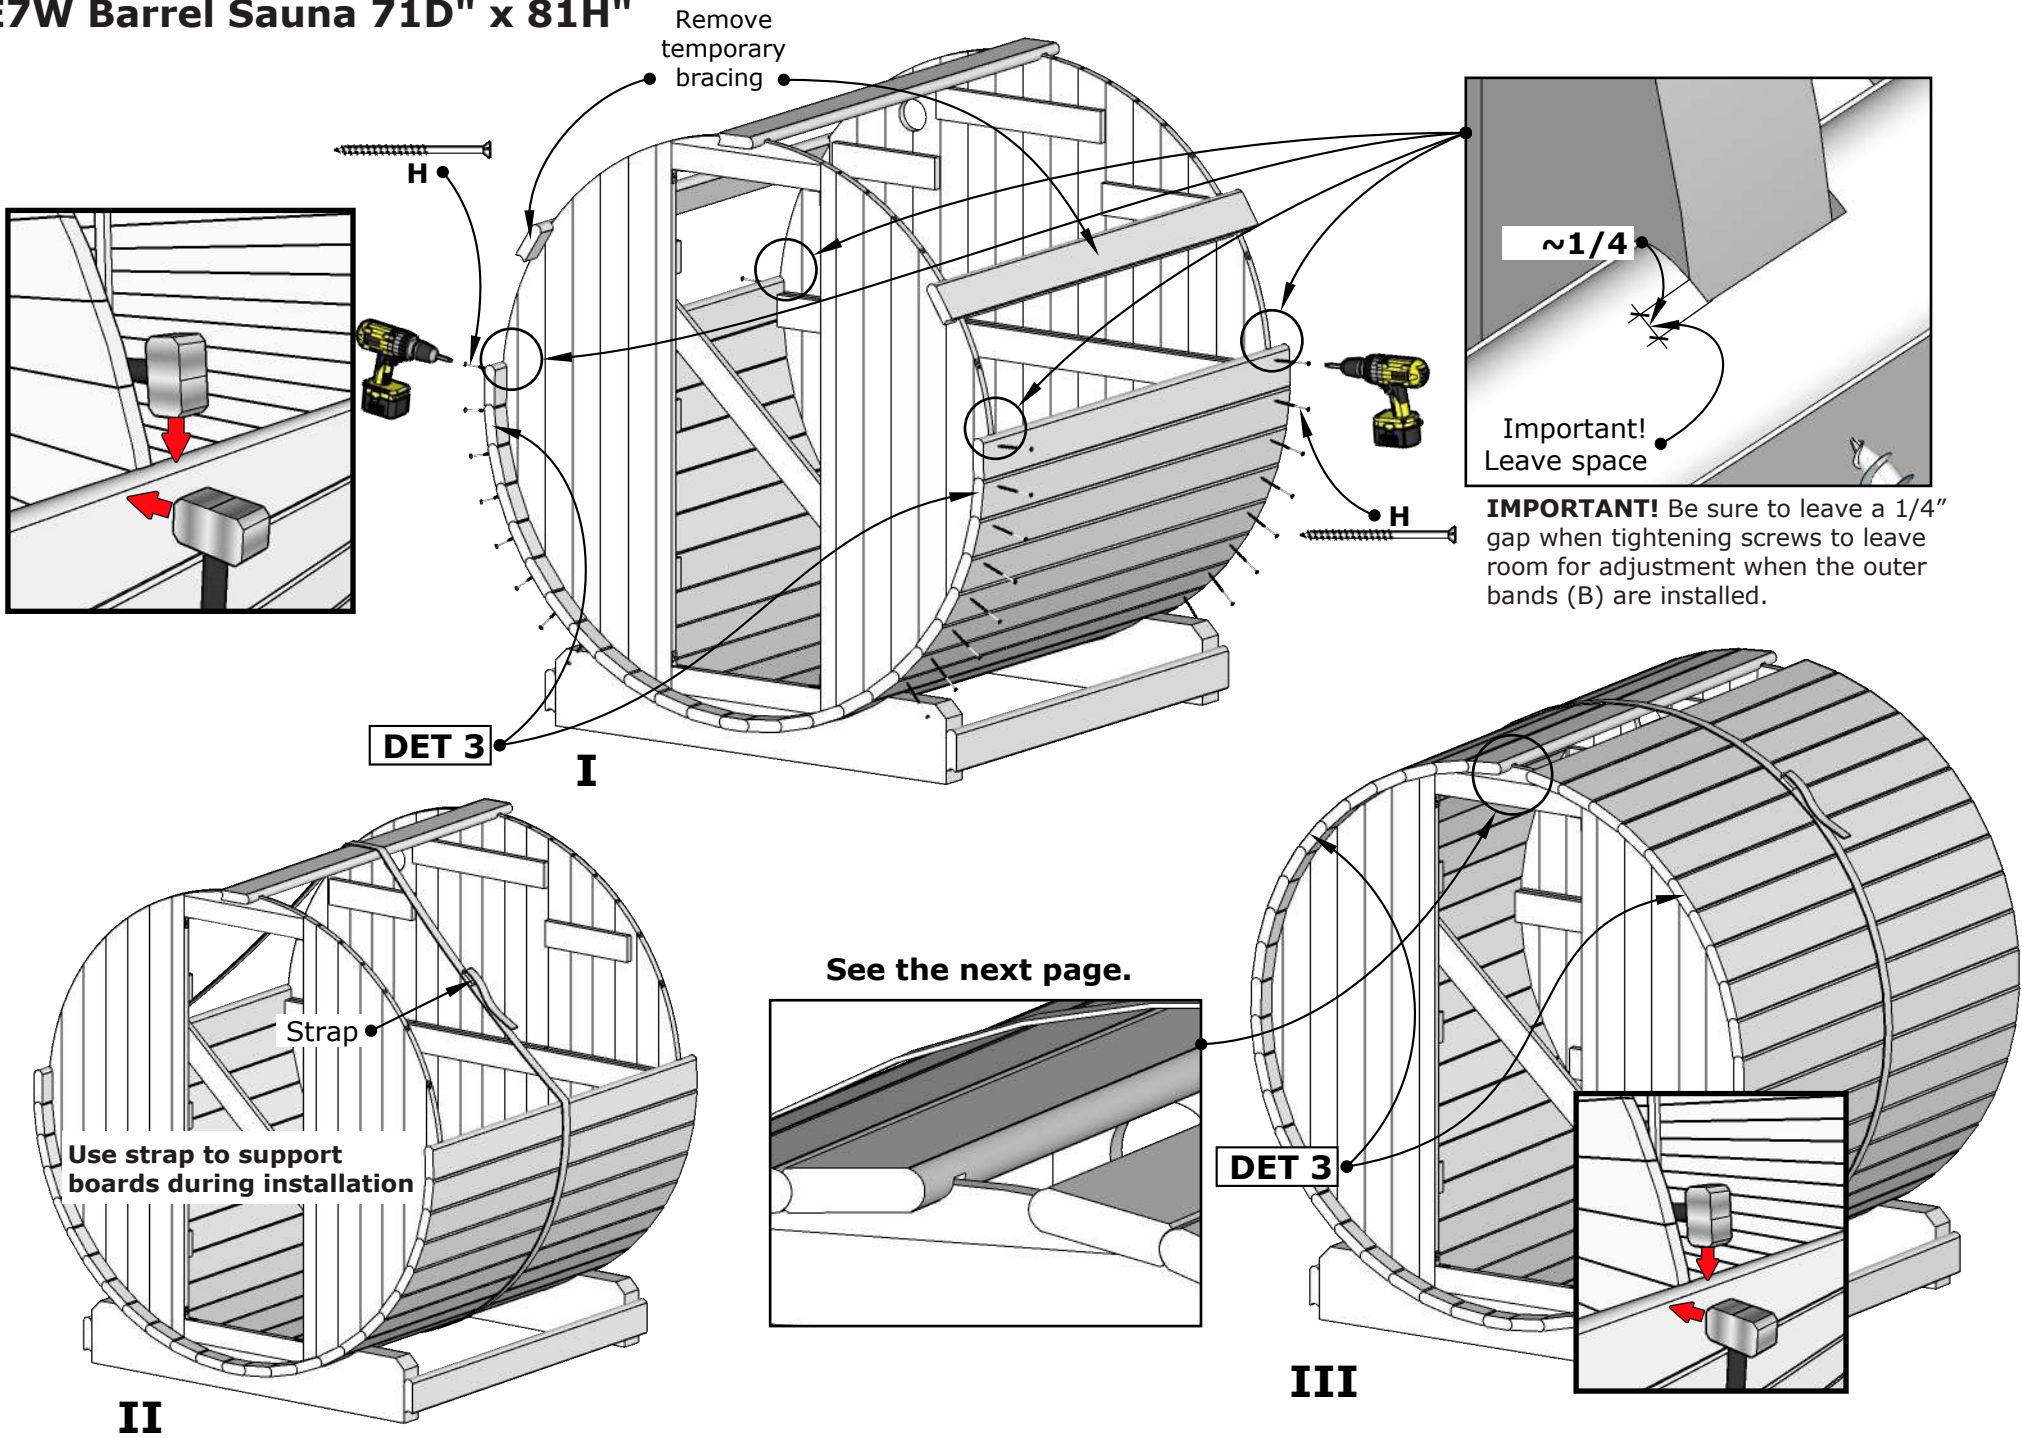


E7W Barrel Sauna 71D" x 81H"

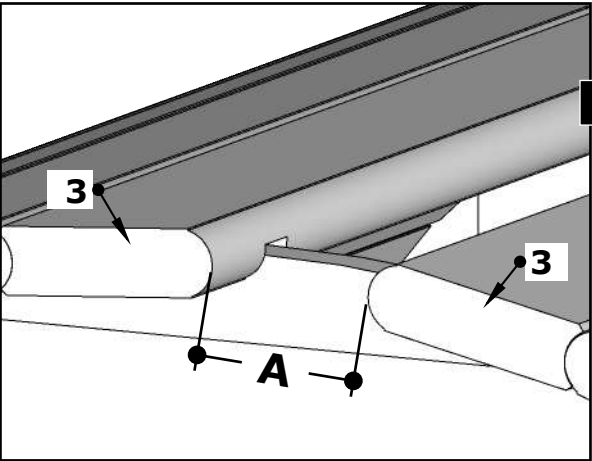


I

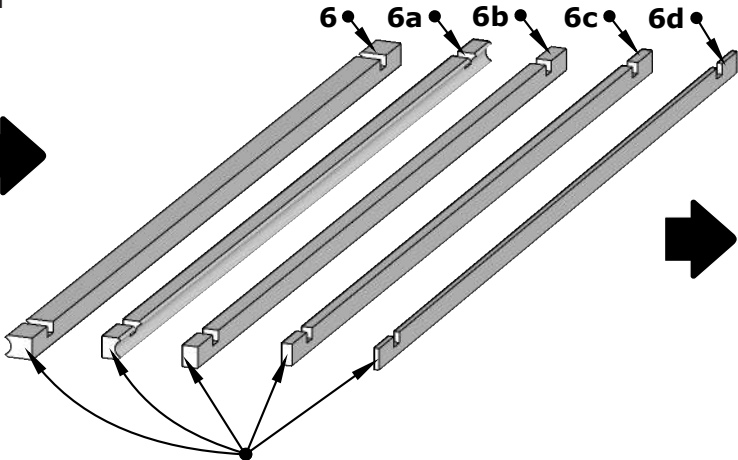


Join two boards together (as shown in diagram II) that will bridge the width of the "A" gap. It is recommended that the combined boards are approximately 1/4" wider than the gap.

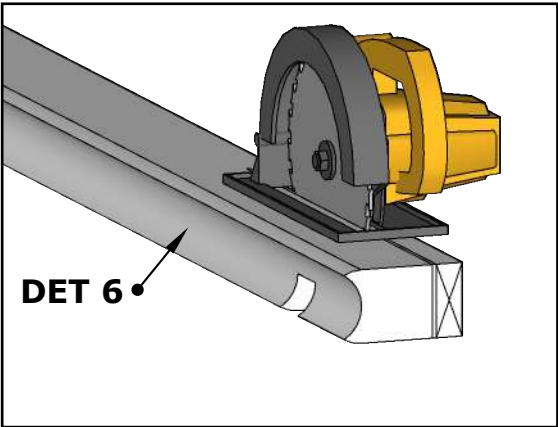

If needed, trim the flat edge of the board to create the desired width.

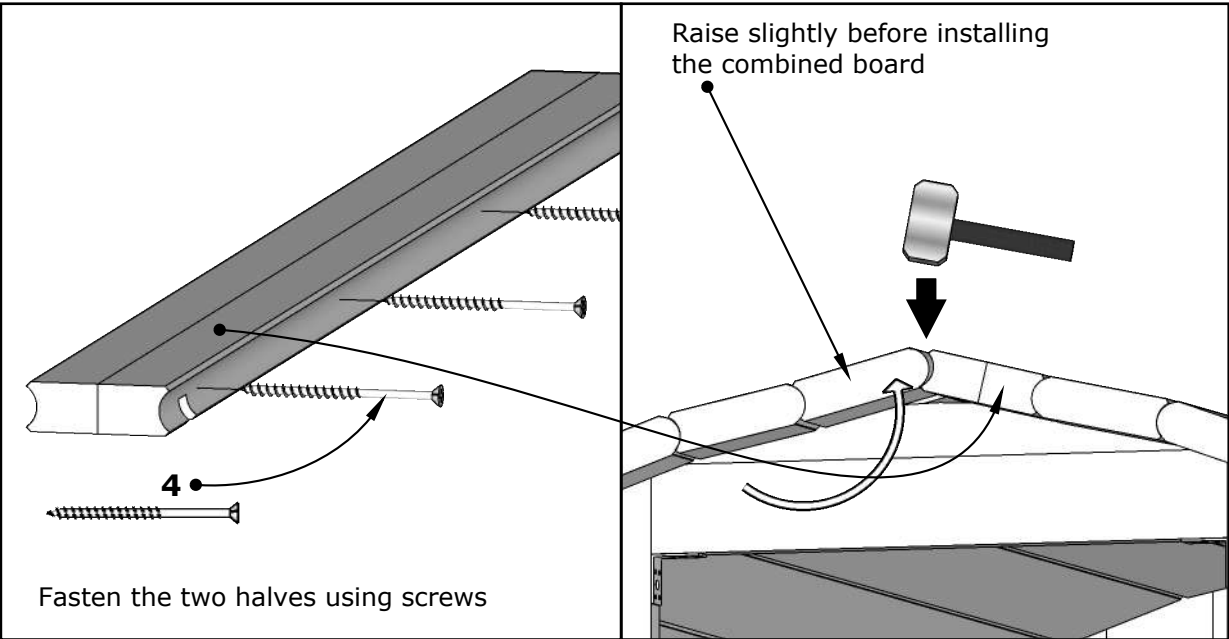


II

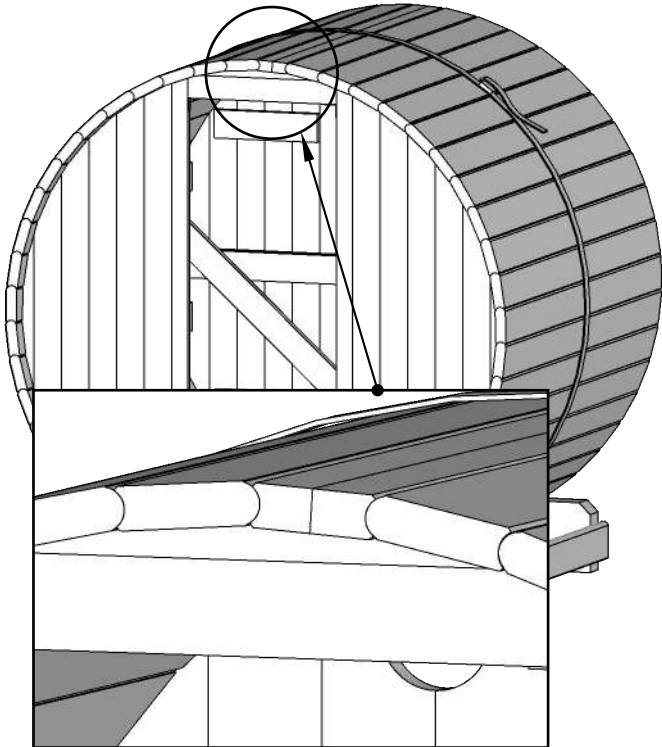


III

E7W Barrel Sauna 71D" x 81H"



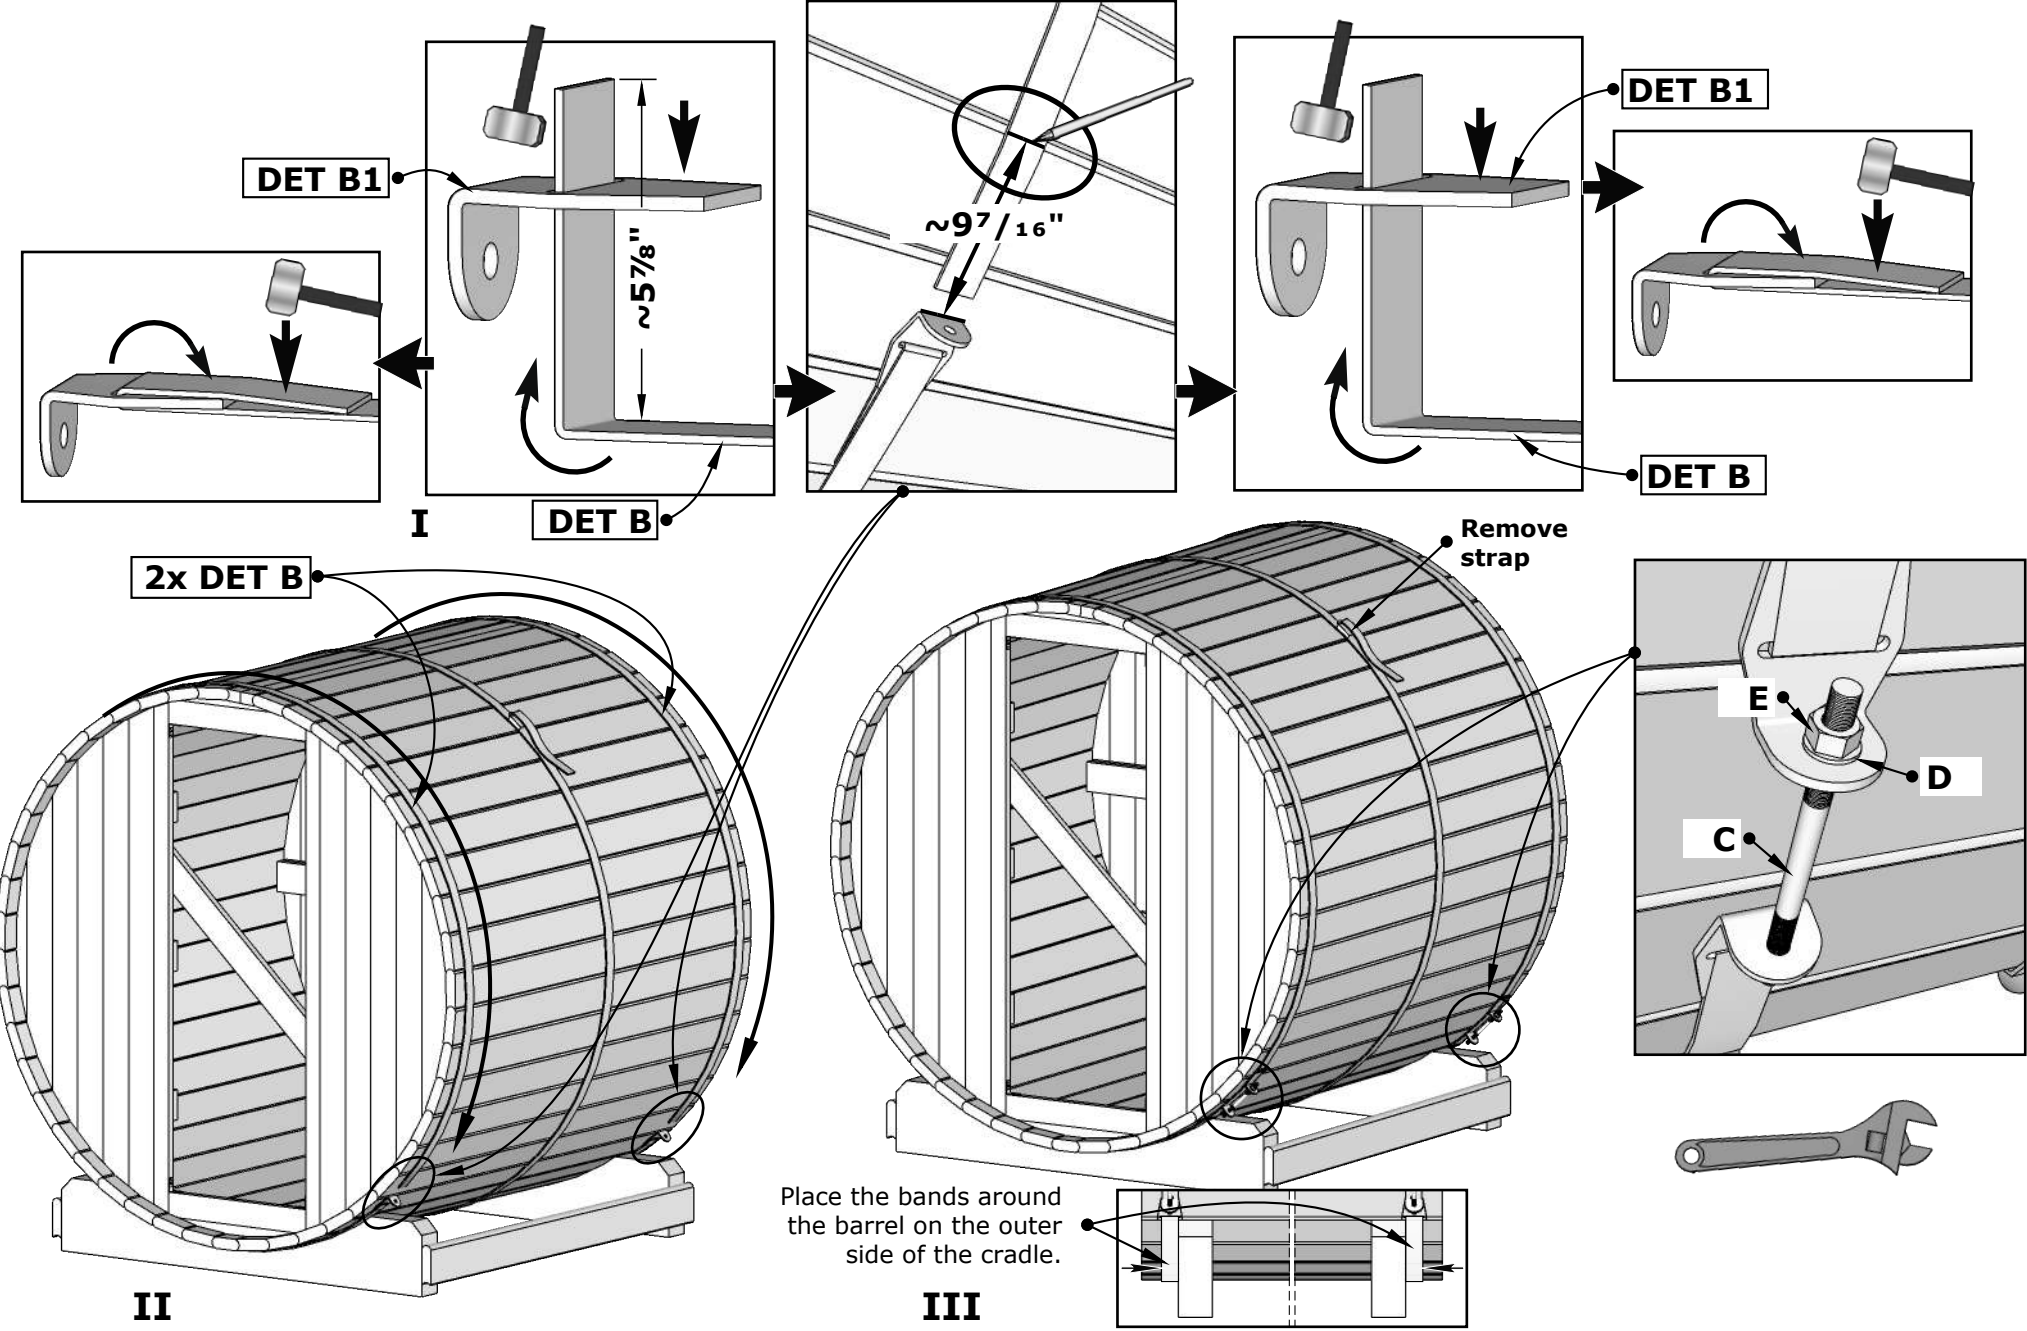




E7W Barrel Sauna 71D" x 81H"





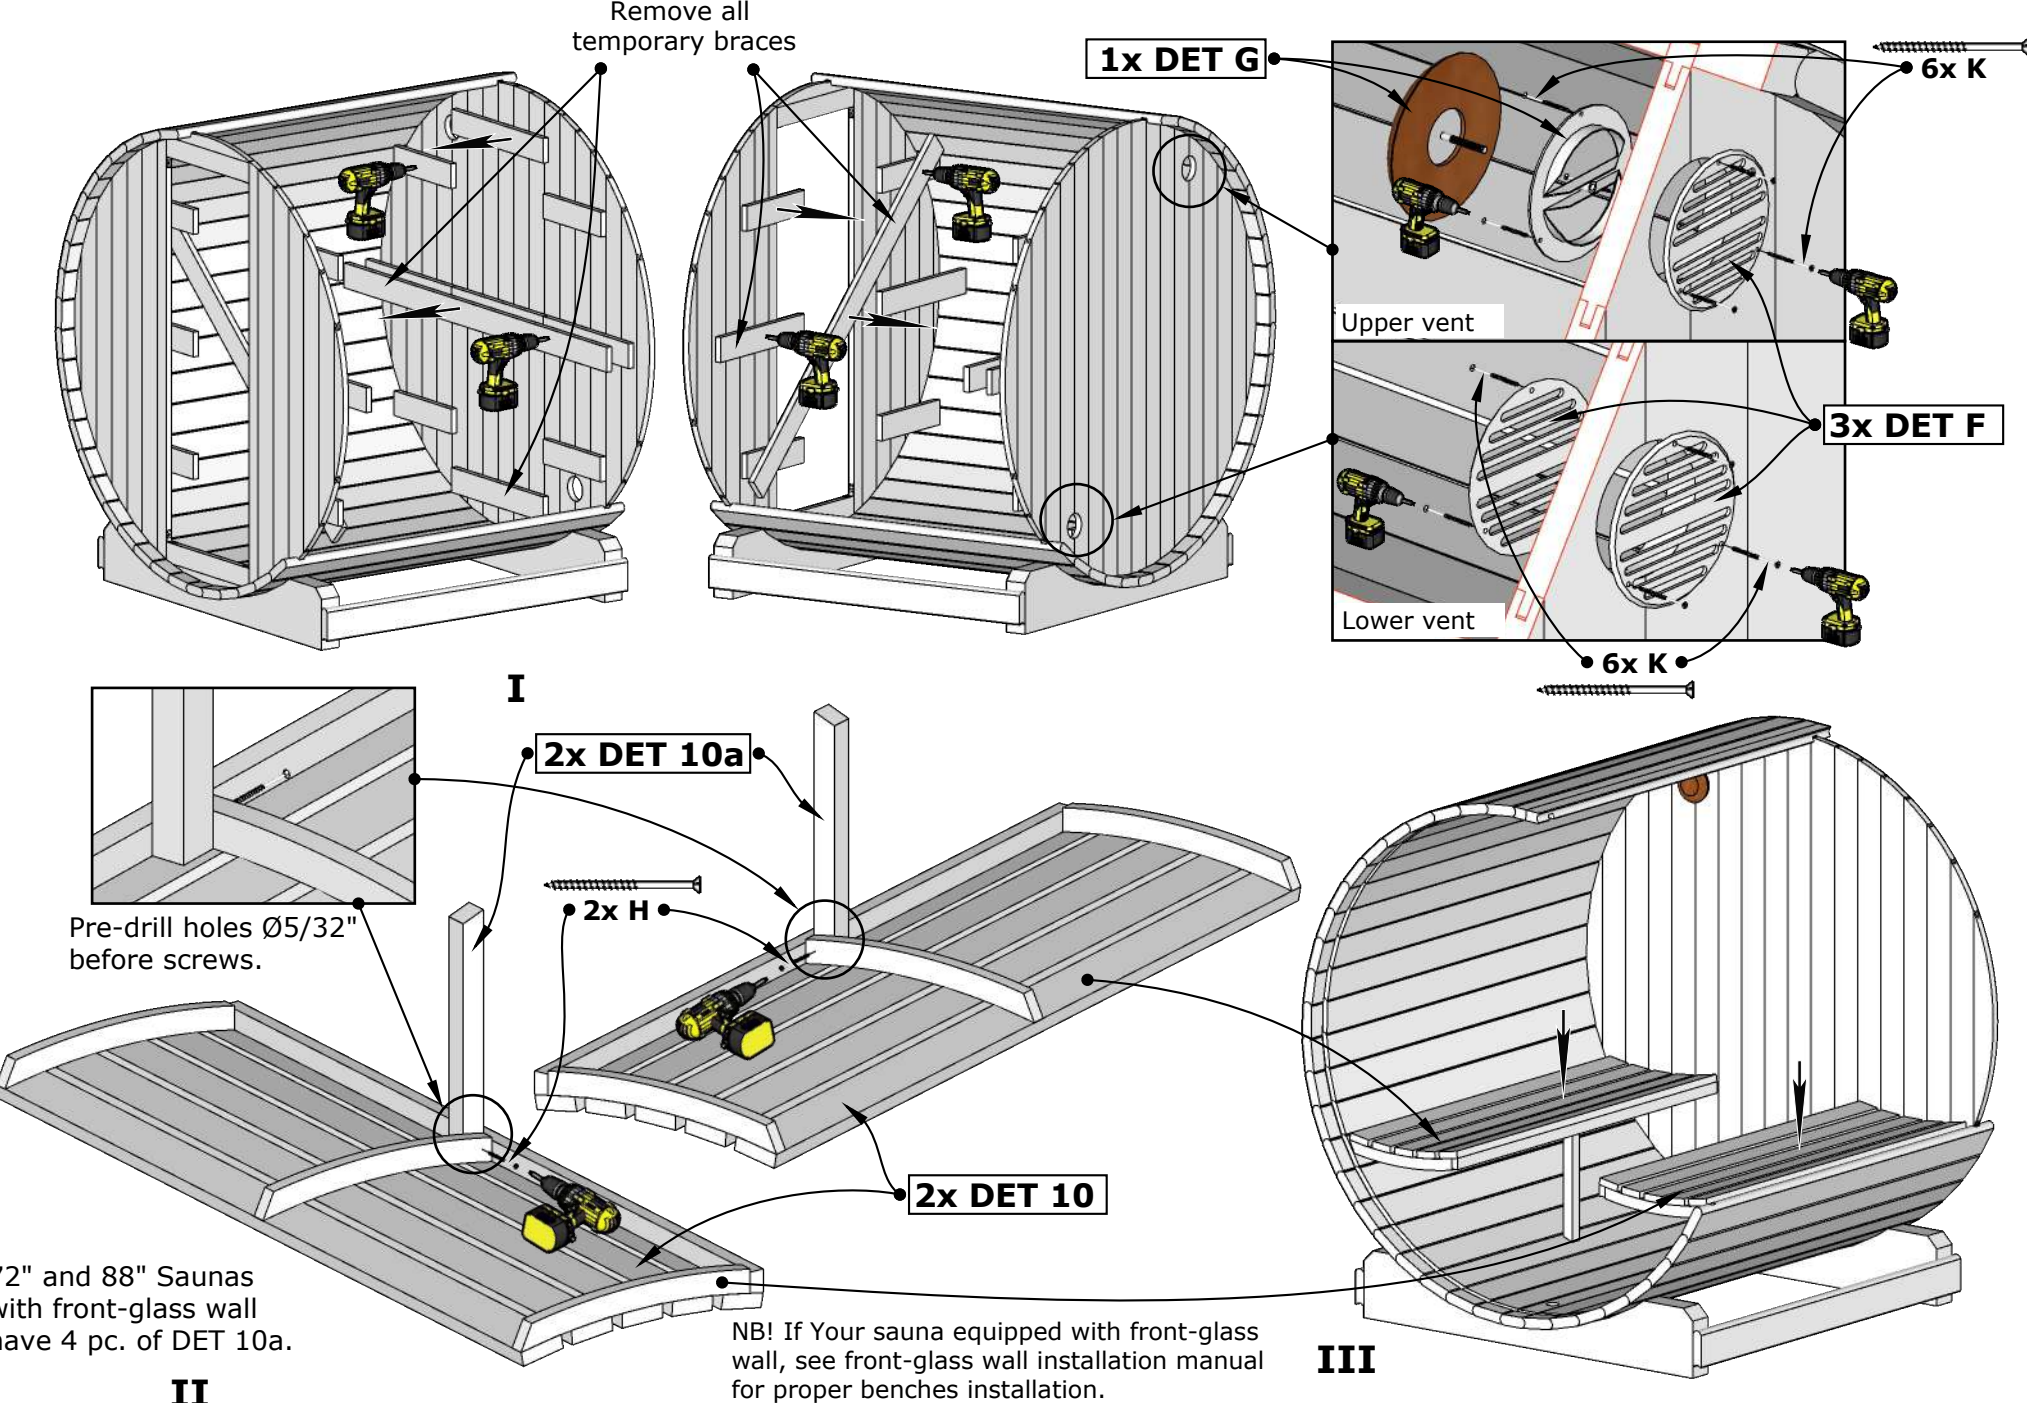


E7W Barrel Sauna 71D" x 81H"

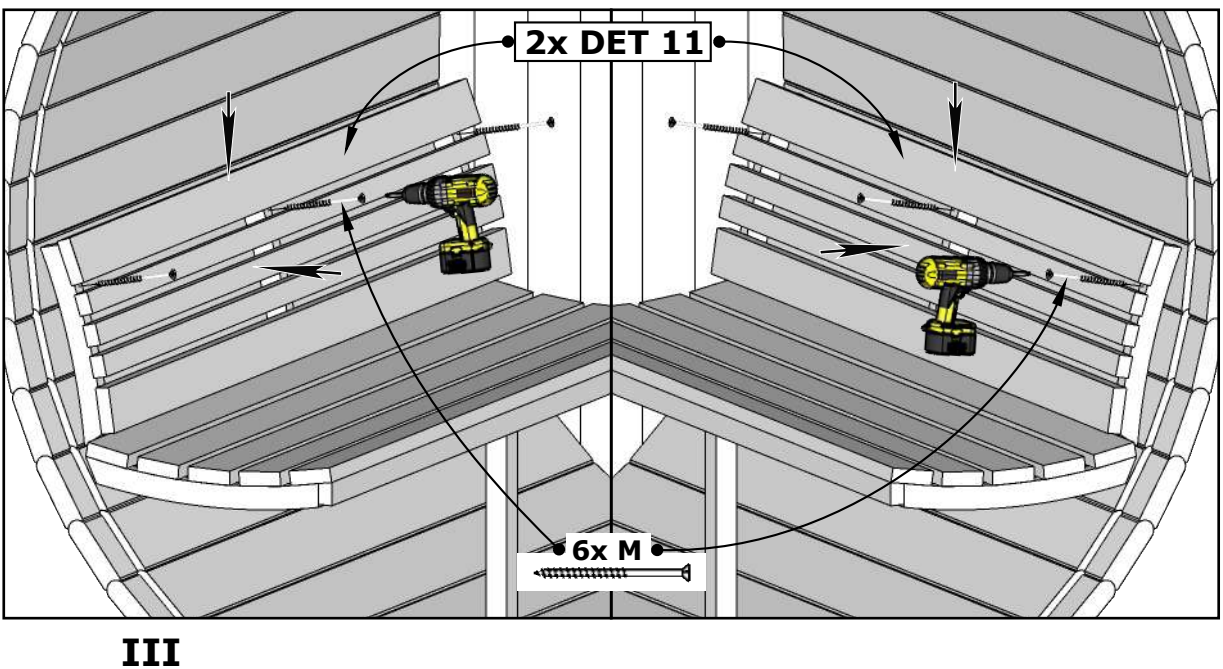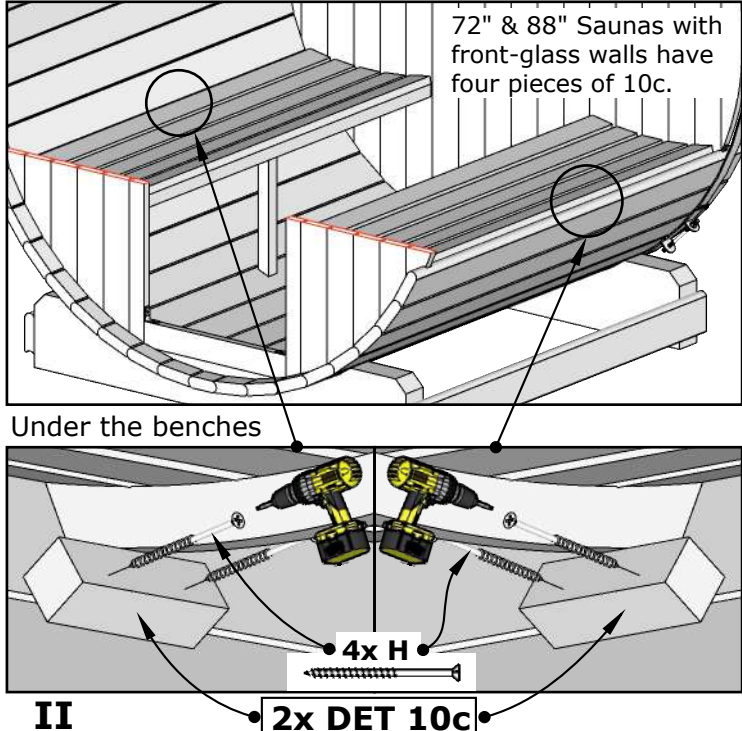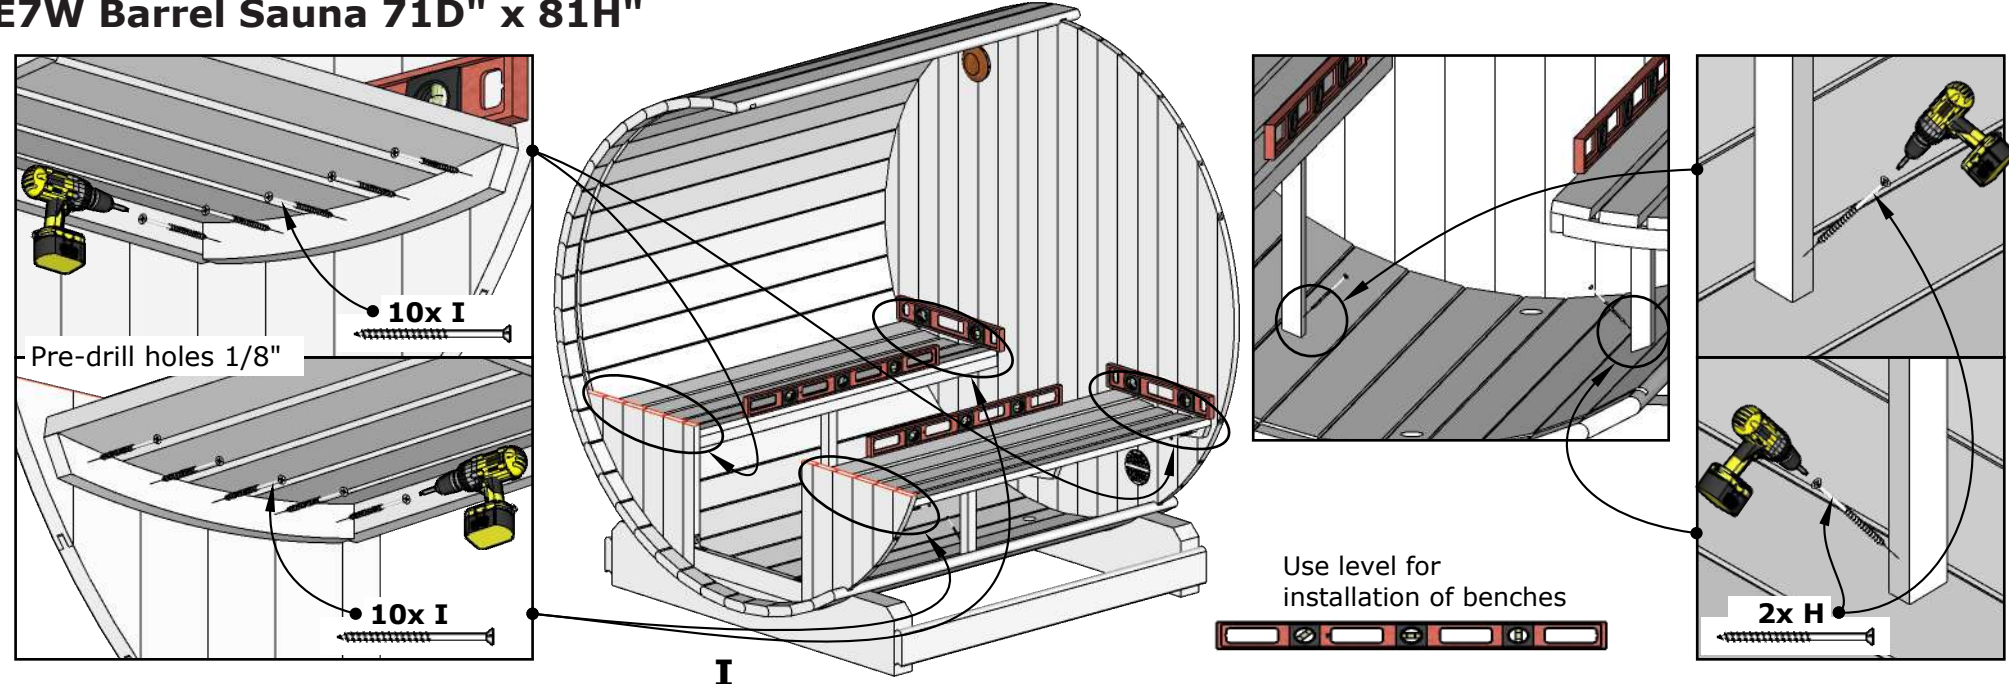







E7W Barrel Sauna 71D" x 81H"

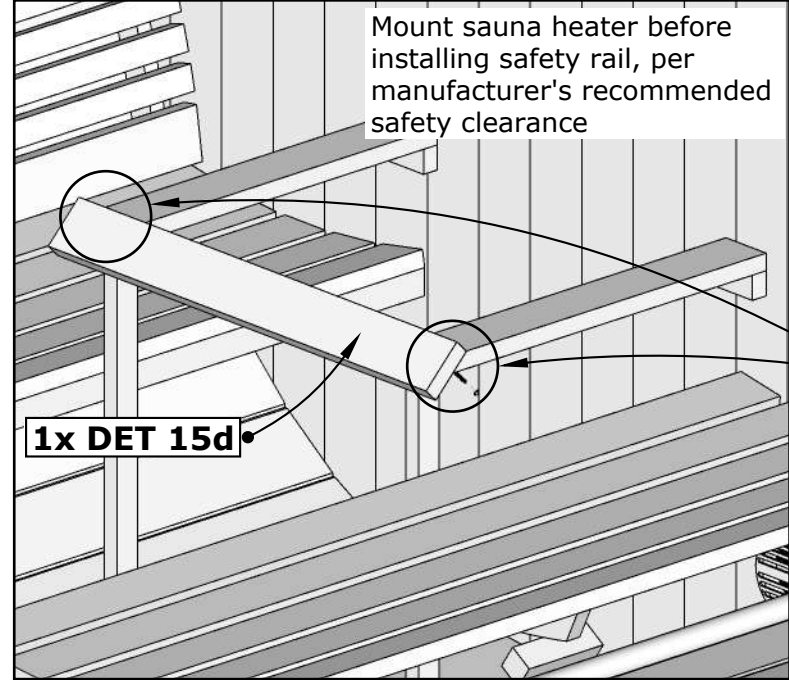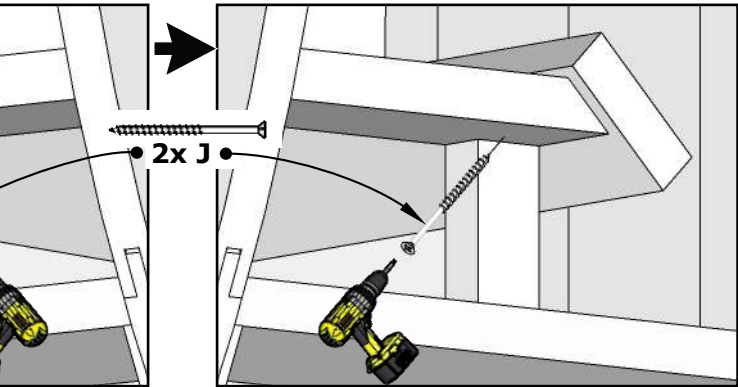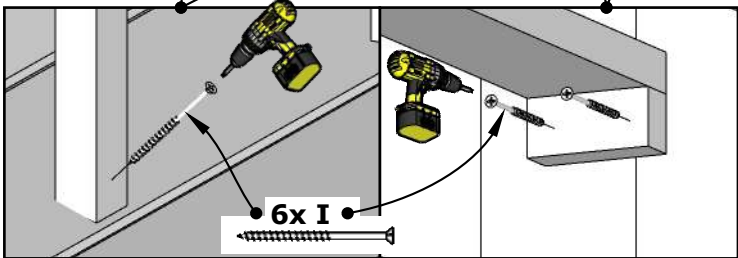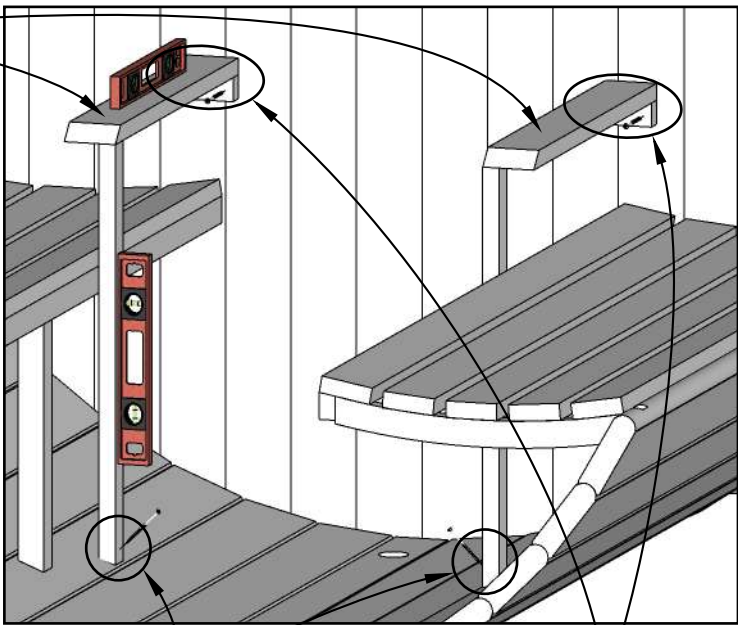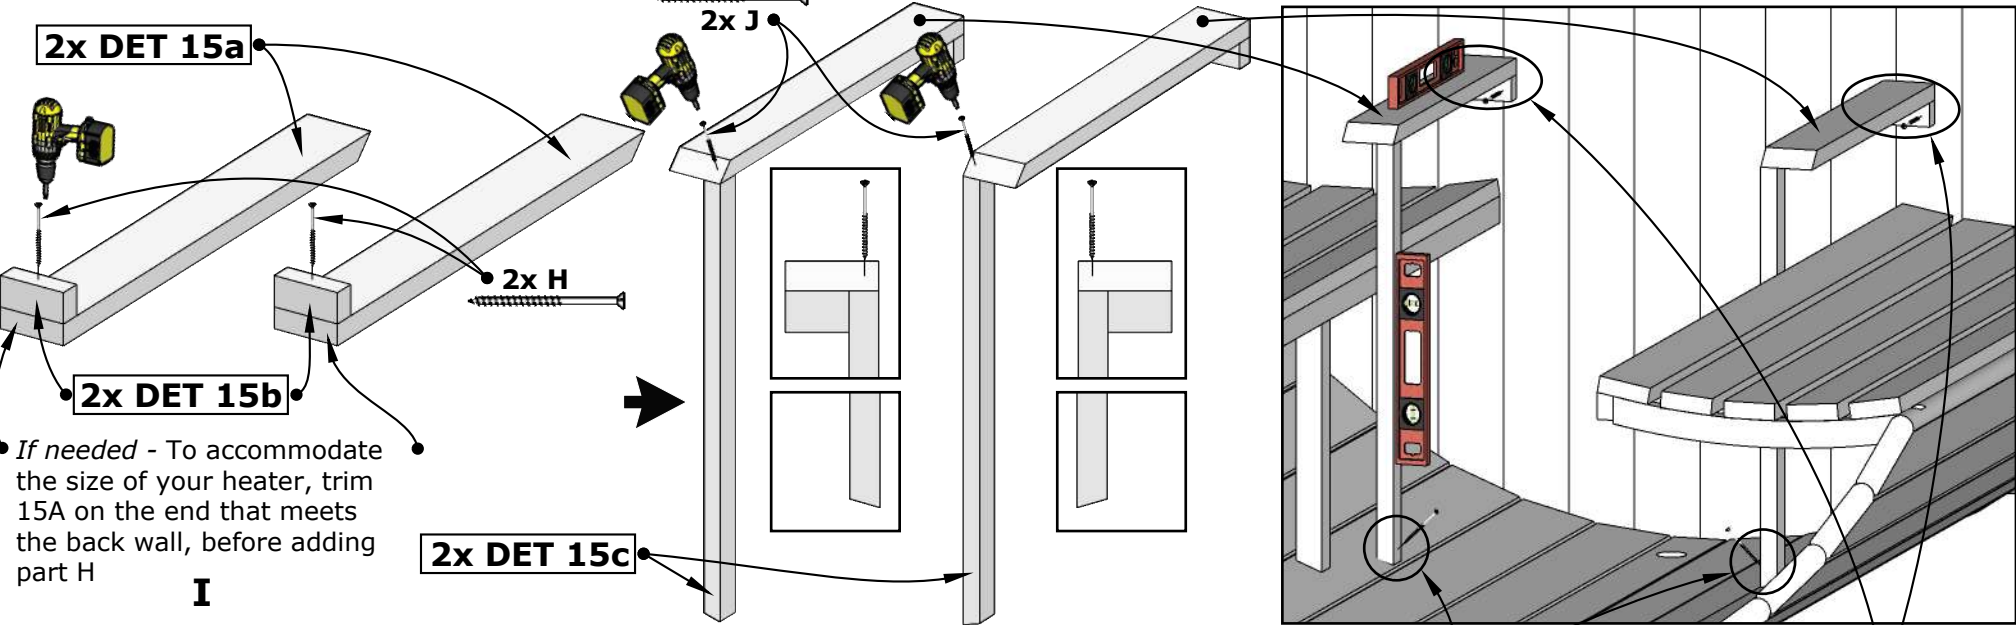




E7W Barrel Sauna 71D" x 81H"

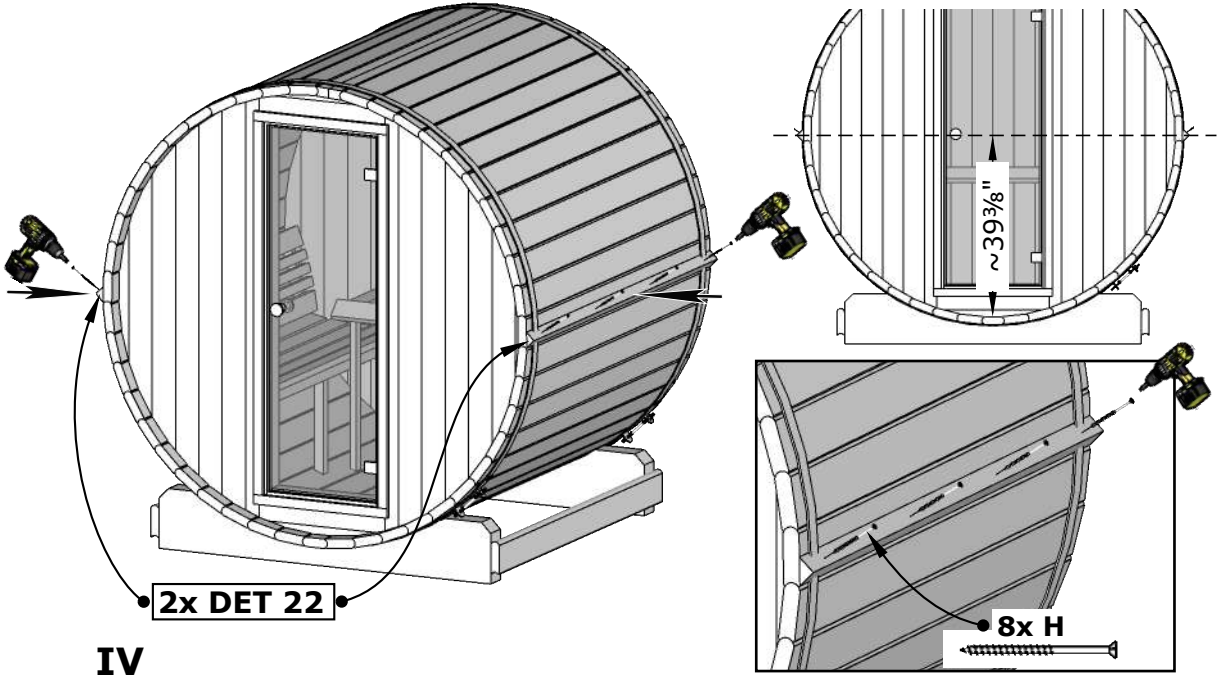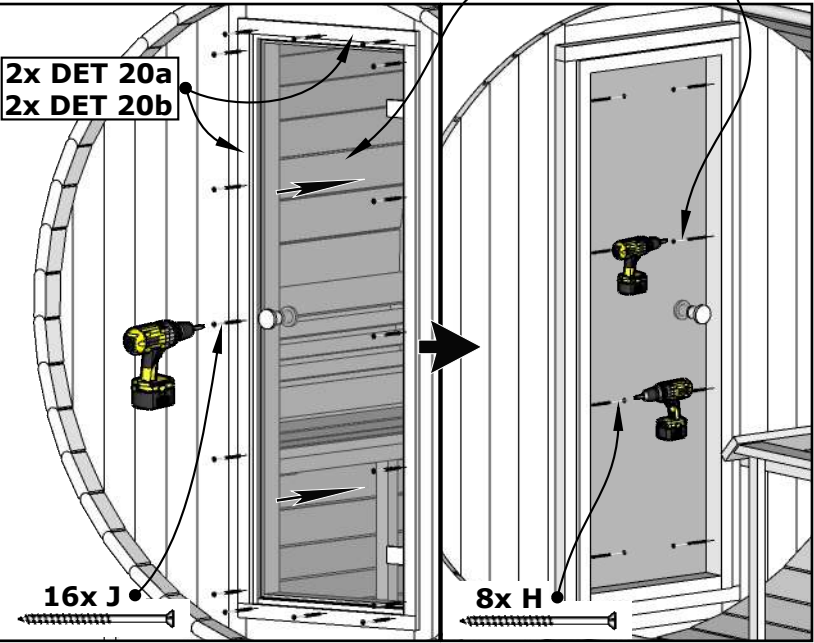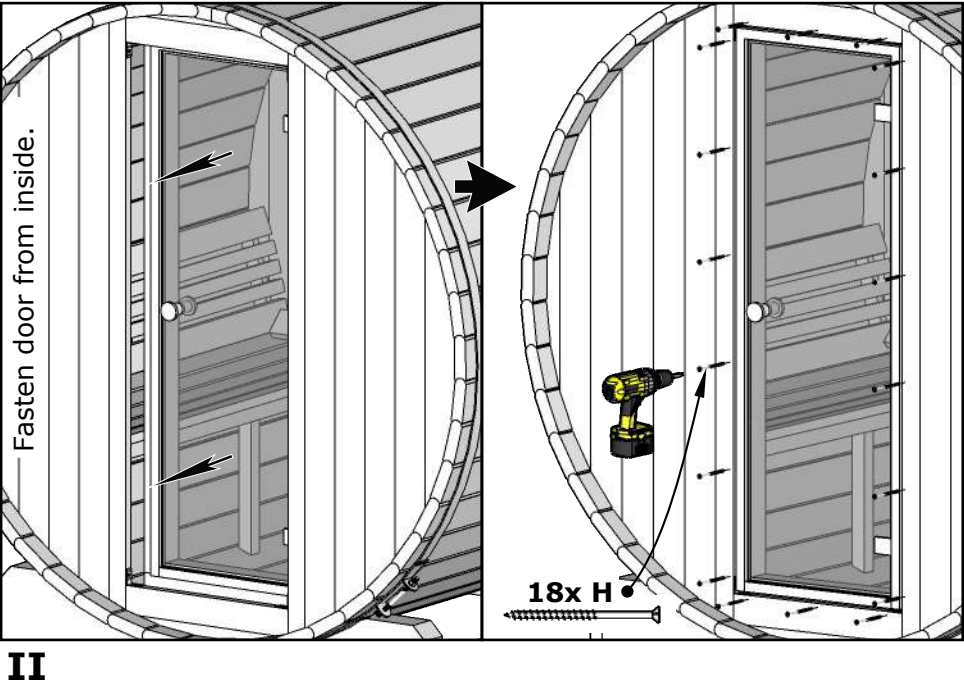
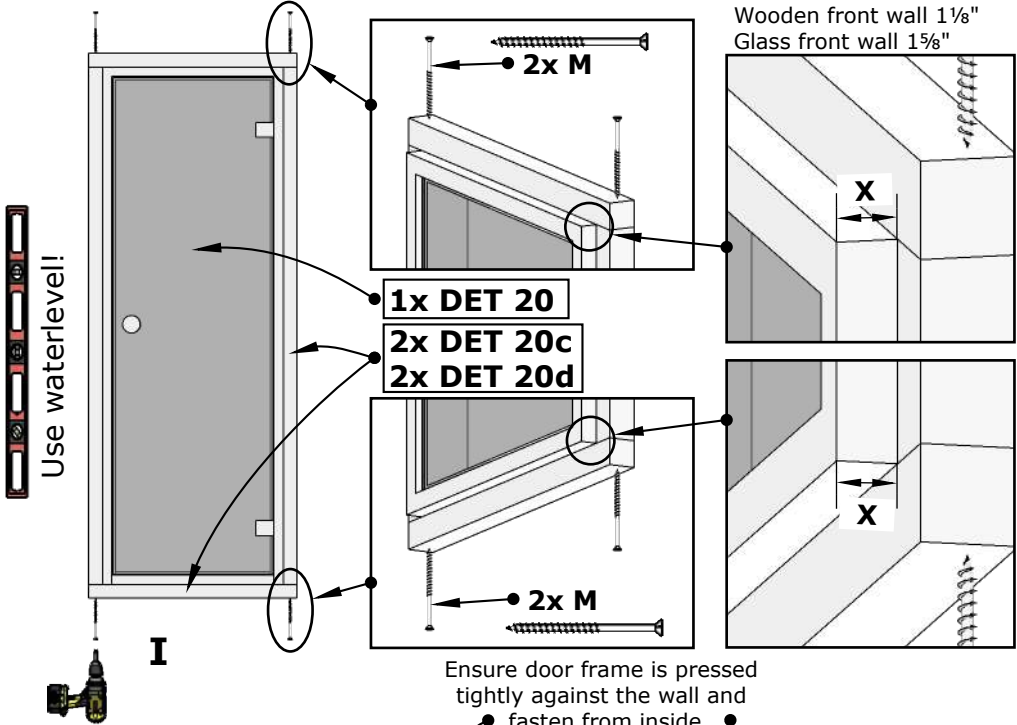


E7W Barrel Sauna 71D" x 81H"

See the installation manual inside the shingles package

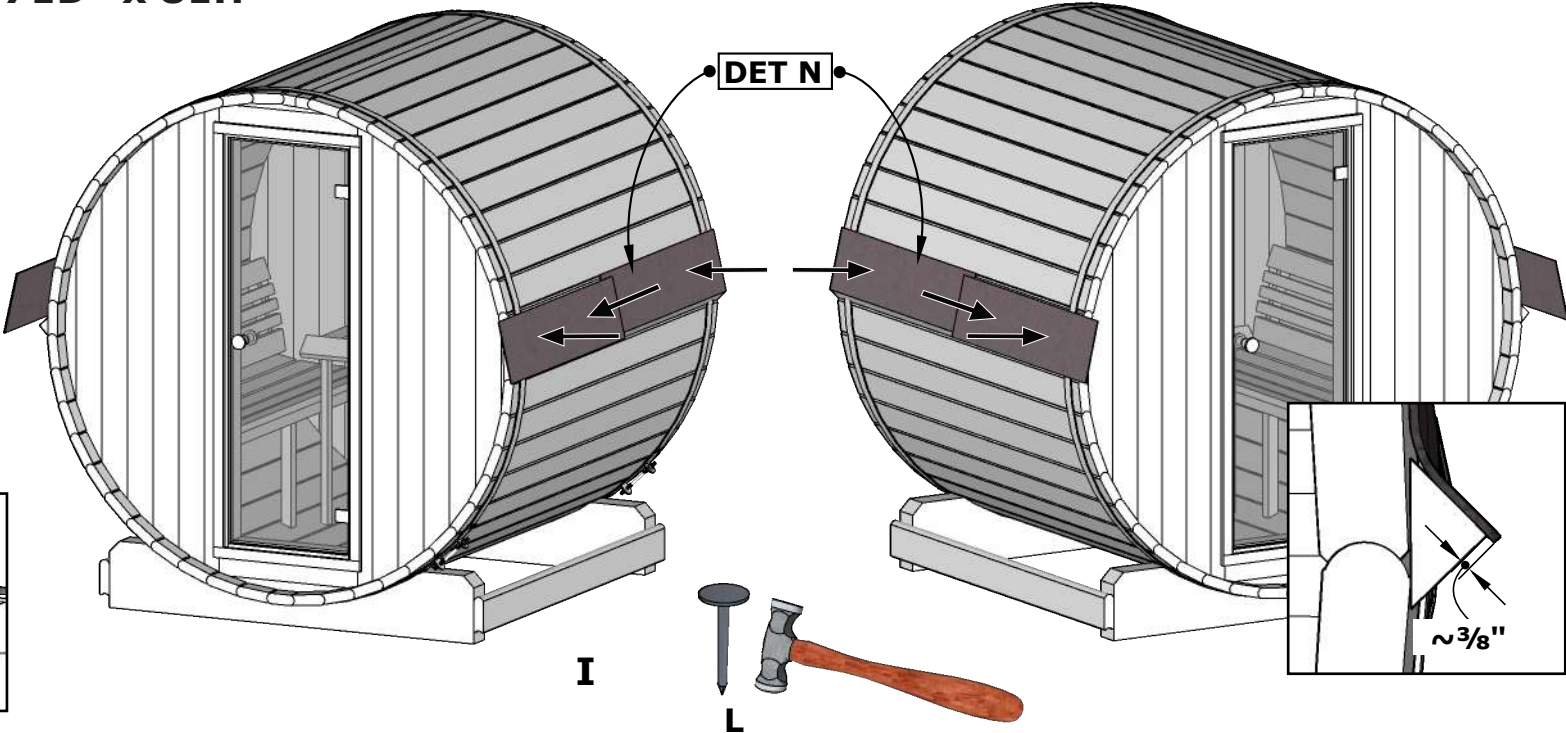

Check also roof shingles installation manual inside package.

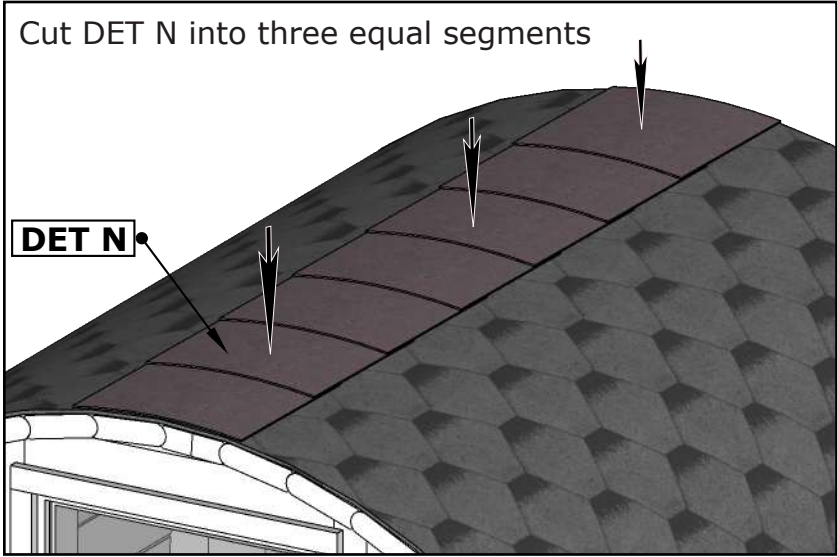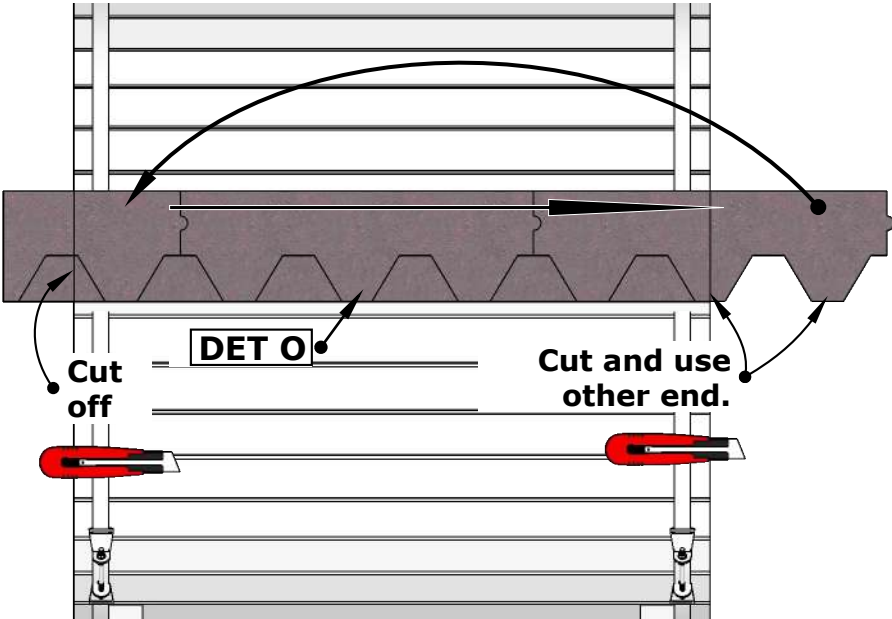

E7W Barrel Sauna 71D" x 81H"

