


Ergo-Series E8G Barrel Sauna Full Glass Front 87D" x 81H"




Note: Please read manual before construction

Front & Back Walls

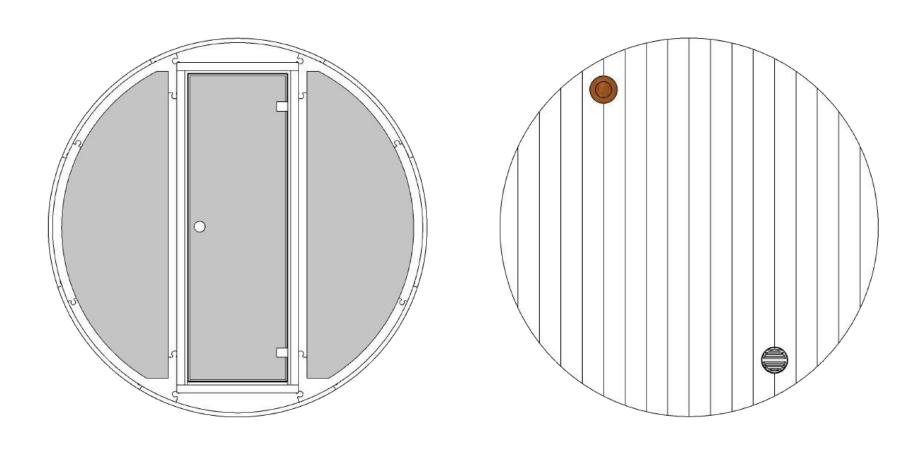



E8G Barrel Sauna 87D" x 81H" **Details list.** 6c 4 6d 4 6a • 6b **9** 63" + 87 16" + 733 14" 531/1° 10/1° 885/6" X 23/1° X 23/1° (x2) (x1) (x1) (x2) (x2) (x1) (x1) (x1) (x2)10a L=~256" B **15**d (x2) x2 drain set (x2)(x2) (x2)(x2) (x2) **▶ B1** (x1) (x38/50/62) **20d** 20b (x5/7/8)(x2)(x2)(x2) Bit PH2 (x16) ~2lbs. (x15) (x90) (x45) (x150) (x50) (x2)(x1)20c € (x2) 20a (x2) (x3)

Tools needed

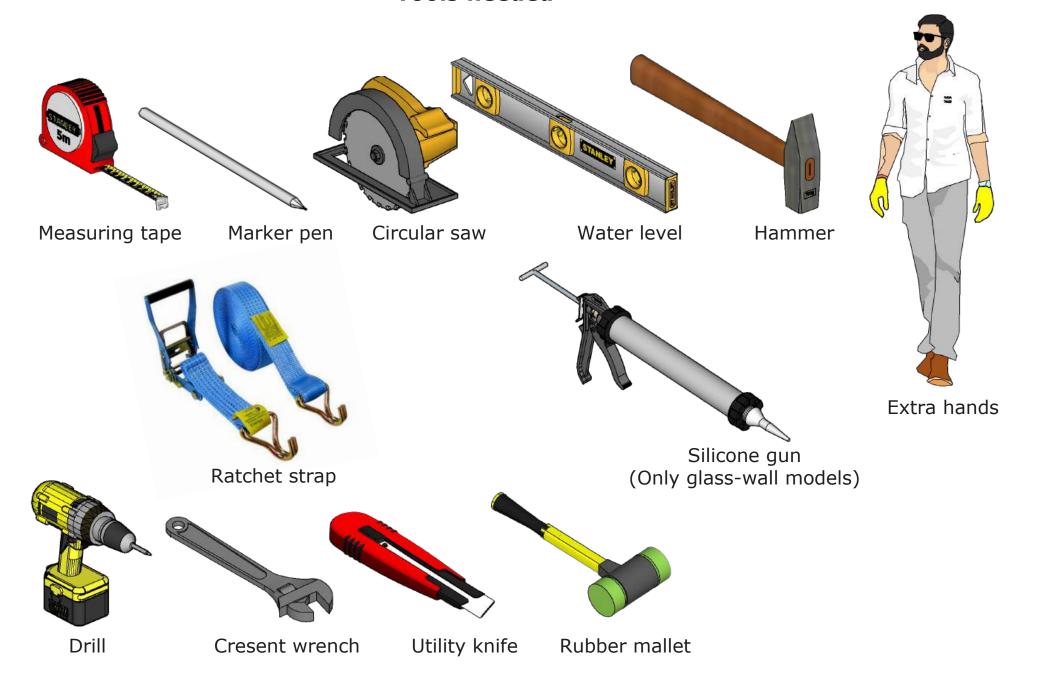


Front glass wall installation

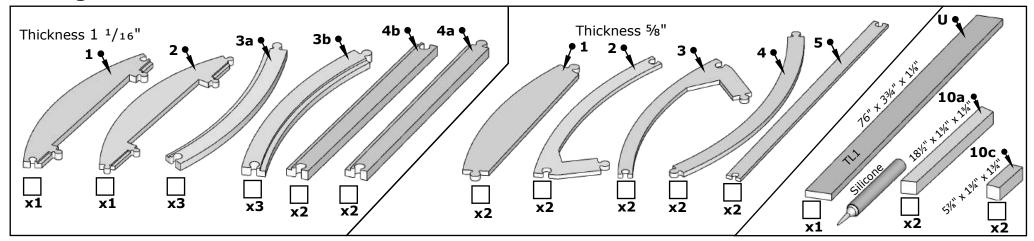


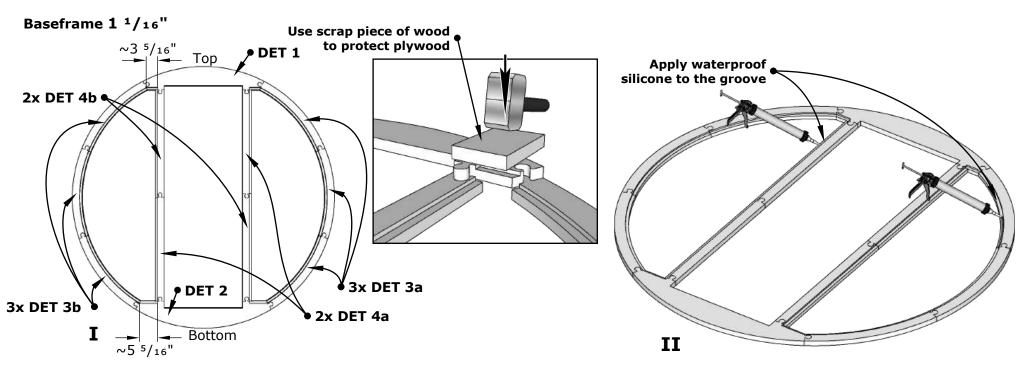


Front glass wall installation

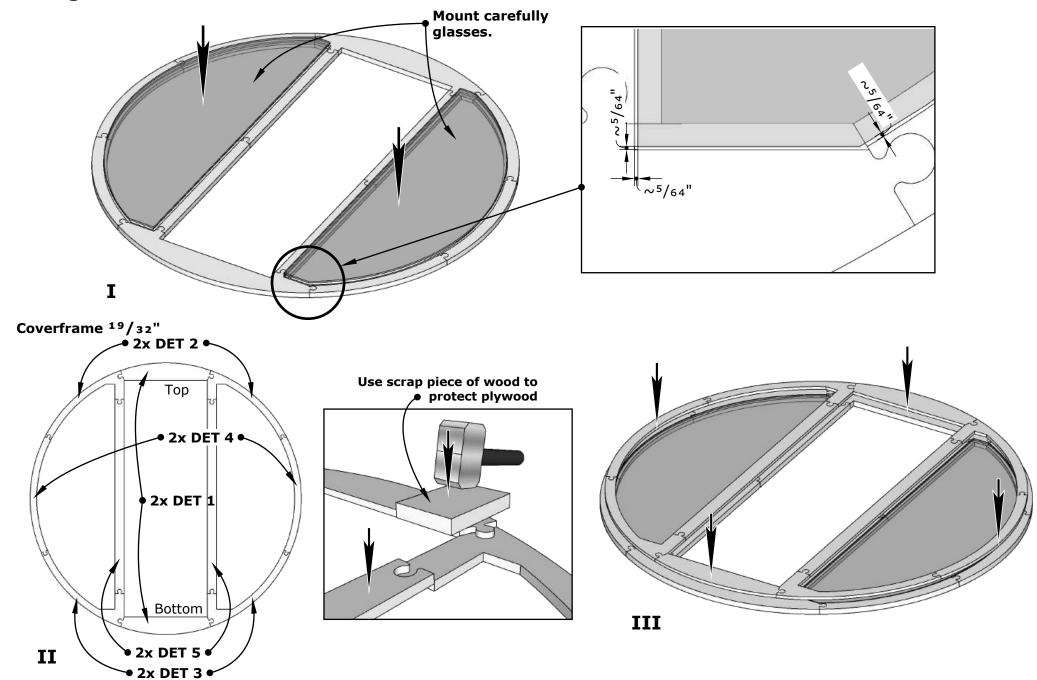



Front glass wall installation

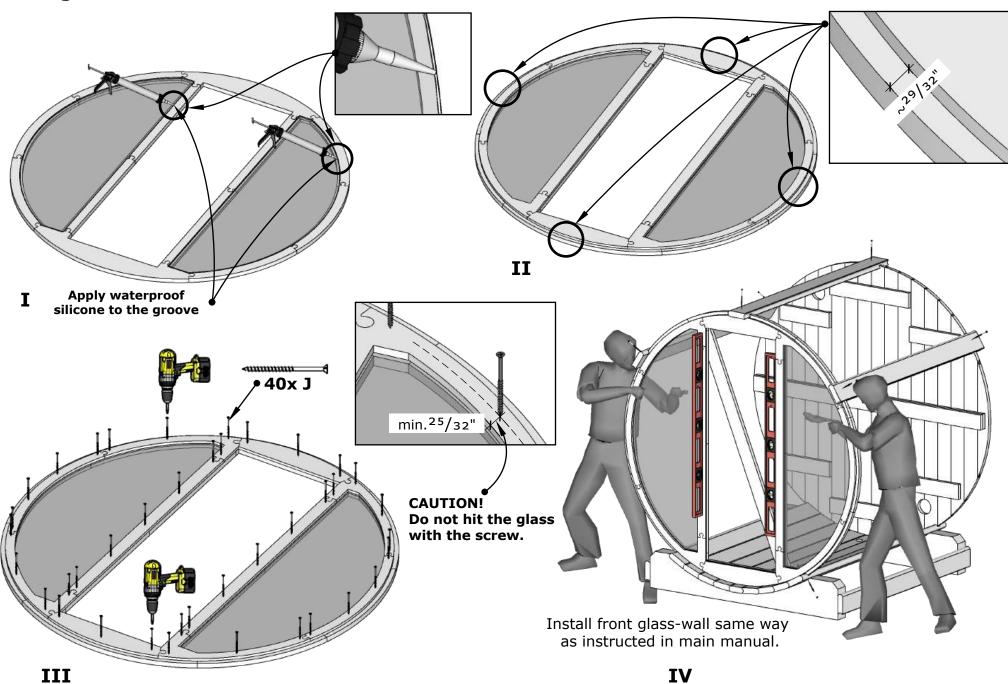


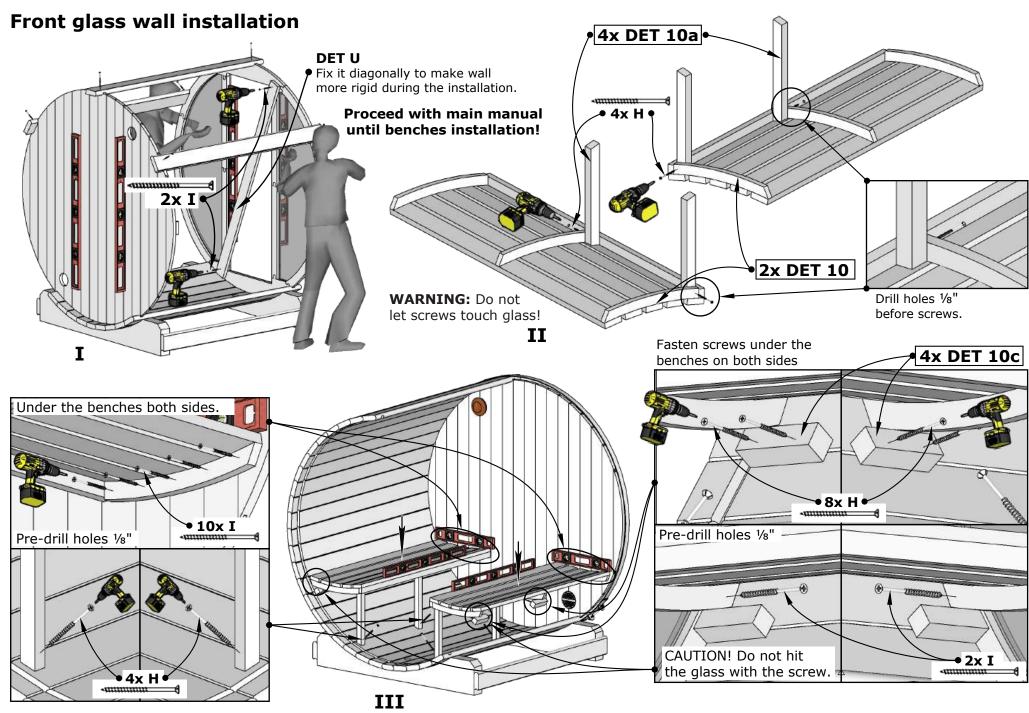



Wooden back wall assembly

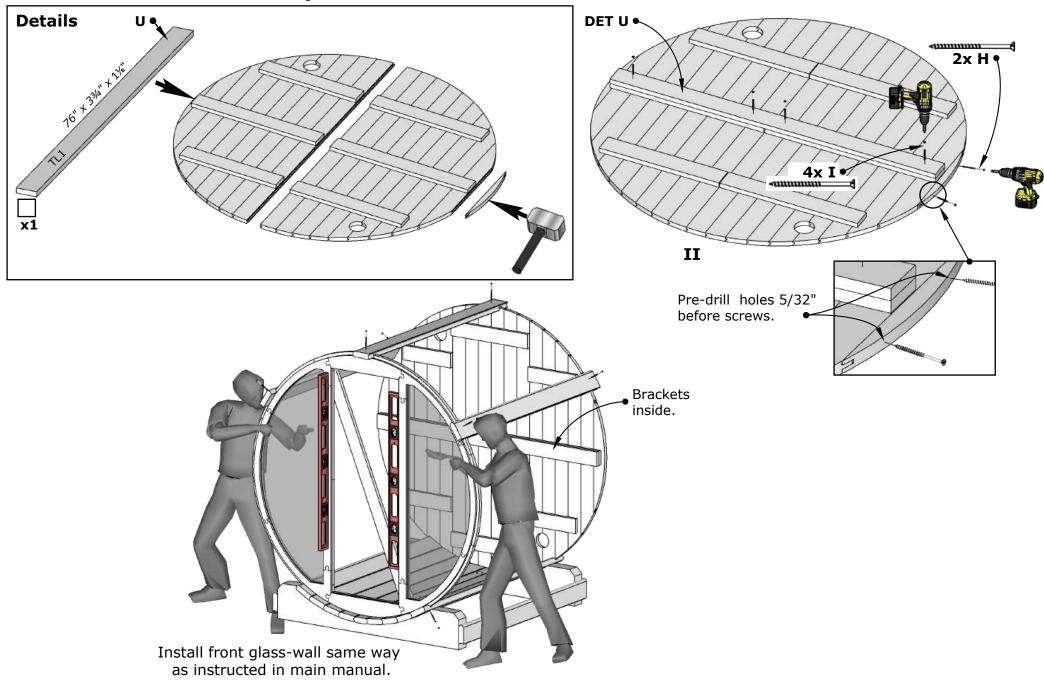


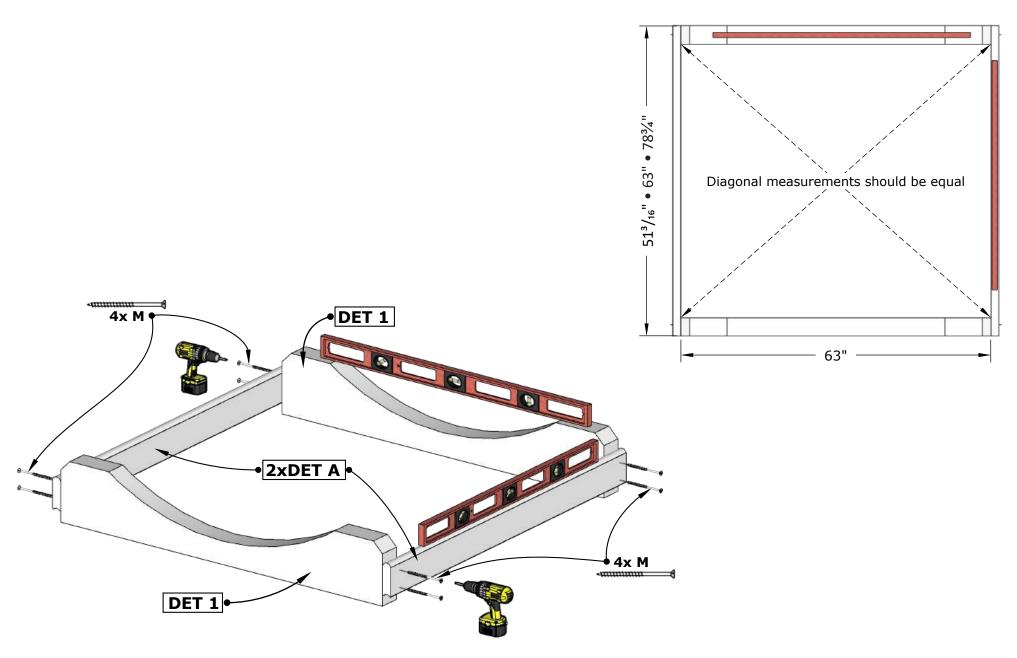


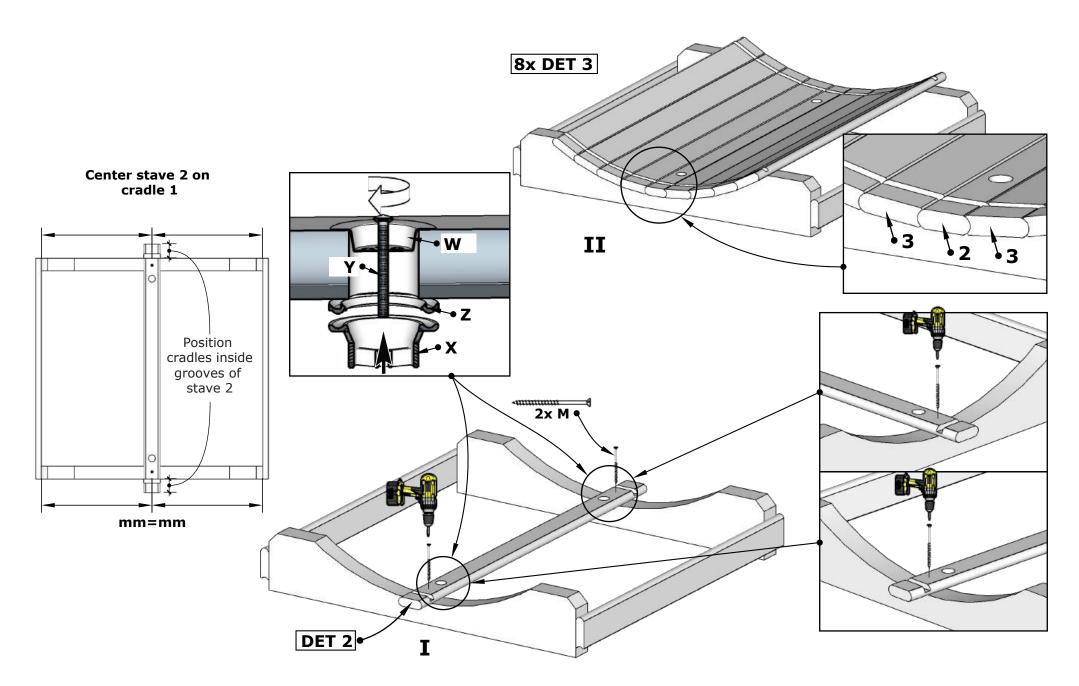

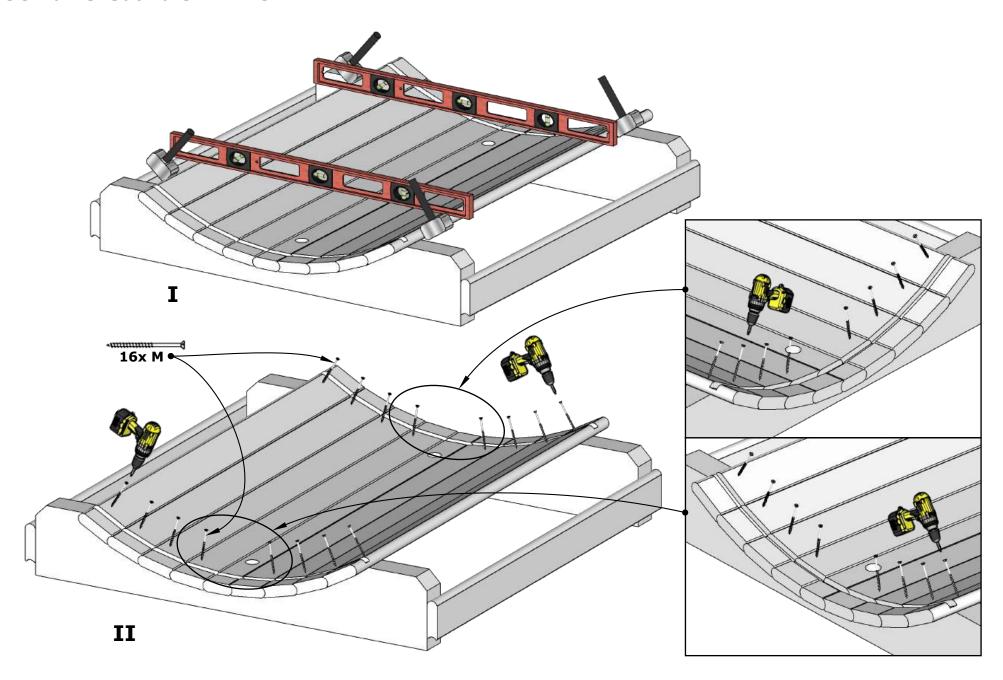

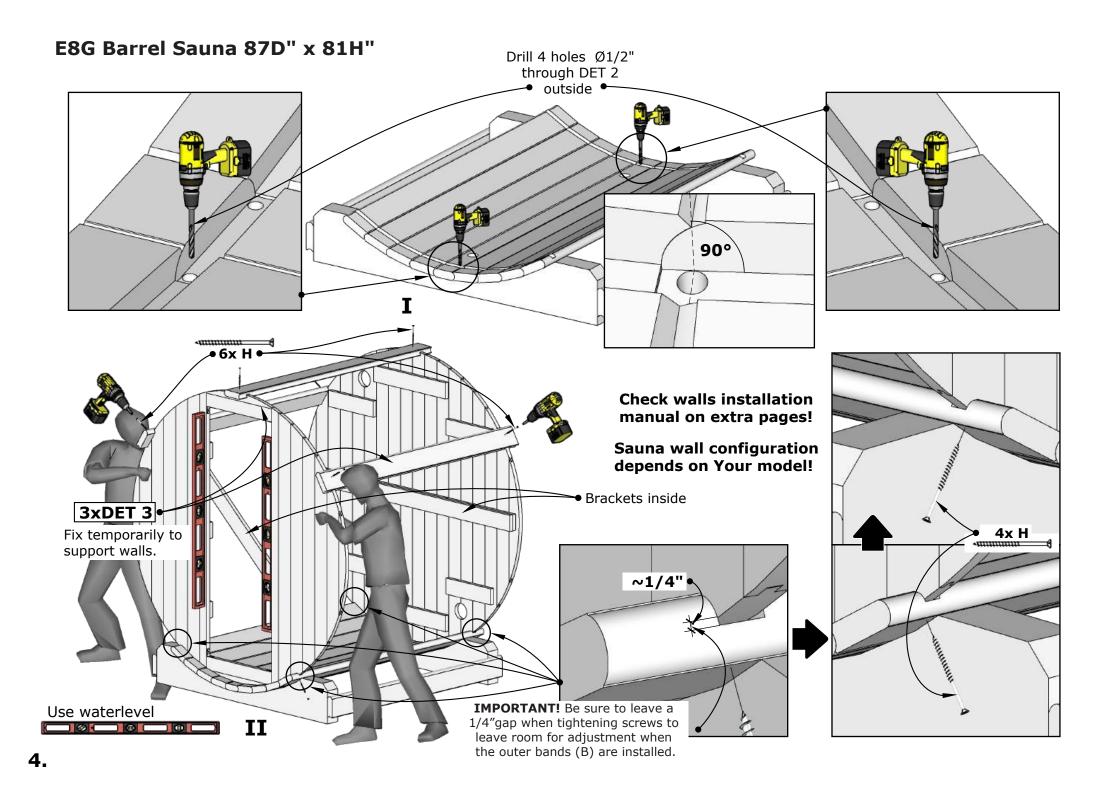


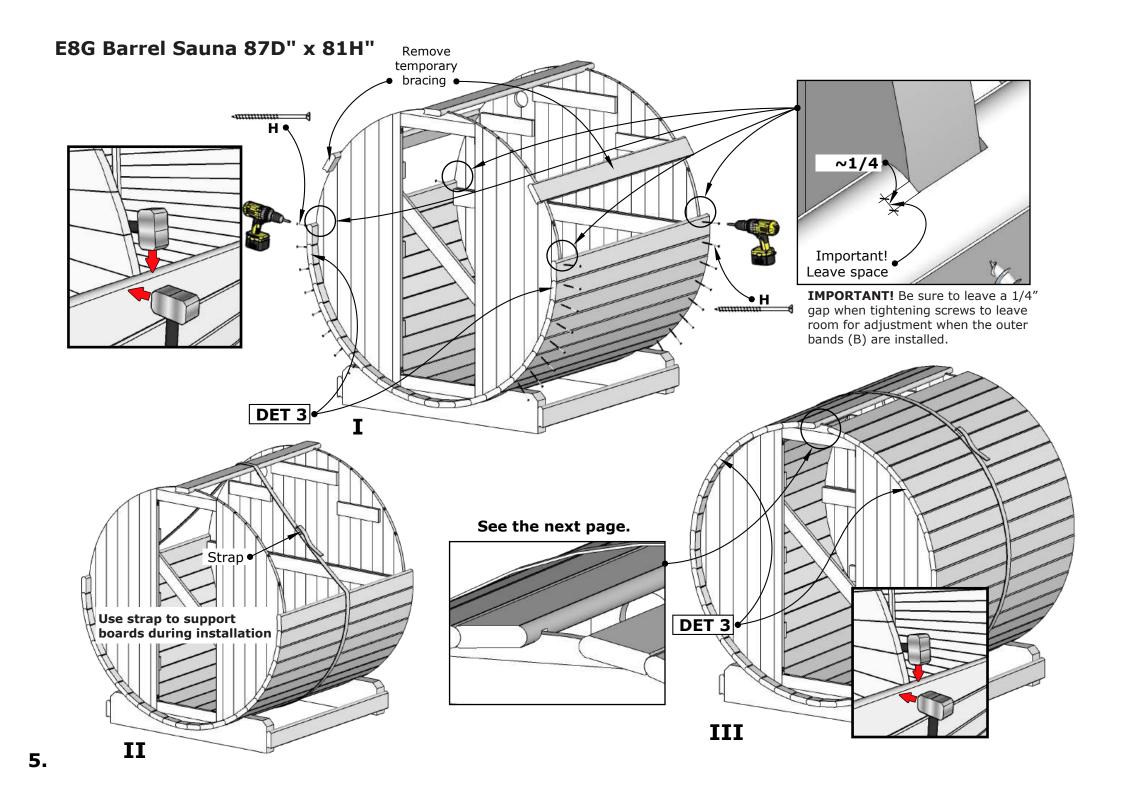


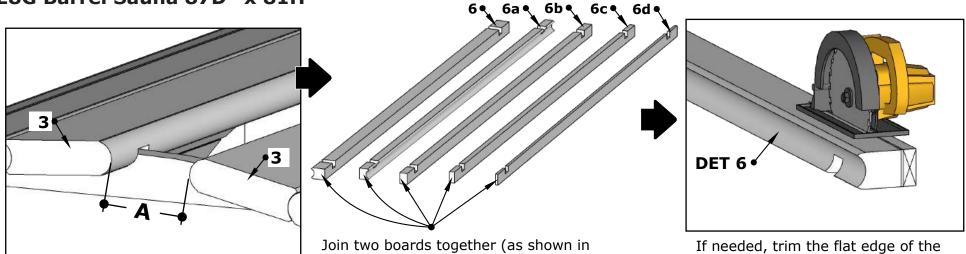

Join two boards together (as shown in diagram II) that will bridge the width of the "A" gap. It is recommended that the combined boards are approximately 1/4" wider than the gap.

Raise slightly before installing

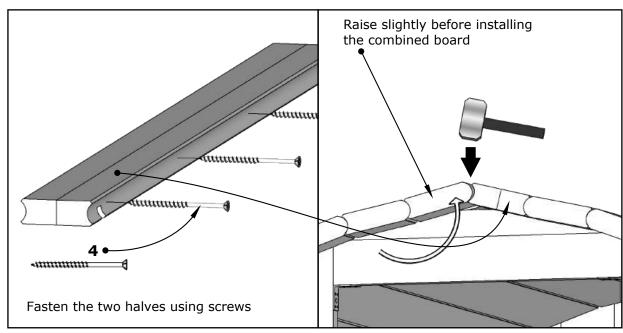

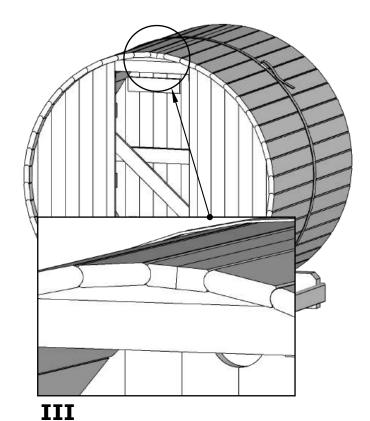

board to create the desired width.

II

Ι

