


Product Name:	Modern Farmhouse V-Open Panel Wood Headboard and Frame Set, Queen/Full
SKU #:	WHIF1885

Thank you for purchasing this Luxen Home product. This product has been manufactured with the highest standards of safety and quality.

PLEASE READ ALL INSTRUCTION CAREFULLY BEFORE ASSEMBLY:





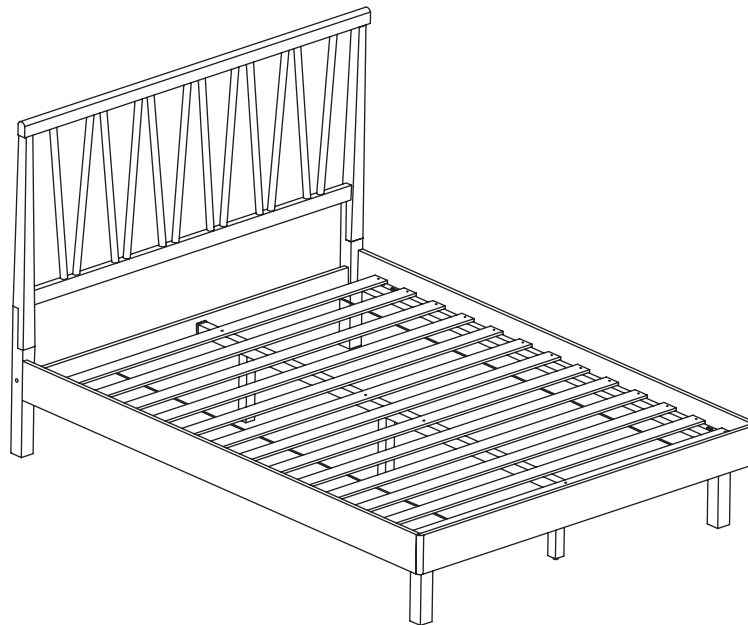










Unpack all parts from the packaging inside the carton to ensure there are no missing or damaged parts. Place all wooden furniture part on a clean and fat soft surface to prevent scratches. Please all woden furniture parts on a clean, flat, soft surface to the prevent scratches. Refer to the step provided below for assembly.

Do not attempt to assemble or use the product if any parts are missing or damaged.



CARTON CONTENTS:





Hardware:

 1 M4 Allen Key x 1	 2 Center Rail Bracket x 2	 3 Adjustable Foot x 3	 4 Wood Screw (M4 x 32mm) x 18
 5 Wood Dowel (10 x 40mm) x 2	 6 M5 Allen Key x 1	 7 Barrel Nut x 5	 8 Spring Washer x 20
 9 Flat Washer x 20	 10 M6 x 15mm JCB x 4	 11 M6 x 40mm JCB x 16	 12 M6 x 20mm JCB x 8
 13 M6 x 90mm JCB x 5	 14 M6 x 50mm JCB x 8	 15 M8 x 50mm JCB x 4	







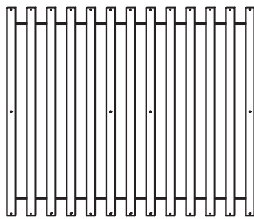
Product Name:	Modern Farmhouse V-Open Panel Wood Headboard and Frame Set, Queen/Full
SKU #:	WHIF1885

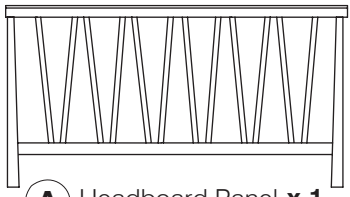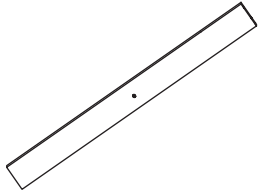Part List

Parts in Box A :


 A Headboard Panel x 1	 B Headboard Support x 1	 C Headboard Post (Right) x 1	 D Headboard Post (Left) x 1
--	--	---	--

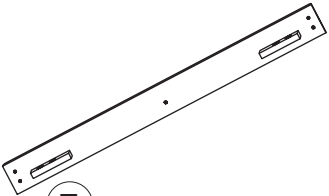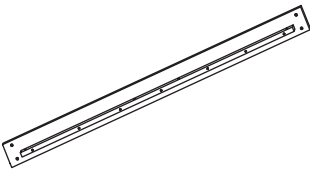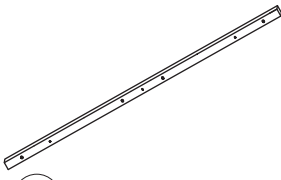Parts in Box B:

 E Footboard Panel x 1	 F Side Rail x 2	 G Long Support x 1	 H Support Panel x 2
 J Support Leg x 3	 K Footboard Post x 2	 L Set of Bed Slats x 1	


Assembly:

Step 1: Assembled the Support Leg (J) to the Long Support (G).

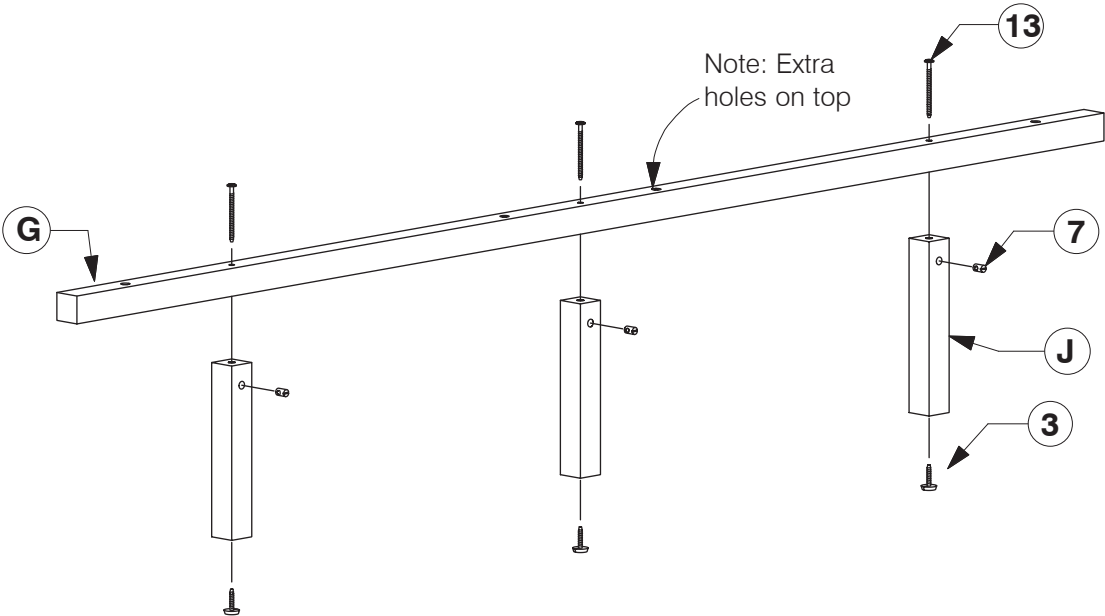


Product Name:	Modern Farmhouse V-Open Panel Wood Headboard and Frame Set, Queen/Full
SKU #:	WHIF1885

Step 2: Fit the Post (K) to the Support Panel (H).

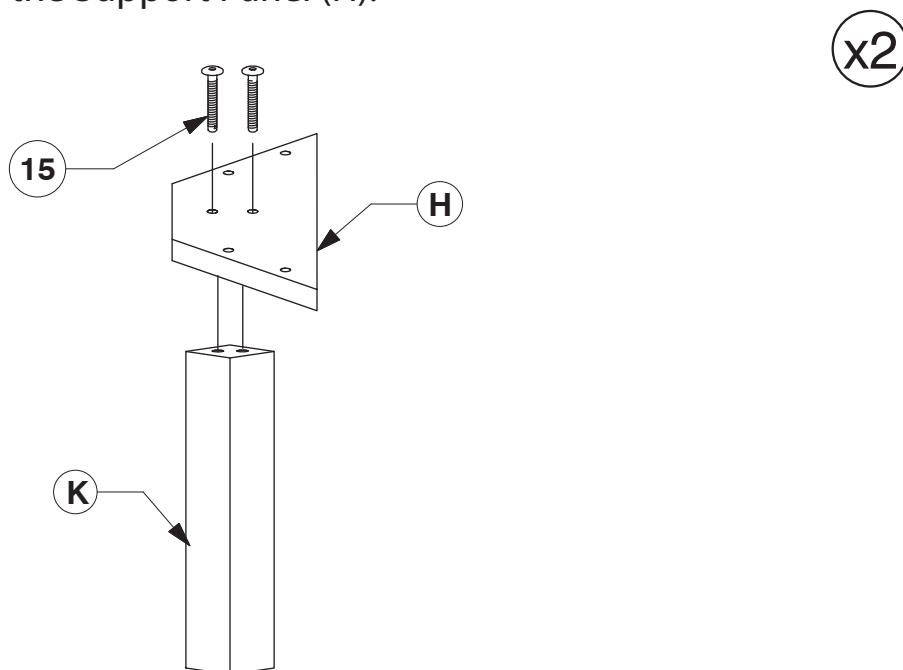


Step 3: Fit the Center Rail Bracket (2) to the Footboard Panel (E).
Assemble the Footboard Panel (E) to the Leg Footboard Post (K).

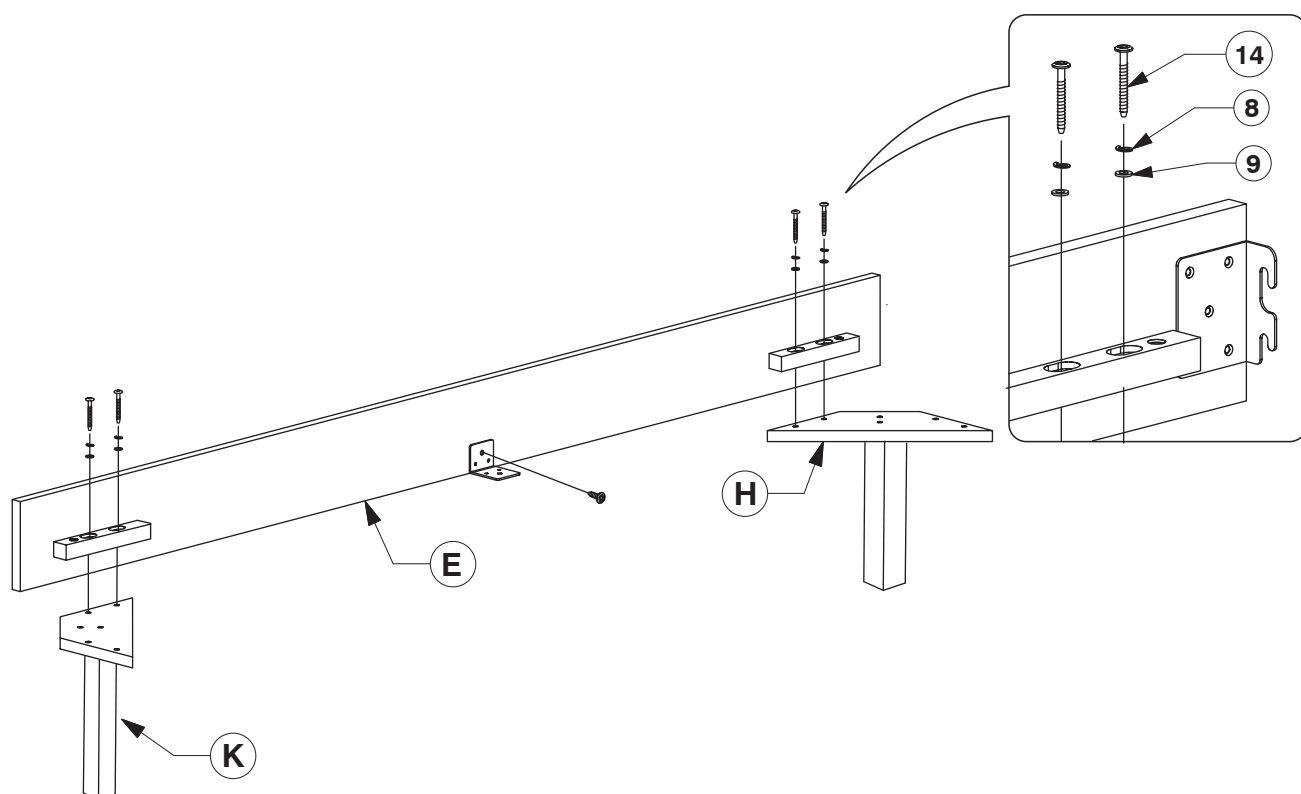


Product Name:	Modern Farmhouse V-Open Panel Wood Headboard and Frame Set, Queen/Full
SKU #:	WHIF1885

Step 4: Fit the Center Rail Bracket (2) to the Headboard Support (B).
Assemble Post (C & D) to the Headboard Support (B).

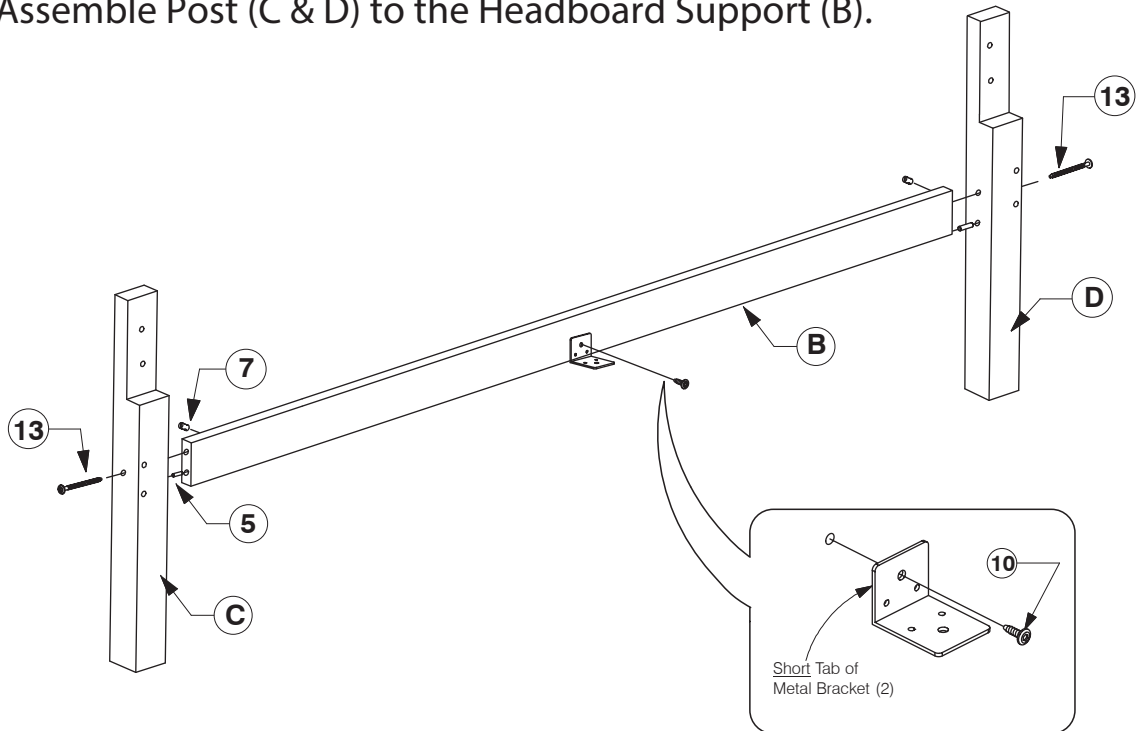


Step 5: Fit the Headboard Panel (A) to the Headboard Post (C & D).

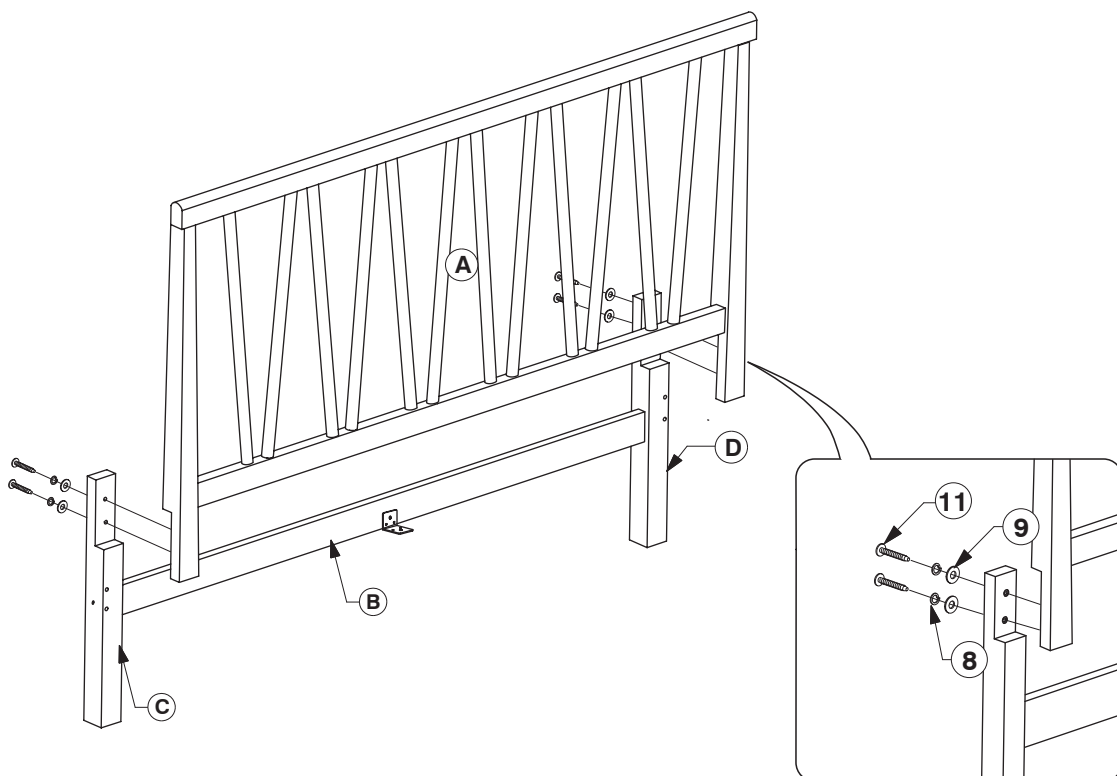


Product Name:	Modern Farmhouse V-Open Panel Wood Headboard and Frame Set, Queen/Full
SKU #:	WHIF1885

Step 6: Headboard Post (C & D) and Footboard Panel (E).

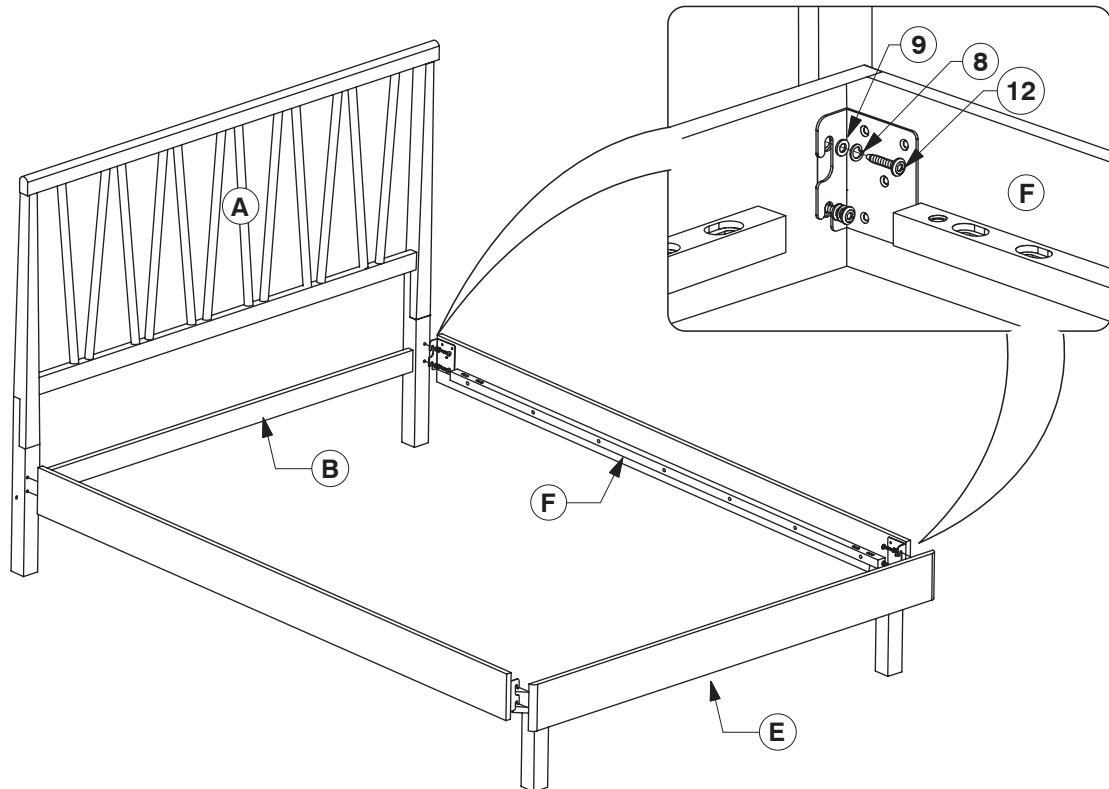


Step 7: Bolt the Long Support (G) to the Center Rail Brackets (2) on the Headboard Support (B) & Footboard Panel (E).

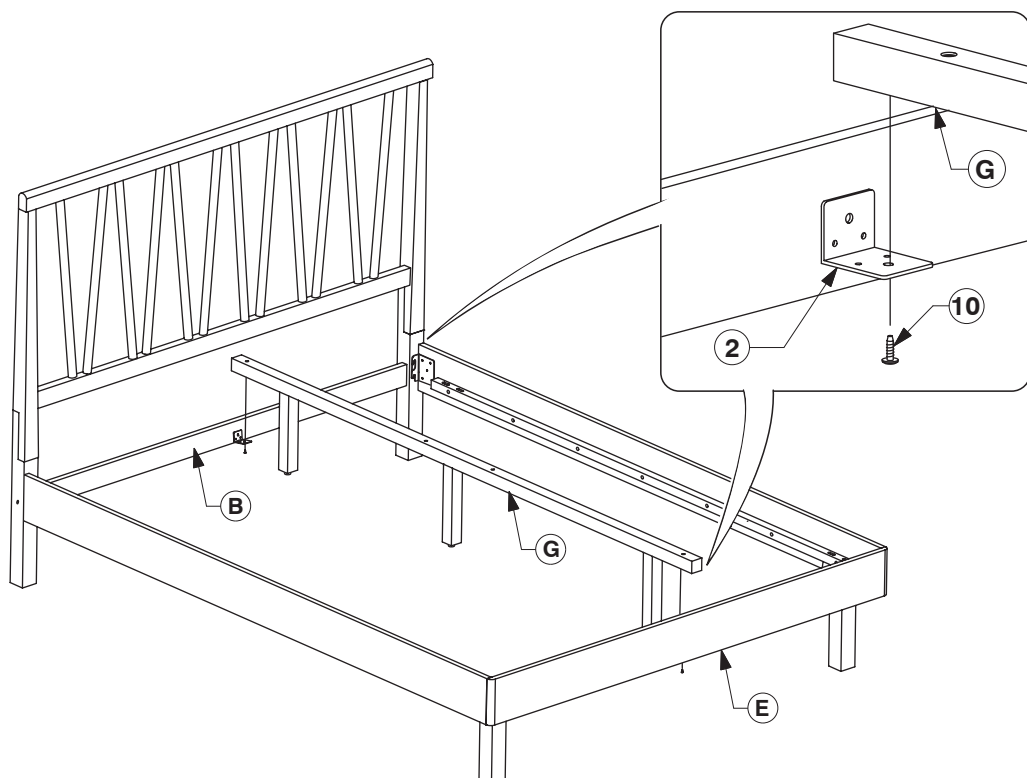

Product Name:	Modern Farmhouse V-Open Panel Wood Headboard and Frame Set, Queen/Full
SKU #:	WHIF1885

Step 8: Screw the Bed Slats (L) to the Side Rail (F).

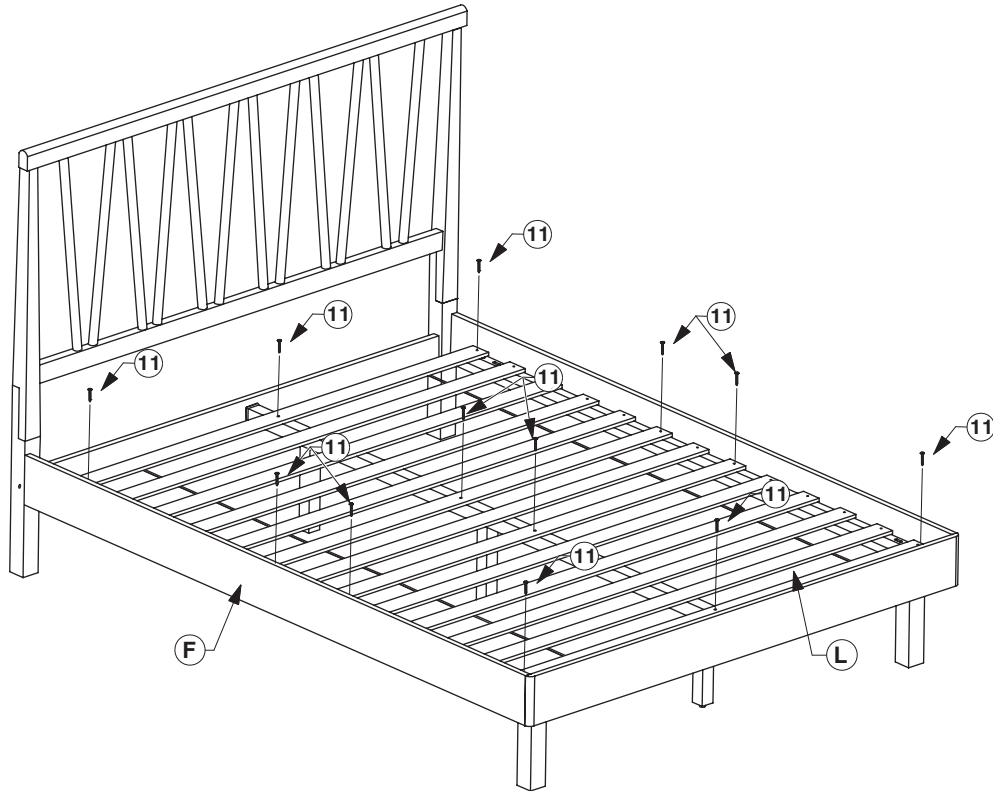

Step 9: Bolt the Bed Slats (L) to the Side Rail (F).

