



QUICK START GUIDE


Packing List

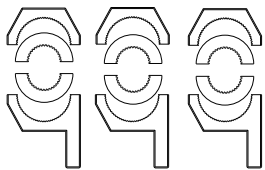


Round Clamp Bracket Kit*3

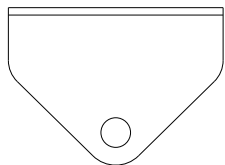


Lawn mower trailer hook*1

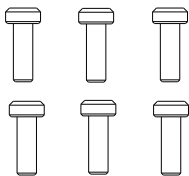

Round head bolt M5*6

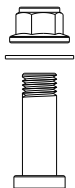

Shoulder bolt with washer and nut M8*1

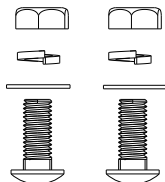


Square neck bolts with washer and nut M8*2




L-Shaped wrench*1

Towing Hitch Compatibility Diagram


*Install trailer ball

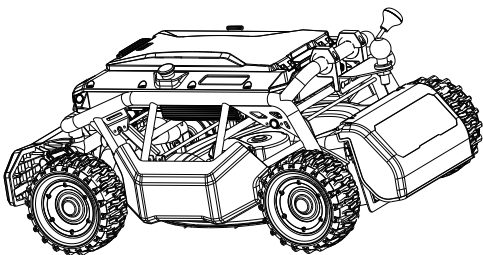

*Install latch

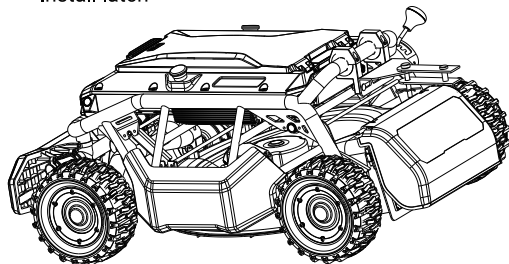


*Install the bracelet

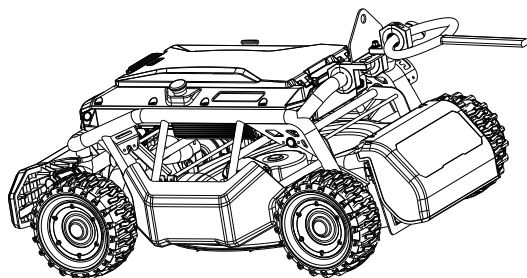



Assembly Instructions

Step 1: Install the clamp base and trailer hook

(Tighten all the bolts and nuts)

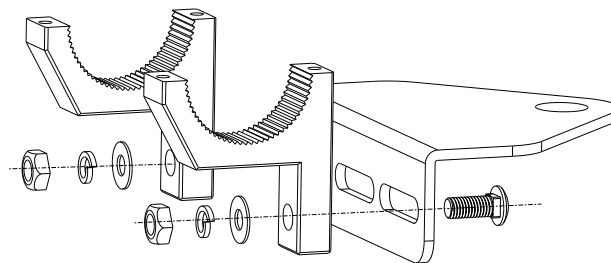


Step 2: Install in the middle of the handle

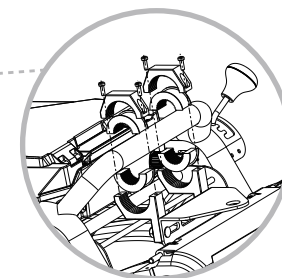
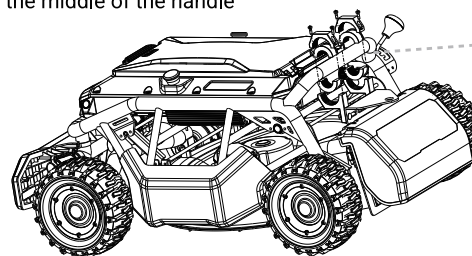


(Select the suitable soft gel based on requirements.)

Step 3: Adjust trailer hook

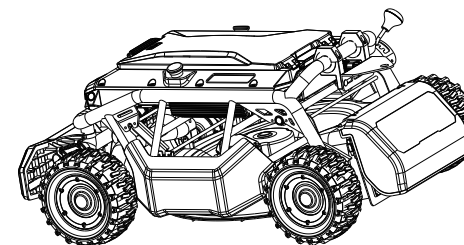

Step 4: Install the third clamp(optional)

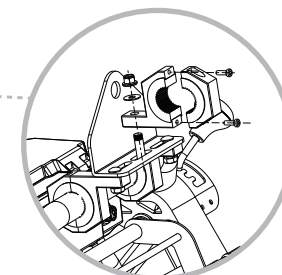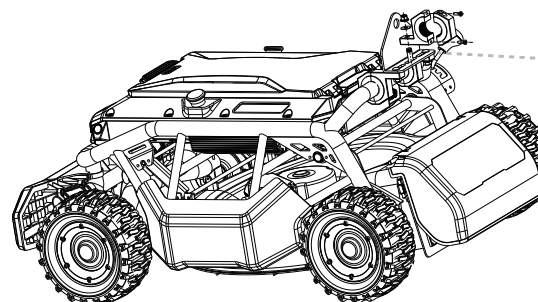

(Towing hitch compatibility diagram)