



2023+ Skidoo G5 850 Muffler Install

Difficulty: 3/10

Estimated Time: 30 Minutes

Tools Required: 10mm Socket, ratchet, extension, spring puller or shoelace, flathead screwdriver, 17mm wrench

Step 1: Remove side panel

Step 2: Remove 4 exhaust springs from the turbo down pipe to stock muffler.

Step 3: Use a 10mm socket and extension and remove the top muffler mount bolt.

Step 4: Use a 17mm wrench and remove the EGT probe from the bottom side of the oem muffler.

Step 5: Lift up on the turbo down pipe and remove the oem muffler from the sled.

Step 6: Prepare the sled and new silencer for installation. Install the rubber grommets onto the new silencer.

Step 7: You need to reroute the EGT sensor wire behind the chain case, this will give you enough wire to install the sensor into the new silencer.

Step 8: Use reflective heat tape on all plastic body panels. (This is very important to prevent any damage to your panels.)



Step 9: Install the new silencers onto the sled, we suggest using a small film of high temp silicone around the exhaust donut gasket.




2023+ Skidoo G5 850 Muffler Install

Step 10: Install the top mount bolt using a 10mm socket.

Step 11: Install the 4 exhaust springs.



Step 12: Install the EGT sensor into the new silencer. Tighten with a 17mm wrench.

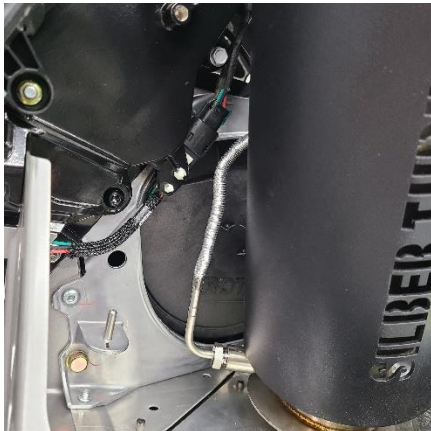

Step 13: Double check your work and your ready to ride! Enjoy your new Silber Turbos silencers.

