Assembly Instructions -6Ft-

Tools Needed:


- Hammer
- Pneumatic Brad Nailer (Preferred)
- Power drill
- Level
- Power miter saw (Preferred)
- $\frac{3}{32}$ " pilot drill
- Nail Set
- Wood filler (Optional)
- 180 grit sand paper (Optional)

Tips:

- 1. Using pneumatic brad nailer will make assembly quicker and easier.
- 2. Before opening any boxes, if multiple units and different units have been ordered, please assemble all boxes by units to ensure that specific unit parts are not intermixed with other units.
- 3. It is highly recommended to $drill \frac{3}{32}$ dia pilot holes on back cross pieces for #8x3 " screws before attaching to wall.

<u>Fasteners</u>

- $l\frac{1}{4}$ " finishing nails to fasten cross pieces
- $l\frac{1}{4}$ " brad nails if using pneumatic brad nailer
- $#8x1\frac{1}{4}$ " screws to attach to other modules
- #8x2" screws for attaching racks to wall

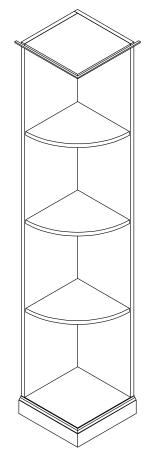


6ft Premier Cru Kit Rack Apr/23/2012



Toll Free: 1-888-253-6807 www.**R**osehill**W**ine**C**ellars.com

Quarter Round Corner Shelf


1

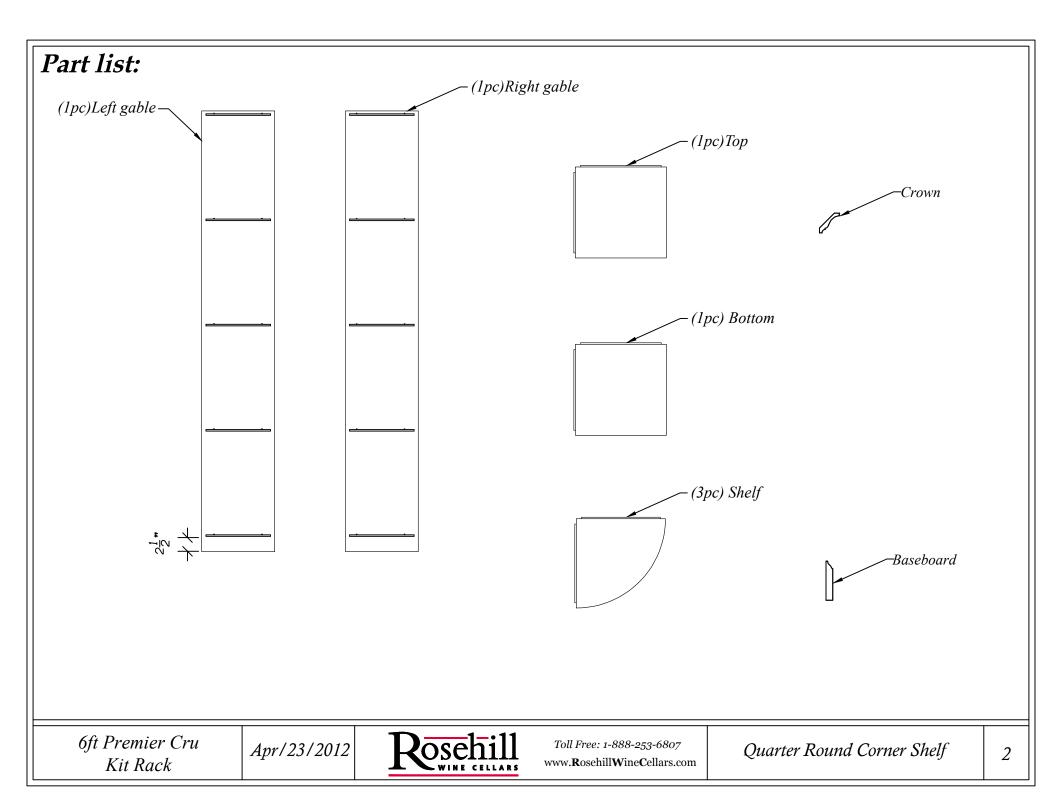

Step 1

Attaching top, bottom and shelves to the LEFT gable.


Install as shown, making sure tenons are located on the bottom of all shelves (including top and bottom). Left gable has pre-drilled $\frac{3}{32}$ " pilot holes. Use #8x2" screws to fasten gable to all shelves, top and bottom.

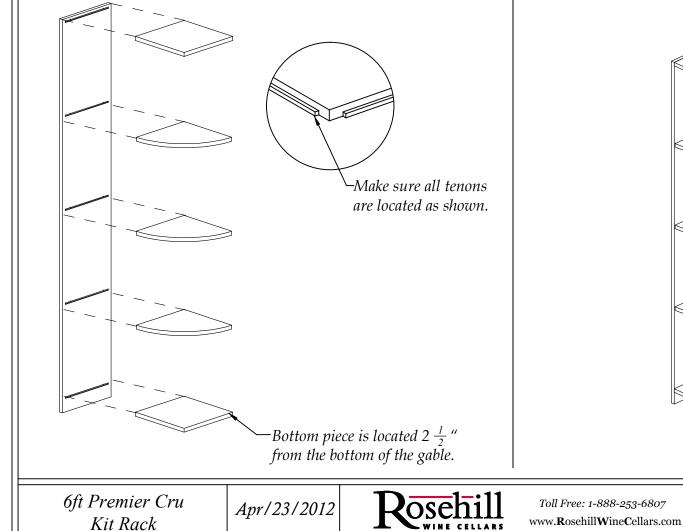

Step 2

Attaching **RIGHT** gable.

Fasten right gable to all shelves (including top and bottom) as shown using #8x2'' screws. Fasten right gable to left gable using pre-drilled $\frac{3}{32}''$ pilot holes and #8x2'' screws.

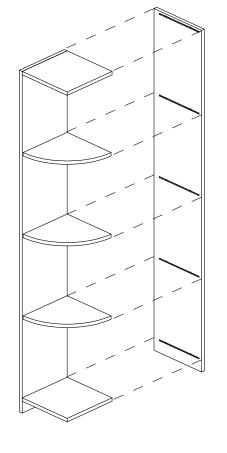

Quarter Round Corner Shelf

Step 3

Ataching to the wall.

6ft Premier Cru

Kit Rack

Fasten to the wall through the back using #8x2'' screws and using a level to make sure the shelf is mounted square on the wall. Make sure gable has $\frac{3}{32}''$ dia pilot holes drilled before screwing to the wall.

