


Installation Manual

TAH17-FL-D970
TAH17-FL-T970

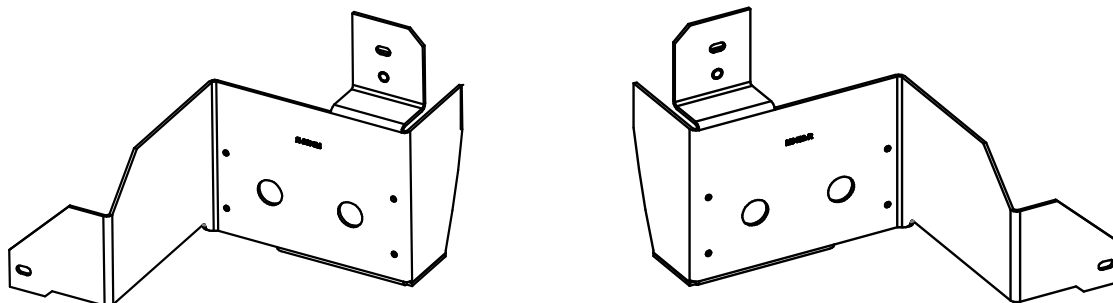

Installation Manual

Installation

Step 1: Remove the front bumper and locate the fog light cover plate. Remove the four screws holding the cover plate in place. Set the cover plate aside.

Passenger side shown. View from behind the grille.



Note: Assemble lamps and lamp bezels to brackets if needed with self-tapping screws.

Left/Driver – P0 Lamp (not labeled) and bracket marked -L

Right/Passenger – P1 Lamp (labeled) and bracket marked -R

Step 2: Align the Fog Lamp bracket with the two mounting holes as shown below. Use the hardware removed in Step 1 to secure the bracket to the bumper.

Passenger side shown. View from behind the grille.

