

Thank you for choosing the Pro-Spec Easy Ride windscreen extender. The extender is height adjustable to ensure added riding comfort.

Please follow the instruction carefully to ensure the desired benefit of the extender.

Remove the two Lock Screws (7) from the clip-on set.

Place the screen with the front clamp over the slot provided in the height adjustment Slider (2). Tighten the front clamp along with the slider with the help of the Lock Screws (7) as shown in figure “b”.

Loosen the CSK Allen Head Screws (6) using the Allen key provided and position the extender symmetrically and tighten it back.

*Note: Some parts are pre-assembled, though the Easy Ride is designed for DIY installation, it is recommended you have the Easy Ride installed by a technician if you face difficulty.*

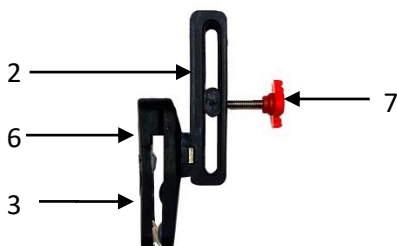


Fig: a

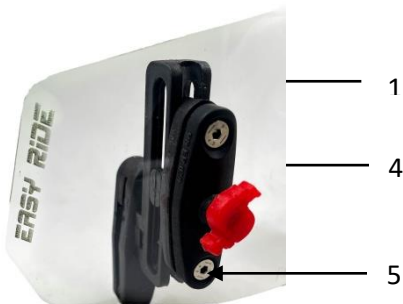


Fig: b



Extender to be cleaned using water, neutral soap and sponge or microfiber cloth.

Never wipe using dry cloth or use solvent as they may scratch or damage the surface texture permanently.

Please clean the OE screen for any antiscratch chemical coating as this would affect the ability of the clamp to hold the Screen.

Sl.	DESCRIPTION	QTY.
1	Screen	1
2	Height Adjustment Slider (set)	1
3	Clip on Mount (set)	1
4	Front Clamp (set)	1
5	CSK Allen Head Screw M4 x 16	4
6	CSK Allen Head Screw M4 X 12	2
7	Height Adjusting Lock Screws (set)	1
8	2.5mm Allen Key	1

*Note: For windscreen thickness 3 – 5 mm*

### Pro-Spec Performance Parts

4th Floor, No.5C-501, George Court, 5th C Main Rd,  
HRBR Layout 2nd Block,  
Bangalore -560043, Karnataka, INDIA.  
+91 9620484111 contact@prospec.co.in

