

ABOUT

Choosing stone as a handle seems as a contradiction as a handle is an object which is in the closest contact with the users. Stone is cold but at the same time it gives that special something. Simple yet functional cross-section ensure that the handle reflects the core beauty of the stone as a material.

CARE & MAINTENANCE

Wipe clean with a damp cloth. Wipe dry with a clean cloth. Do not use household cleaners.

DISCLAIMER

Stone is a natural material, therefore minor imperfections are part of its beauty and complaints on that matter will not be accepted.

These handles are extremely fragile, please handle with extra care.


Damage caused by inappropriate handling will not be considered for refund or exchange.

YEAR & COUNTRY OF PRODUCTION

Croatia 2023


Thank you for choosing BRID.

Product Fact Sheet
For more information visit studiobrid.com

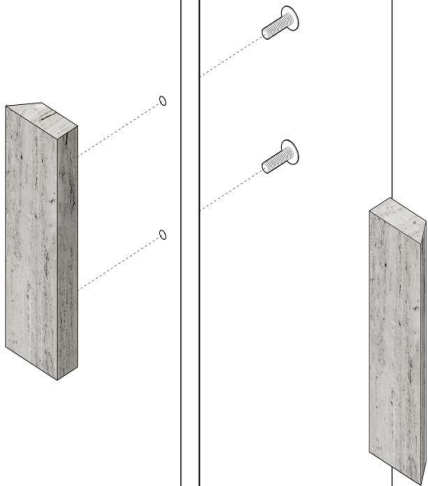

brid

between less and more

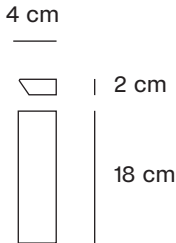

PRODUCT TYPE

handle

MATERIAL

travertine

FINISH

leather, impregnated

DIMENSION

2 x 4 x h 18 cm

WEIGHT PER PAIR

1.5 kg

COLOR

black

PACKED

set of 2

BOLD SHORT
NERO ASSOLUTO
01-BS/S/N

brid


ASSEMBLY

Set includes two handles, instructions and mounting screws. Screws included are suitable for door thickness 16-21mm.


Seek professional help for best mounting result. Please read the instructions. If you need further assistance, do not hesitate to contact us. All drawings are schematic on this product sheet. They do not reflect bought handle nor exact measurements, so please take these steps just as a principle on how to mount BRID handles in general.

MOUNTING STEPS


O Make sure you have everything you need. We advise to seek for professional help to prevent damage of property or personal injury.

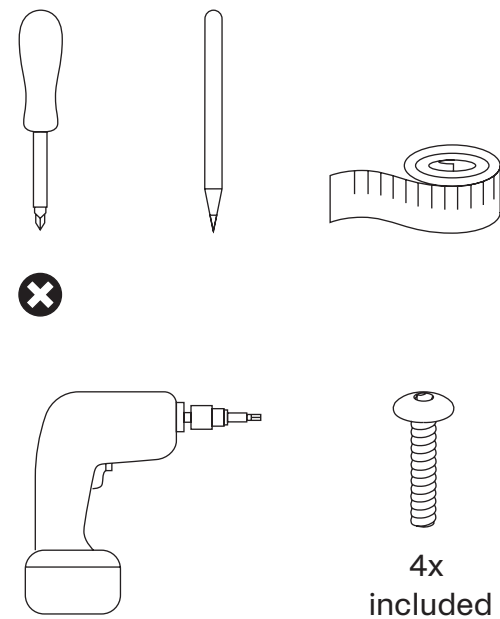

1 Measure the distance between screw holes.

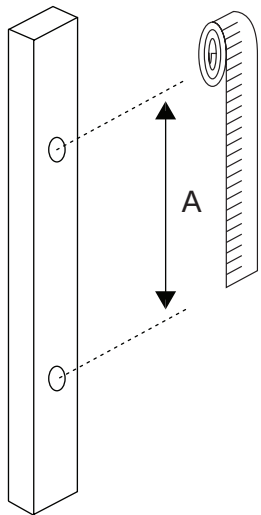


2 Mark the measured screw hole distance at the back of the wardrobe door where you wish to position your handles.

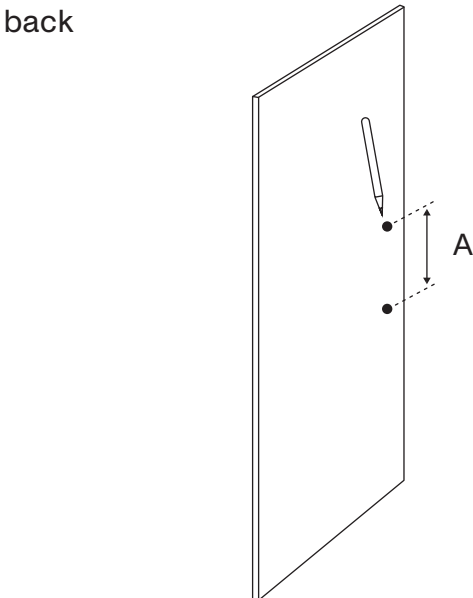


3 Use the drill to drill the previously marked holes at the back. Make sure to use adequate drill bits for screws provided.

back

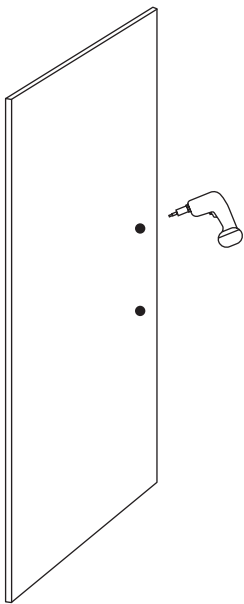


4 Align the holes on the handles at the front with drill holes. Use the screws provided to tighten the handle with screwdriver. Use equal amount of force to tighten each screw in order to avoid cracks on the handle.

back

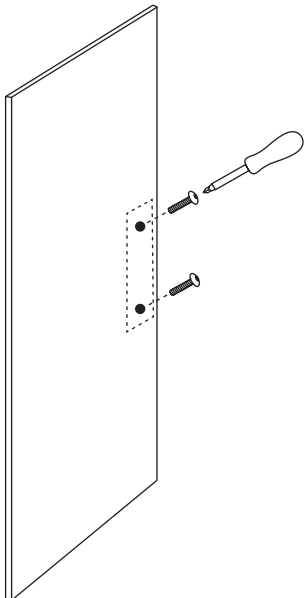

5 Enjoy your new handles!

front

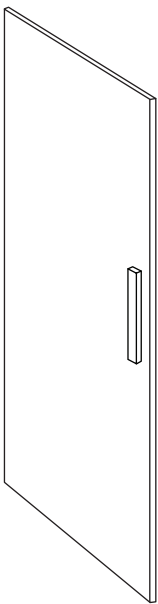

6 For any inquiries or help, contact brid@studiobrid.com