

ABOUT
'Often sought out, but never found is what was the inspiration behind this piece.'
A simple L — section with bold elevation is designed so that it can fit in both subtle and eclectic interiors and still retain its beauty. Oak in two finishes offers a variety of matching options for each background possible.

CARE & MAINTENANCE
Wipe clean with a damp cloth. Wipe dry with a clean cloth. Do not use household cleaners.


DISCLAIMER
Wood is a natural material, therefore minor imperfections are part of its beauty and complaints on that matter will not be accepted.

These handles are extremely fragile, please handle with extra care.

Damage caused by inappropriate handling will not be considered for refund or exchange

YEAR & COUNTRY OF PRODUCTION
Croatia 2023

Thank you for choosing BRID.

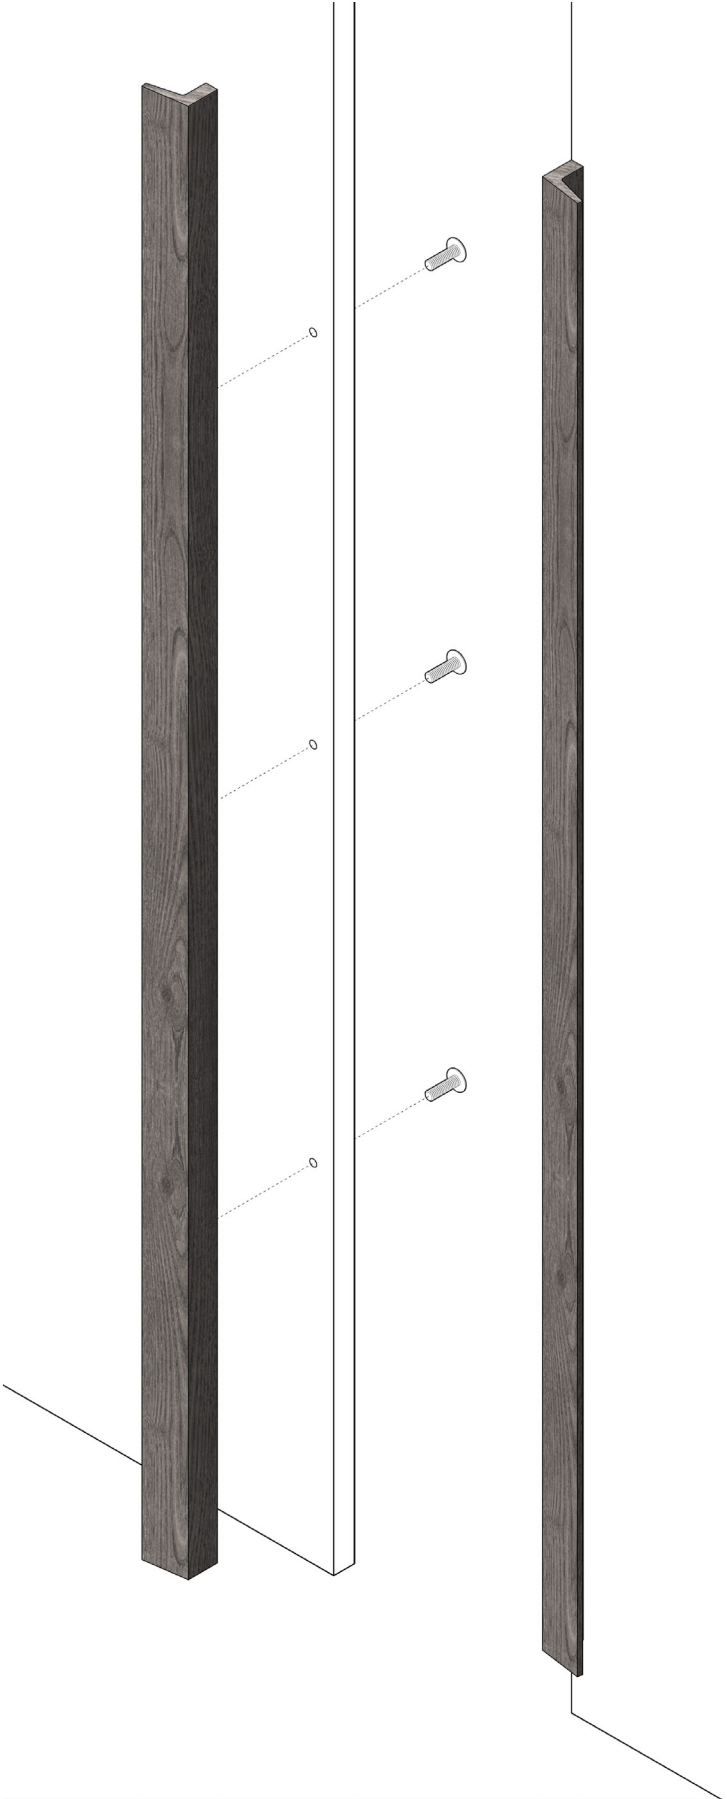


Product Fact Sheet
For more information visit studiobrid.com

brid

brid

between less and more

L
OAK
01-L/W/N

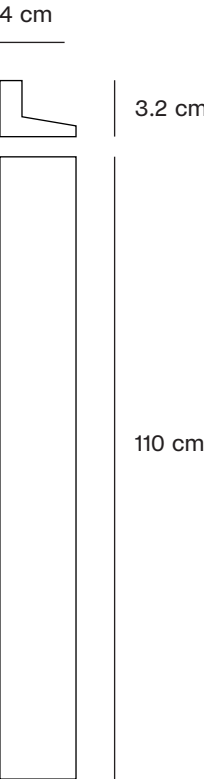

PRODUCT TYPE
handle

MATERIAL
oak

FINISH
natural, oiled

DIMENSION
3.2 x 4 x h 110 cm

WEIGHT PER PAIR
1.5 kg

COLOR
brown

PACKED
set of 2


ASSEMBLY

Set includes two handles, instructions and mounting screws. Screws included are suitable for door thickness 16-21mm.


Seek professional help for best mounting result. Please read the instructions. If you need further assistance, do not hesitate to contact us. All drawings are schematic on this product sheet. They do not reflect bought handle nor exact measurements, so please take these steps just as a principle on how to mount BRID handles in general.

MOUNTING STEPS


O Make sure you have everything you need. We advise to seek for professional help to prevent damage of property or personal injury.

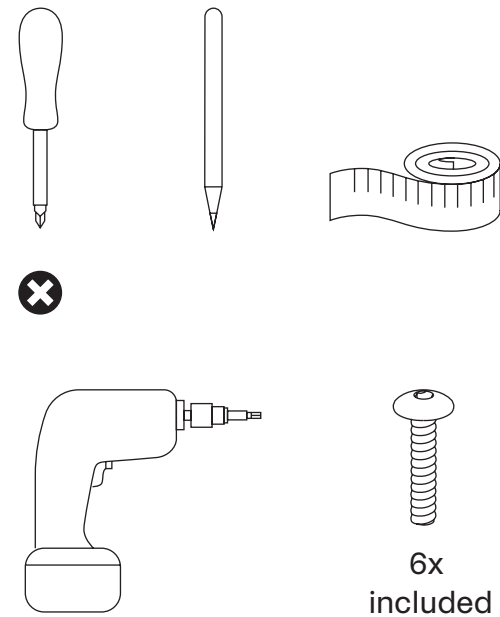

1 Measure the distance between screw holes.

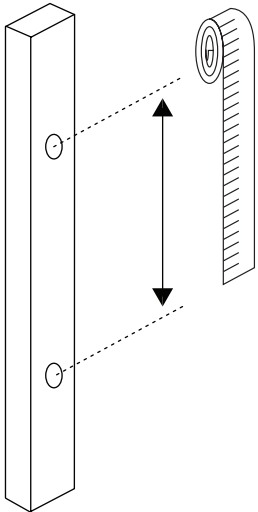


2 Mark the measured screw hole distance at the back of the wardrobe door where you wish to position your handles.

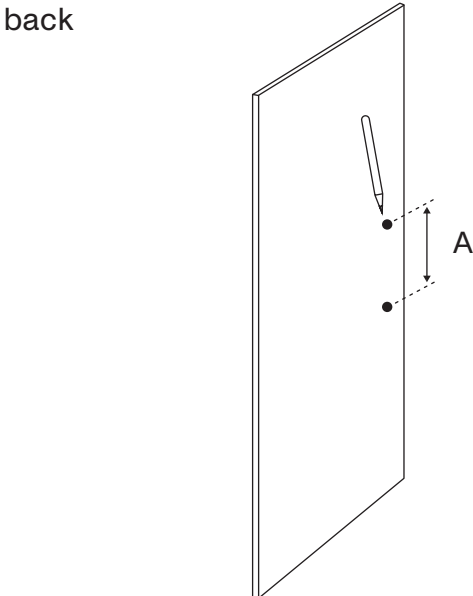


3 Use the drill to drill the previously marked holes at the back. Make sure to use adequate drill bits for screws provided.

back

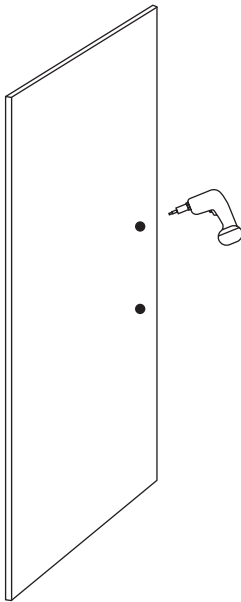


4 Align the holes on the handles at the front with drill holes. Use the screws provided to tighten the handle with screwdriver. Use equal amount of force to tighten each screw in order to avoid cracks on the handle.

back

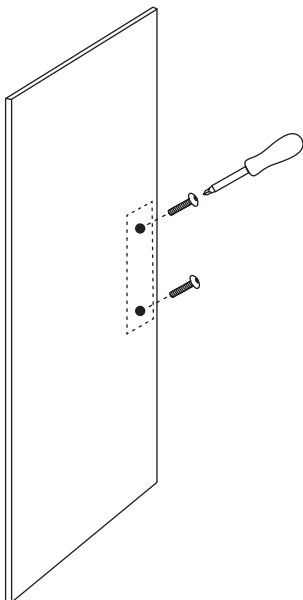

5 Enjoy your new handles!

front

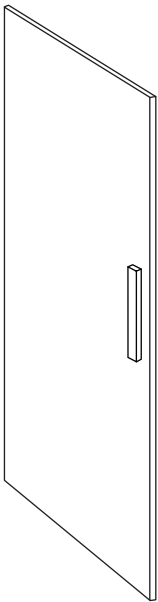

6 For any inquiries or help, contact brid@studiobrid.com