

BriteSign

Elegant by day BRILLIANT at night

Contemporary Acrylic Address Plaque With Light Clamp



Contemporary Acrylic Address Plaque With Light Clamp



BriteSign

Fitting Instructions:

This product has been designed for D-I-Y installation, if you are unsure of any aspect please consult a qualified electrician.

Please read these instructions carefully, it will save you TIME **MONEY** & WORRY

You will need the following tools to complete the full installation of your Excelsior Sign package.

MARKING TOOL/PENCIL (To mark hole positions) SMALL PHILIPS SCREWDRIVER POWER TOOL (To drill fixing holes)

Please check contents before you proceed -

NOTE THE "RED" WIRE IS THE LIVE FEED

I x Aluminium LED Light Clamp

I x Composite decorative support panel

I x Glass Look Acrylic panel

1 x Transformer

2 x Wall Plugs 🔷





2 x Screws //

I x Allen Key

STEP 1

Offer Aluminium Panel to wall & Mark Fixing Hole Positions




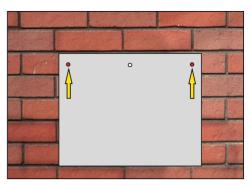

STEP 2

Drill holes for wall plugs and a through hole for wire leads. Insert Wall Plugs.



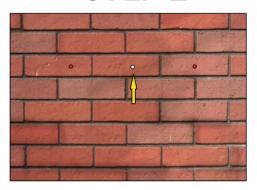


Using Allen Key loosen internal screw fixings to remove the silver Male Grommets.




STEP 4

Thread screw through silver fixing grommets and secure aluminium panel to wall via wall plugs.

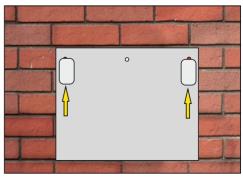

STEP 5

Fit Acrylic Plaque into the light recess. Ensure all is level and tighten using internal screw system via allen key.

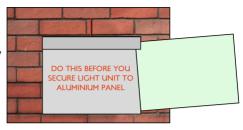

STEP 6

0

Offer Light clamp to fixed unit and pass wires through hole toward the power source. Feed wires all the way through to meet the plug.

Transformer/Plug must be within a maximum I.2metre distance from the light clamp.

Once completed locate female holes in light clamp onto male silver grommets and tighten via internal screw system with allen key.

POWER

HARD WIRED

Please consult a qualified electrican using the transformer block - Wire into mains supply.

