
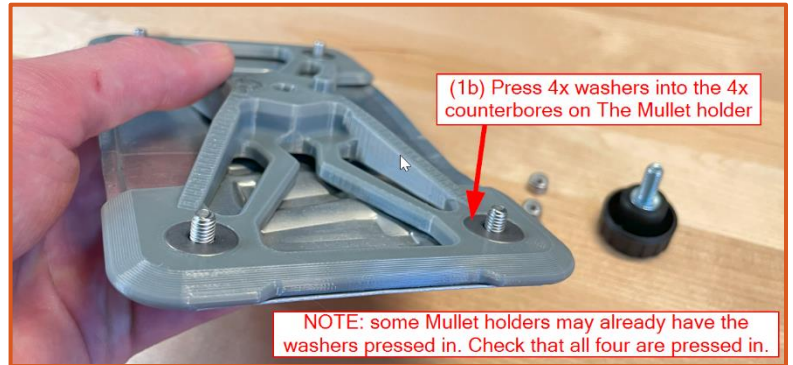


INSTALL DIRECTIONS: THE MULLET PLATE HOLDER

Tools: Marking pen, drill bits and power drill.

STEP 1: Mount plate to The Mullet


- Your plate mounts on the flat side (1a) of The Mullet holder.
- Install the plate mounting hardware into the four corners of the plate. Note the washers should be touching The Mullet holder on the backside (1b). No washers are needed on the outer side of the plate itself.
- Tighten the four stainless steel bolts until The Mullet arms just start to compress. Do not overtighten. Nylok nuts are included to secure the bolts at low torque.

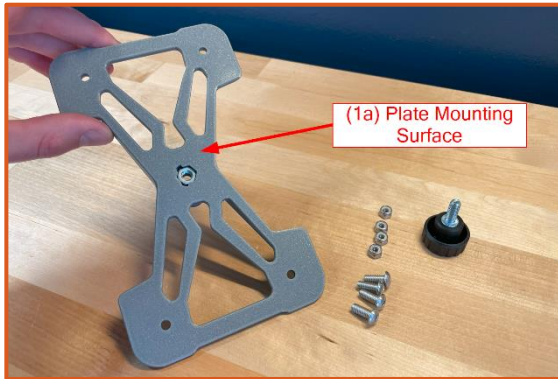

STEP 2: Check dirt bike fit up

- Determine desired position of the plate on the fender. Use the template and the Mullet holder itself to check for interference with the tail light or any fender features.
- Use the included drill template to mark and drill the holes. Refer to the below image and table.
 - Use a punch (or nail tip) to indent the drill locations. This prevents the bit from wandering off location.
 - Use light pressure drill pressure when drilling plastic.
 - Deburr the hole edges using a box cutter blade, or hobby knife blade.
- Continue to STEP 3 on next page

Center Hole	Vertical Orientation	Horizontal Orientation
Required	Required for vertical plate orientation (check local laws before using this orientation)	Required for horizontal plate orientation
1/4" Drill Bit (6.4mm)	5/16" Drill Bit (8mm)	5/16" Drill Bit (8mm)

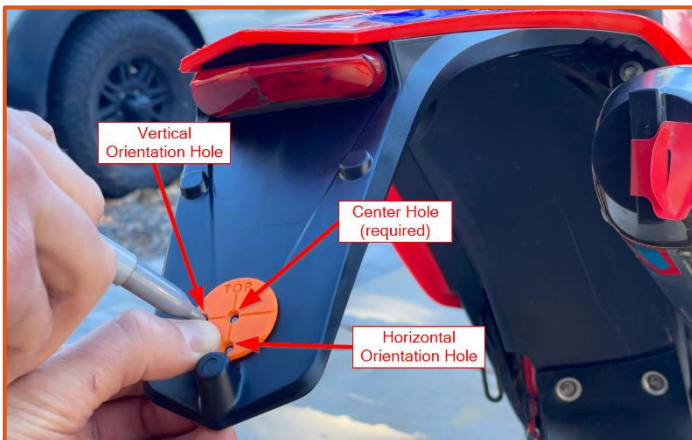

STEP 3: Mount the Mullet

- Place The Mullet holder onto the fender, choosing your preferred mounting orientation. The Mullet locating pin should slot into one of the two 5/16" (8mm) holes depending on the desired orientation.
 - Horizontal mounting is required in most locations to be legal.
 - Vertical mounting is a best for low profile storage of the plate when it is not needed.
- Thread the thumb knob through the backside of the fender and into the plate holder.
 - When turning the knob, it must grab into the material of The Mullet. This makes the first install require slightly more torque to get it going. This is normal.
 - Keep tightening until the knob tightens The Mullet holder securely on the fender.
 - Torque tightly using only your hands.
- To remove it, simply undo the knob and remove the plate. Consider stashing the knob in the holder center hole.

Now, go shred sick trail!

Questions ? Email us at support@roost-concepts.com

Thank you for the support!

