

**Instructions for Prima Medium Windscreen for  
P Series or Genuine Stella  
Sku: 0700-1022**



Step 1: Check for all hardware.

- 1 windshield and 1 box of hardware.
- Inside box of hardware will be 2 upright mounts and 3 sealed bags of hardware



Step 2: Open bag of hardware


- Assemble 4 rubber grommets to the 4 metal bushings
- Assemble remaining 4 rubber grommets to windshield mount





### Step 3: Assemble Mounts to the windshield

- Rubber grommets and metal bushings are placed on the outside of shield and windshield mounts are placed on the inside of the windshield
- Leave hand tight
- Remove all set screws from windshield mounts

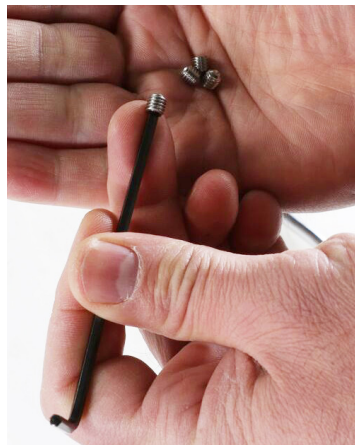

### Step 4: Screw nut and lock washer to each upright mount

- Assemble receiving brackets with lock washer and spacer
- Loosen front bolt under mirror brackets
- Place receiving brackets under mirror bracket and reinstall bolt



(continued)

Step 4: Screw nut and lock washer to each upright mount

- Assemble receiving brackets with lock washer and spacer
- Loosen front bolt under mirror brackets
- Place receiving brackets under mirror bracket and reinstall bolt






Step 5: Place upright mounting arms into mounts on windshield





Step 6: Slide mounting arms into receiving brackets under mirror bracket

- Repeat for opposite side
- Install lock washer and nut onto upright mount

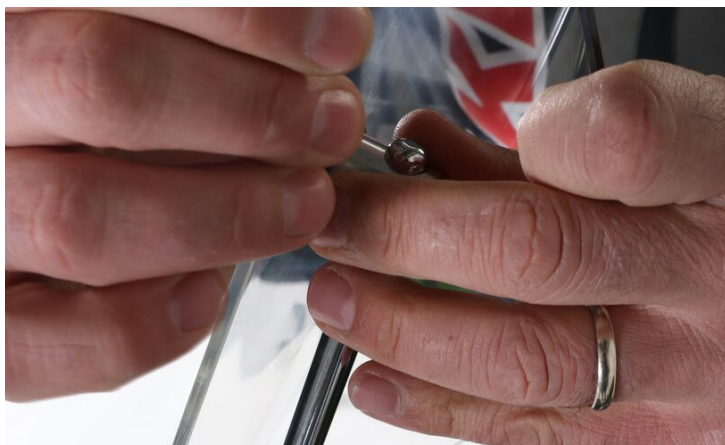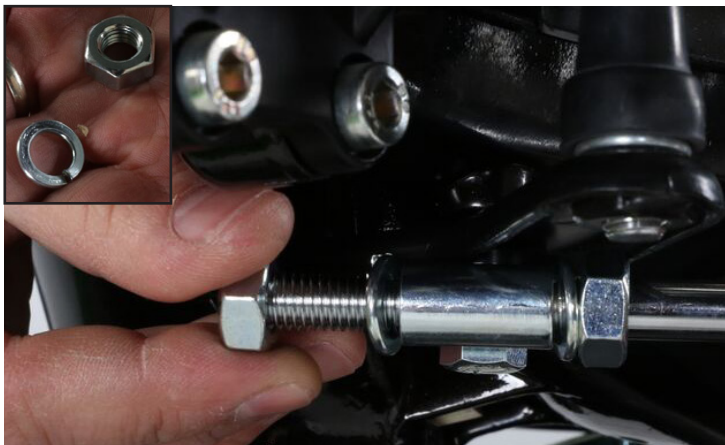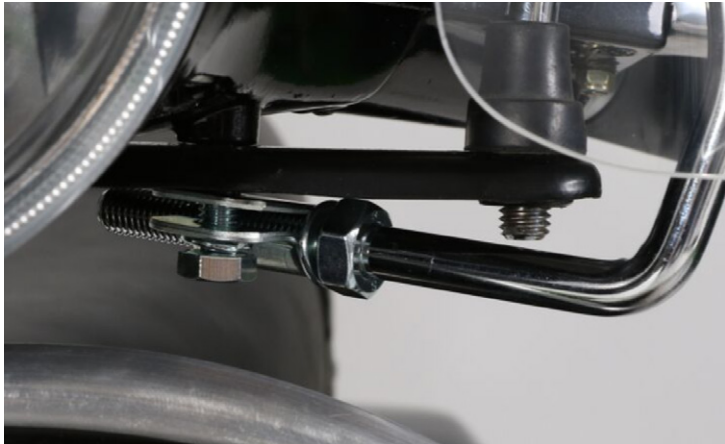

Step 7: Reinstall set screws to windshield mounts, (top set screws first the bottom)



- Adjust windshield as needed
- Tighten hardware
- Tighten **ALL** mounting hardware



(continued)

Step 7: Reinstall set screws to windshield mounts, (top set screws first the bottom)

- Adjust windshield as needed
- Tighten hardware
- Tighten **ALL** mounting hardware

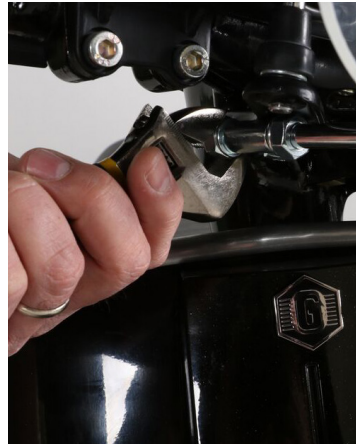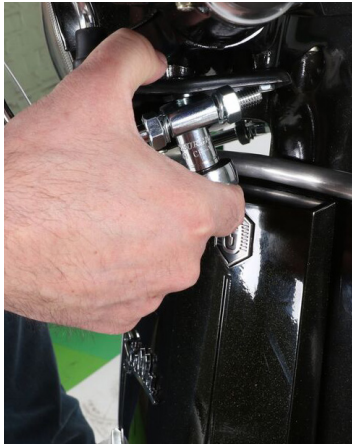

Step 8: Enjoy your new windshield!