

Instructions for Hooligan Windscreen
SKU# 0700-1023



Step 1:
Remove screw with a #2 Phillips screwdriver.
Repeat on the other side




Step 2:
Remove screw with a #2 Phillips screwdriver.
Repeat on the other side



Step 3:
Carefully release clip with a long flat screwdriver.
Repeat on the other side



Step 4:
Carefully remove headset cover

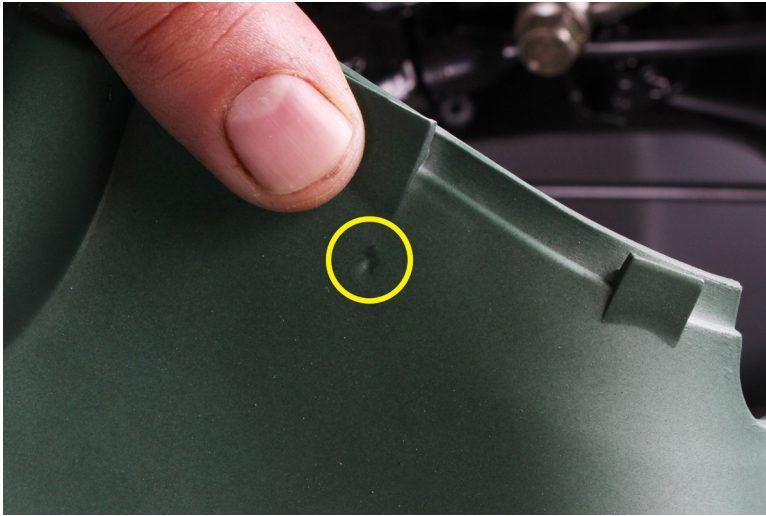

Step 5:
Locate both indented dots on the inside of headset cover



Step 6:
Drill pilot holes through both indents from the inside of the headset cover



Step 7:

With a 5/8 drill bit carefully line up on the pilot holes and drill both holes from the outside (painted side)




Step 8:

Temporarily clip headset cover back in place. Locate the 2 large Allen bolts and black collars (supplied in hardware) Install these pieces and check for proper clearance. It may be necessary to remove a small amount of material to get the proper clearance and alignment. This can be done with a Dremmel type tool.



Step 9:

Open hardware packages and create 4 separate groups of parts as shown. Begin assembling windshield mounts as illustrated

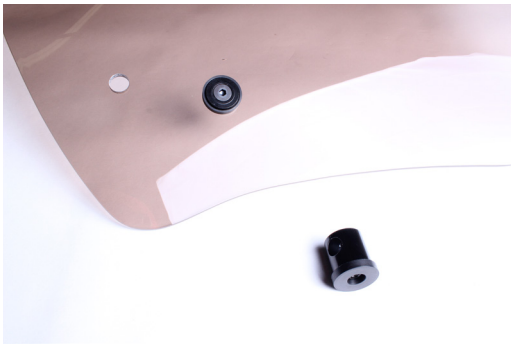


Step 10:

Install hardware on windshield and align strut mount holes



Step 11:

Loosen Allen set screws on mounts and slide struts through mounts

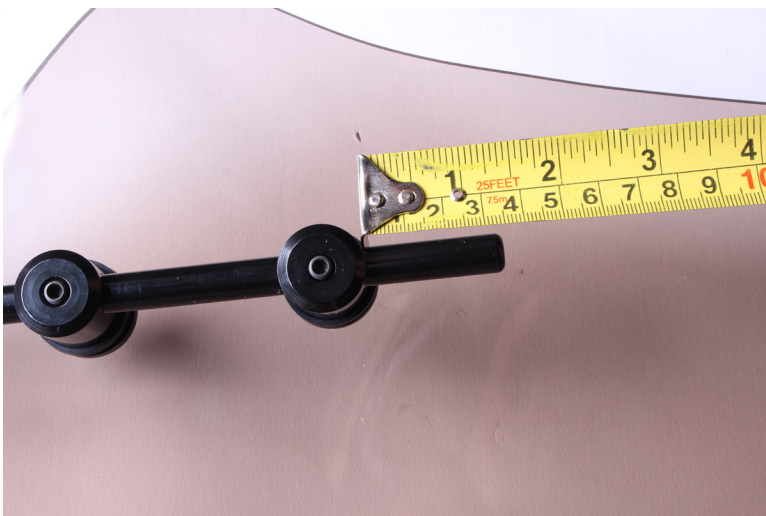

Step 12:

The windshield height is adjustable. This is measurement we used for our install. The height can be set to your preference

**Step 13:**

Reinstall the 4 mounting screws on headset cover and make sure the clips are secure.
Next install the mounting clips on the Allen bolts.

**Step 14:**

- Install nut and lock washer on both sides of the lower strut.
- Slide both struts through the mounts on the lower headset.
- Install the lock washer and nut(hand tight) on both sides.
- Tighten the Allen bolts on both sides closing the clamp
- Tighten the nuts on both

**Step 15:**

This is how the installed windshield should look
Double check all the set screws, bolts and nuts making sure they are all tight.

Enjoy your new windshield!