

**Instructions for Buddy Smoked Windshield**  
**SKU# 0700-1030**



**Step 1:**

Remove Buddy Mirrors from both sides




**Step 2:**

Open hardware packages and create 4 separate groups of parts as shown.


Begin assembling windshield mounts as illustrated.

\*(Hardware shown above is different color)


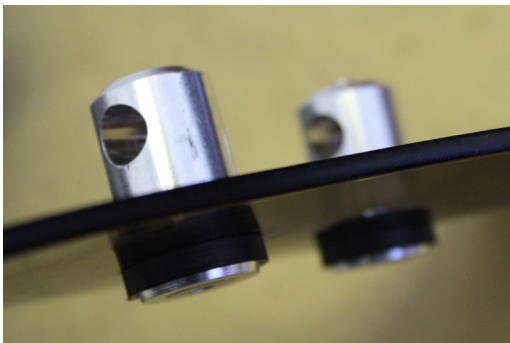


**Step 3:**

Install hardware on windshield and align strut mount holes

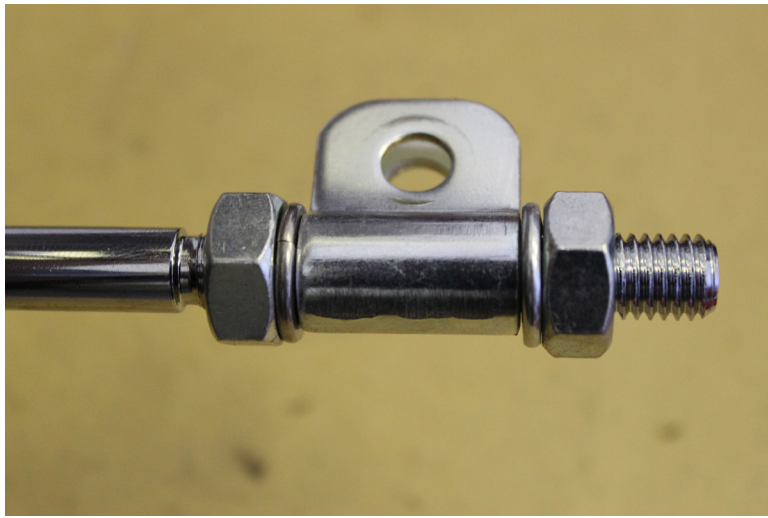

**Step 4:**  
Assemble end of the strut

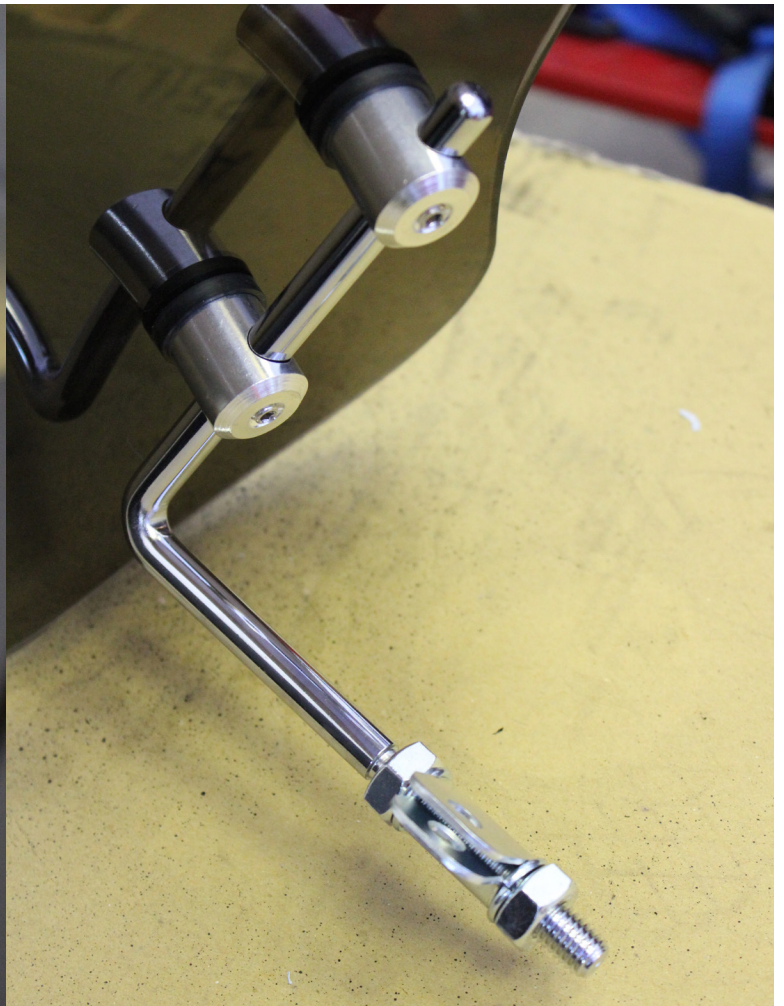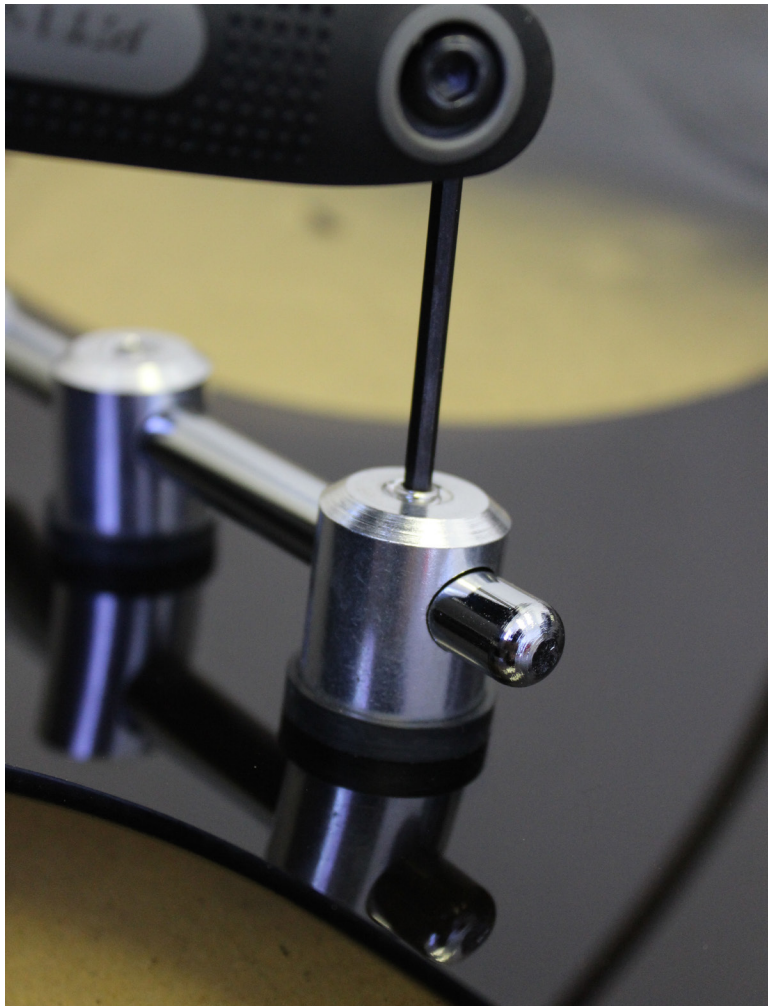

**Step 5:**  
Slide struts through mounts and tighten allen set screws slightly.





### **Step 6:**

Attach in order:

- Spacer
- Strut
- Mirror

After both Mirrors are on attach Windshield



### **Step 7:**

This is how the installed windshield should look. The windshield height is adjustable and be set to your preference. Double check all the set screws, bolts and nuts making sure they are all tight.

Enjoy your new windshield!



**Thank you for purchasing. Contact us with any inquiries.**