

Instructions for Prima Windshield (Medium)

SKU# 0700-1036



Tools Need:

Hex Set – 3mm and 4mm specifically


12mm socket

17mm socket

17mm wrench

Step 1:

Install 17mm nut on windscreen arm followed by large washer, windscreen mount, 2nd large washer, and 2nd 17mm nut.

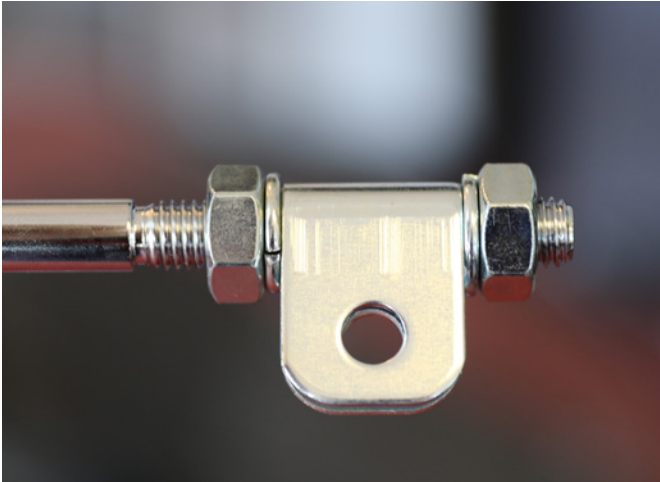

Step 2:

Repeat for second windscreen arm.



Step 3:

Remove Turn Signals w/12mm socket.





Step 4:
Use existing bolt to mount first bracket. **ONLY HAND TIGHT.** Make sure to mount one bracket at a time.



Step 5:
Repeat on opposite side of the headset. **ONLY HAND TIGHT.**




Step 6:
Take out windscreen hardware. Not all hardware will be used.

Install gasket and unique washer together. Make sure to use indented side of gasket.



Step 7:
Mount windscreen arm hardware to clear screen.

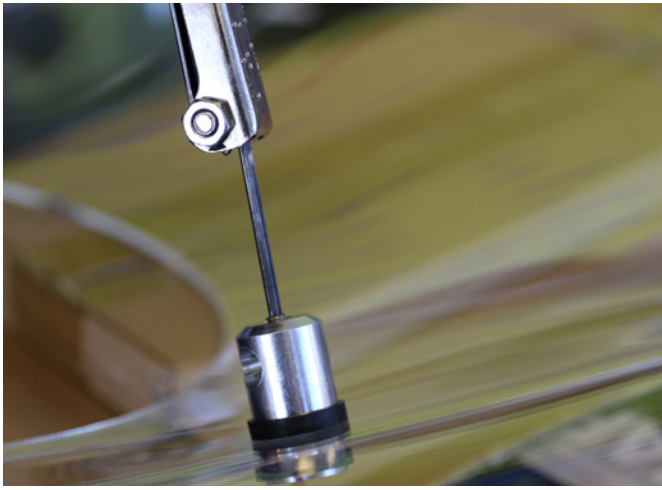

Step 8:
Hand tighten/loosen to open up the arm hardware. Use 3mm and 4mm hex keys.



Step 9:
Line up windscreen on arm brackets. May need to adjust hex screws on both sides.



Step 10:
Center fully mounted screen to headlight.



Step 11:
Push back/adjust turn signals so as they are NOT touching the screen.



Step 12:
Tighten hex screws at preferred height.

Tighten turn signal bolts.



Step 13:
Enjoy!