

Instructions for Prima Lance Cali Classic Windscreen
SKU# 0700-1041

Tools Needed:

5mm Hex

6mm Hex

13mm Wrench

17mm Wrench



Step 1: Remove from Box. Use 5mm hex to unscrew half of each bar mount.




Step 2: Use 17mm wrench to loosen headlight bolt, and lower headlight.




Step 3: Use 6mm hex to loosen and lower master cylinders (1 master cylinder on Cali 50 and 125. 2 for Cali 200)



Step 4: Position the inner clamp gaskets on the handlebars and flush to the master cylinder(s)

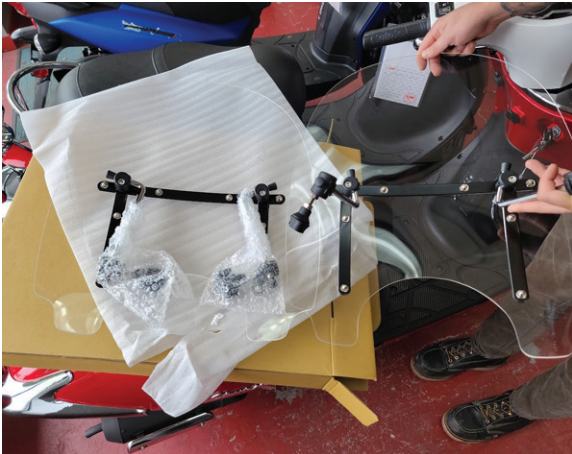

Step 5: Rotate Hardware to the outward position. (Opposite to how the hardware is packed)

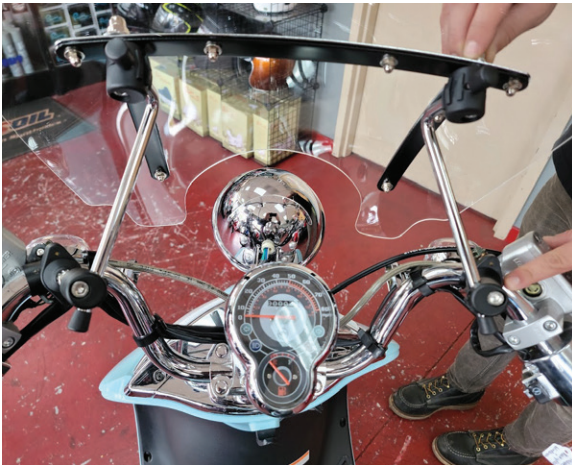

Step 6: Line up bar mount halves on the inner clamp gaskets.



Step 7: Use 5mm hex to tighten 1 screw on each side. (top is preferable) Keep them just hand tight.

Step 8: Use 5mm hex to tighten 2nd screw on each side. Also hand tight.

Step 9: Use 5mm hex to tighten Bottom clamp bolts fully tight.

Step 10: On Cali 200's adjust the master cylinder up back up for easier access for tightening.



Step 11: Sit on bike and adjust the screen angle to preferred angle.



Step 12: Use 13mm wrench and 6mm hex to tighten adjustment nuts once screen angle is set.



Step 13: Fully tighten 2nd set of screws on the bar clamps.

Step 14: Put headlight up back up and tighten with 17mm wrench.

Step 15: Put master cylinder(s) back in place and tighten with 6mm hex.

Enjoy!

