

Performance Art™

SCOOTERWORKS USA
*Exclusively Importers and Distributors of
Quality Parts and Accessories
For the Classic Italian Motorscooter*

5709 N Ravenswood Ave
Chicago, Illinois 60660
PH: 773-271-4242
FX: 773-271-5012



Instructions for Mounting Front Crash Bars (FCC1)

Items you will need:

1. Roll of 3/4" masking tape
2. Electric drill
3. 1/4" drill bit
4. 5/16" drill bit
5. Set of metric wrenches

Instructions for mounting on a P200E or P125X:

1. Place a piece of the 3/4" masking tape along the top edge of the turn signal assembly and another piece along the inside edge (see figure to right).
2. Mark a spot in the middle of the vertical piece of tape where it crosses the horizontal piece of tape on both sides
3. Drill a 5/16" hole through the tape at the spot you marked (The tape will help protect the paint from chipping)
4. Attach the 'L' brackets to the bottom of the crash bars.
5. Mount the 2 front bolts to the crash bars from inside the glove box. (Do not tighten them yet)
6. Line up the 'L' brackets underneath the scooter and mark the spots to drill the holes.
7. Drill 4 1/4" holes in the spots you marked.
8. Attach the bottom 'L' brackets with the hardware provided.
9. Remove the crash bars and insert the center retaining piece.
10. Reinstall the crash bars and tighten all the bolts.

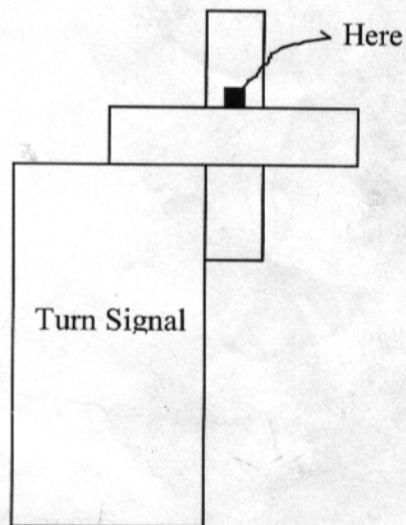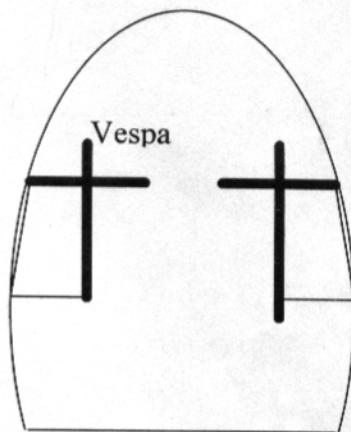

You are ready to go!!

If you have any questions please do not hesitate to give us a call. Our number is at the top.