2700 W Grand Ave Chicago, IL 60612 Toll free: 888-968-3772 www.scooterworks.com

## **WSPRIMA1 Install Instructions**


## **Tools Needed:**

12mm wrench	14mm wrench	2-17mm wrenches	Philips screw driver
-------------	-------------	-----------------	----------------------

1. Thread nylon nut on bracket to about ¾ of the way down the threads.



2. Install windshield clamps on windscreen as shown below. Do not tighten.

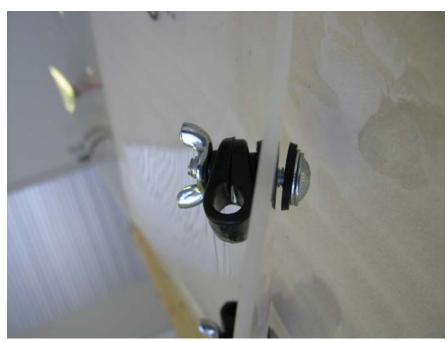

3. Install mirror and support post to mirror mount as shown below. Do not tighten.



4. Insert mounting bracket into clamps.



5. Be sure to leave all hardware loose for adjustments.

Importers and Distributors of Quality Parts and Accessories For Classic Italian Motorscooters And Modern Scooters of All Kinds 2700 W Grand Ave Chicago, IL 60612 Toll free: 888-968-3772 www.scooterworks.com

6. Slide the threaded portion of the support brackets into clamps as shown below.



- 7. Adjust windscreen for proper fitment.
- 8. Tighten both nuts simultaneously until secure.
- 9. Make final adjustments and tighten **ALL** hardware.

## WSPRIMAl Installation Guide



