



2022+ TUNDRA DEBRIS SHIELD INSTALLATION INSTRUCTIONS, FRONT

VER F230805


FRONT DEBRIS SHIELDS

*****ENSURE YOUR VEHICLE IS SECURED IN PLACE AND THE PARKING BRAKE IS ENGAGED*****


*****YOU DO NOT NEED TO REMOVE THE WHEELS FOR THIS INSTALLATION*****

*****WORKING ON A MOTOR VEHICLE HAS INHERENT RISKS. PROCEED WITH CAUTION*****

1. Verify contents of package.
 - a. 2022+ Tundra Front Debris Shield Parts/Materials Bag
 - i. 14 Plastic Push Rivet, Short
 - ii. 6 Plastic Push Rivet, Long
 - iii. 10 Fender Washer, Stainless Steel, Black
 - b. 1 Front Debris Shield Passenger

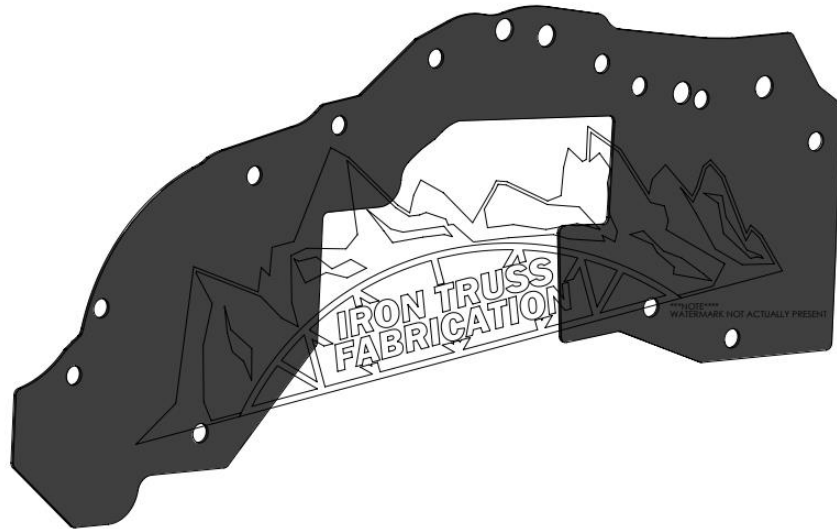

- c. 1 Front Debris Shield Driver

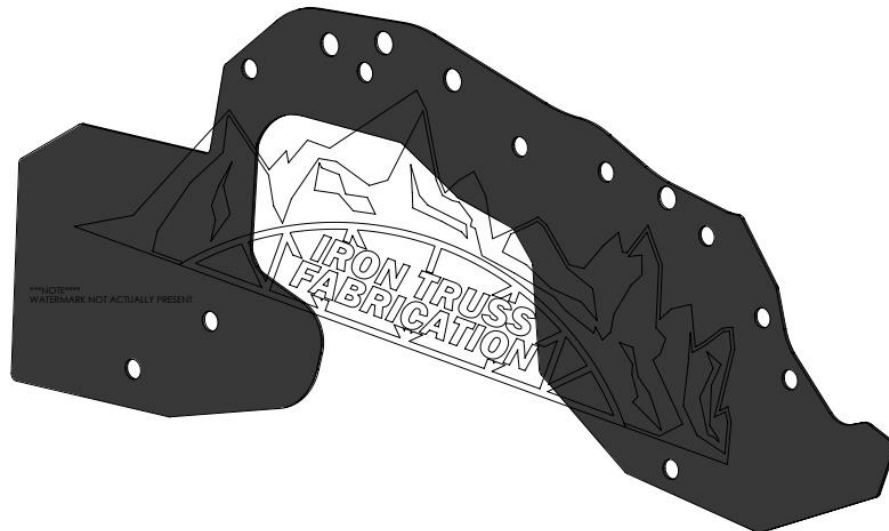




2022+ TUNDRA DEBRIS SHIELD INSTALLATION INSTRUCTIONS, FRONT

VER F230805

2. Remove the Front Most OEM Splash Guard by removing the 3 Push Rivets from the vehicle Frame/Body. Repeat on the Driver's side and Passenger's Side of the vehicle.

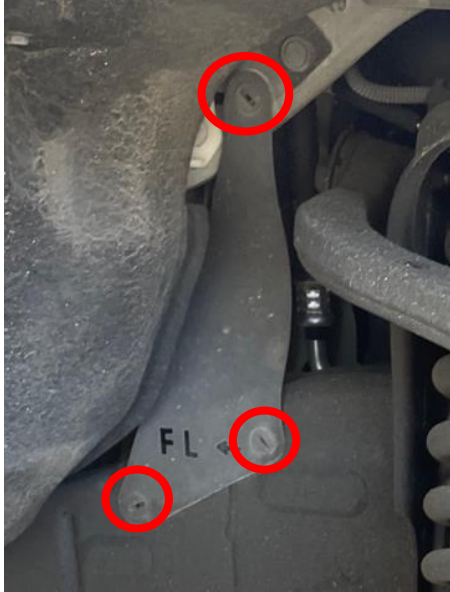

3. Remove the Rear Most OEM Splash guard by removing the 4 Push Rivets from the Vehicle Frame/Body. Repeat on the Driver's side and Passenger's Side of the vehicle.



4. Remove the 3 Push Rivets Holding the OEM Felt Wheel Well liner to the body of the vehicle on the Passenger's Side of the vehicle.






2022+ TUNDRA DEBRIS SHIELD INSTALLATION INSTRUCTIONS, FRONT


VER F230805

5. Place the Front Debris Shield Passenger into the wheel well over the top of the coilover.


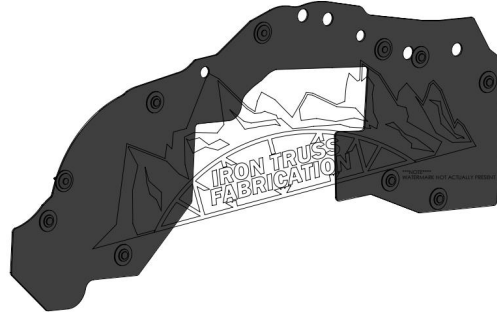


6. Secure the Front Debris Shield Passenger in place **UNDER** the OEM felt wheel well liner with 1 Plastic Push Rivet **LONG** and 1 Washer.

*** You might have to push/pull the Debris Shield toward the front/rear of the vehicle to align the holes on the vehicle body/frame as you install the Push Rivets***

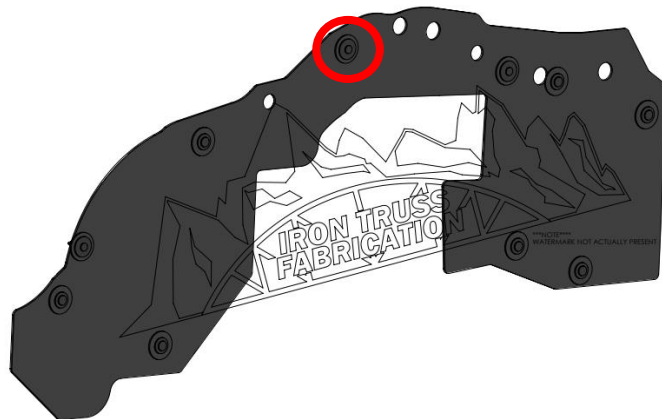

7. Secure the Rear most end of the Front Debris Shield Passenger in place with 3 Plastic Push Rivets **SHORT** and 3 Washers in the locations shown.

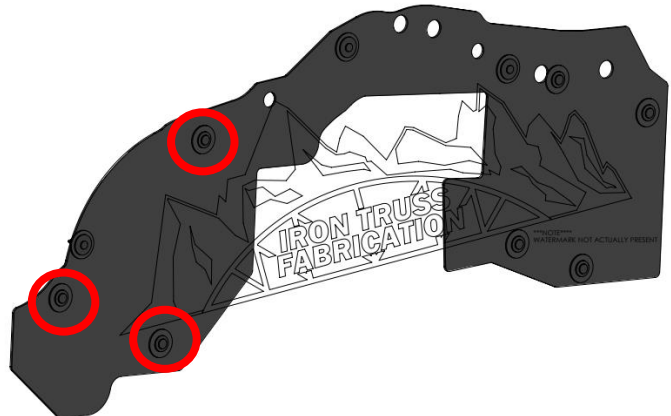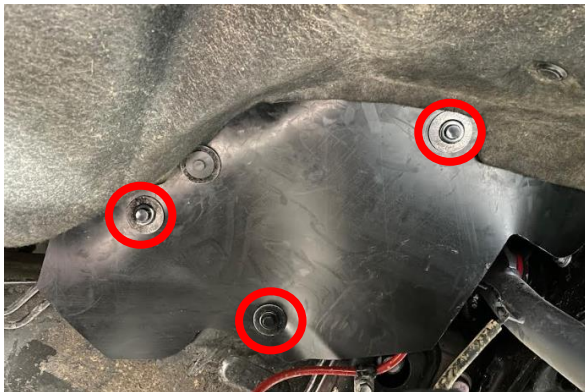





2022+ TUNDRA DEBRIS SHIELD INSTALLATION INSTRUCTIONS, FRONT

VER F230805


8. Secure the Rear most end of the Front Debris Shield Passenger in place with 1 Plastic Push Rivet **LONG** and 1 Washers in the location shown.

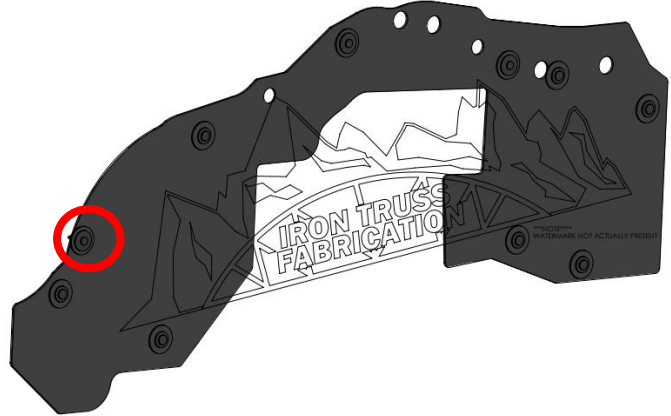

9. Secure the Front most end of the Front Debris Shield Passenger in place **UNDER** the OEM felt wheel well liner with 1 Plastic Push Rivet **LONG** and 1 Washer.

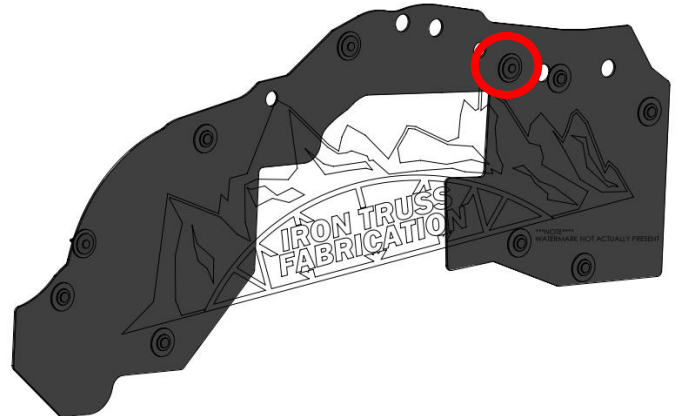

10. Secure the Front most end of the Front Debris Shield Passenger in place with 1 Plastic Push Rivet **SHORT** and 1 Washer.

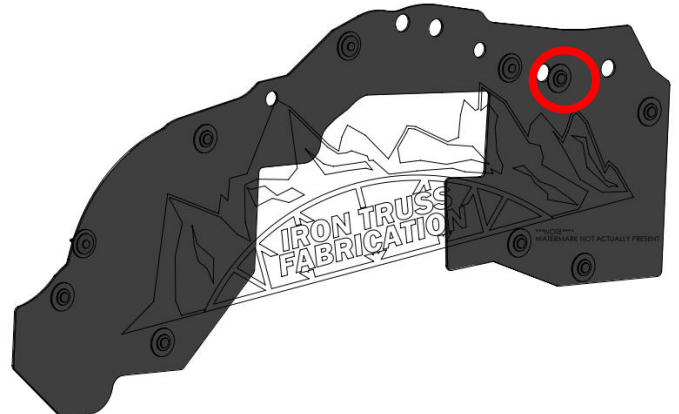




2022+ TUNDRA DEBRIS SHIELD INSTALLATION INSTRUCTIONS, FRONT

VER F230805


11. Secure the Front most end of the Front Debris Shield Passenger in place onto the frame place with 2 Plastic Push Rivets **SHORT** and 2 Washers.

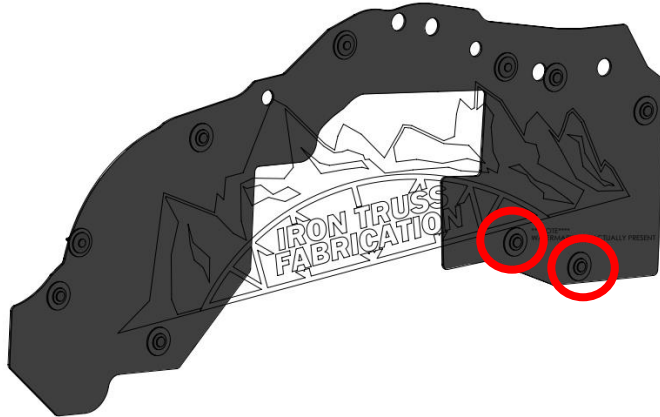

12. Locate this hole on the front end of the vehicle under the OEM felt wheel well liner.



13. Secure the Front most end of the Front Debris Shield Passenger in place 1 Plastic Push Rivet **SHORT** and 1 Washer.

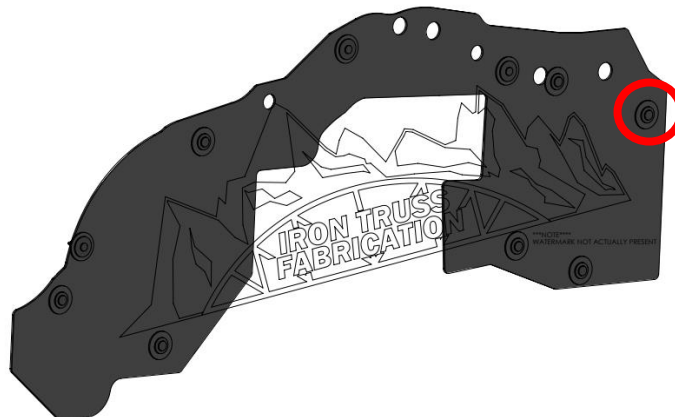

14. The Front Debris Shield Passenger is now installed. Move onto the Driver's Side.



15. Remove the 4 Push Rivets Holding the OEM Felt Wheel Well liner to the body of the vehicle on the Driver's Side of the vehicle.





2022+ TUNDRA DEBRIS SHIELD INSTALLATION INSTRUCTIONS, FRONT

VER F230805

16. Place the Front Debris Shield Driver into the wheel well over the top of the coilover.




17. Feed the Front most end of the Front Debris Shield Driver between the washer fluid reservoir and the frame/body of the vehicle.



18. Secure the Front Debris Shield Driver in place **UNDER** the OEM felt wheel well liner with 1 Plastic Push Rivet **LONG** and 1 Washer.

*** You might have to push/pull the Debris Shield toward the front/rear of the vehicle to align the holes on the vehicle body/frame as you install the Push Rivets***

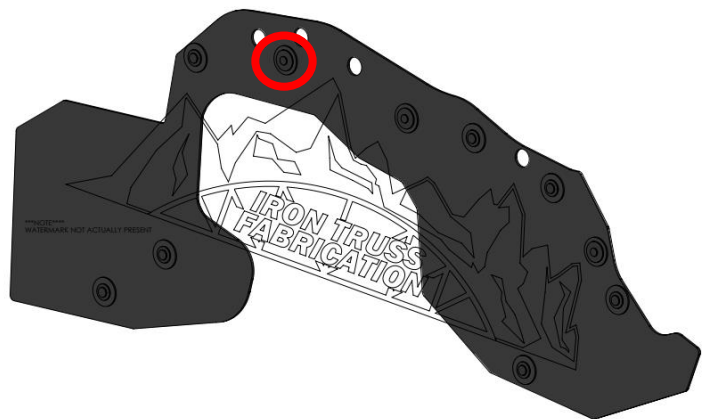





2022+ TUNDRA DEBRIS SHIELD INSTALLATION INSTRUCTIONS, FRONT

VER F230805


19. Secure the front most end of the Front Debris Shield Driver in place **UNDER** the OEM felt wheel well liner with 1 Plastic Push Rivet **SHORT** and 1 Washer.

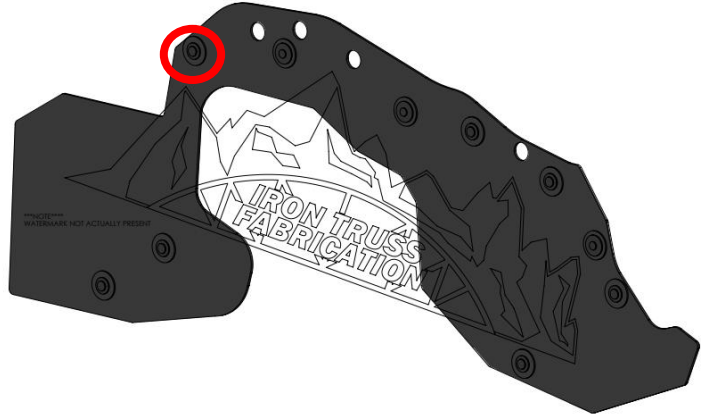

20. Secure the front most end of the Front Debris Shield Driver in place to the Vehicle Frame with 2 Plastic Push Rivets **SHORT** and 2 Washers.

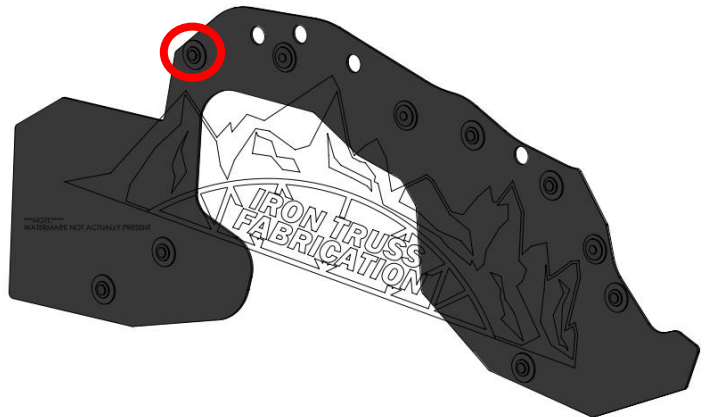

21. Secure the rear most end of the Front Debris Shield Driver in place **UNDER** the OEM felt wheel well liner with 1 Plastic Push Rivet **LONG** and 1 Washer.

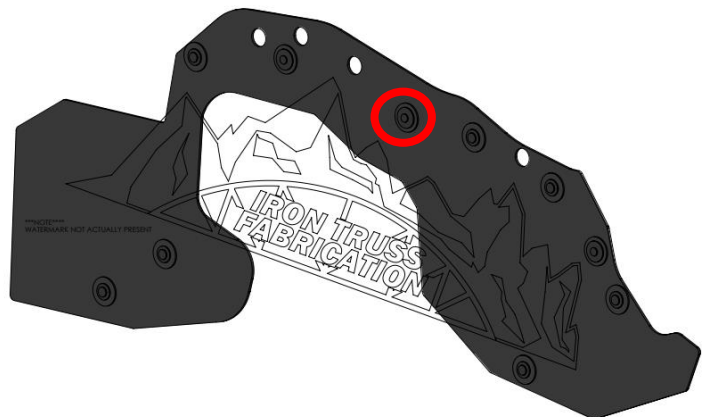





2022+ TUNDRA DEBRIS SHIELD INSTALLATION INSTRUCTIONS, FRONT

VER F230805


22. Secure the rear most end of the Front Debris Shield Driver in place **UNDER** the OEM felt wheel well liner with 1 Plastic Push Rivet **LONG** and 1 Washer.

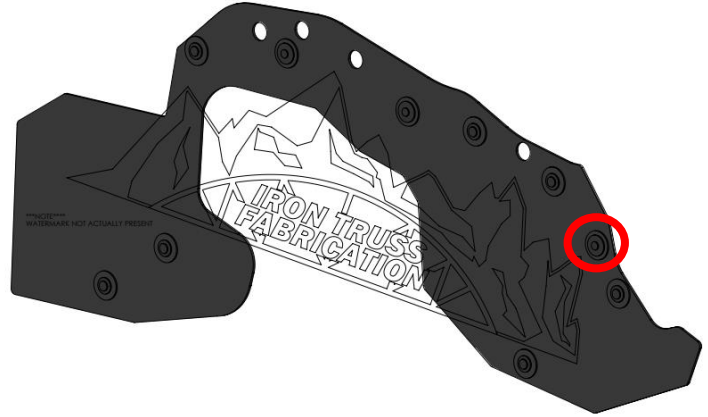

23. Secure the front most end of the Front Debris Shield Driver in place with 2 Plastic Push Rivets **SHORT** and 2 Washers.

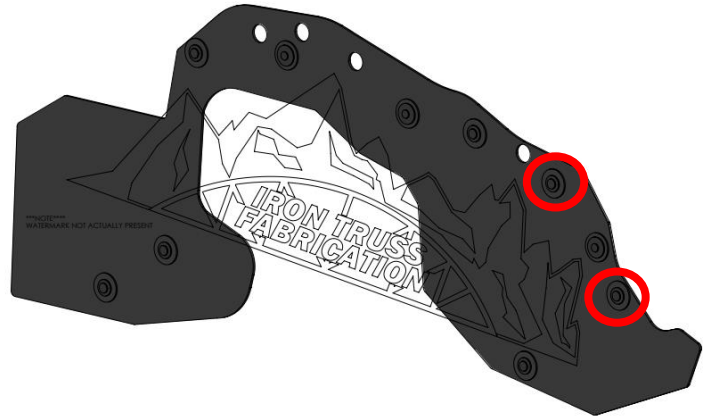

24. Secure the rear most end of the Front Debris Shield Driver in place to the Vehicle Frame with 1 Plastic Push Rivet **SHORT** and 1 Washer.

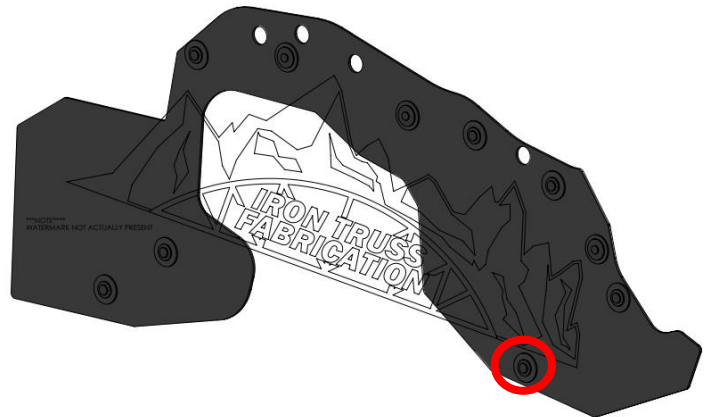



2022+ TUNDRA DEBRIS SHIELD INSTALLATION INSTRUCTIONS, FRONT

VER F230805

25. The Front Debris Shield Driver is now installed.

