




Dart Classic / Piranha flyscreen fitting instructions ROYAL ENFIELD INTERCEPTOR - 2019 on

Thank you for purchasing a Dart flyscreen. It has been carefully designed and manufactured to suit a specific motorcycle model and by following these instructions you should encounter no problems with fitting. The kit should comprise the following:

- 1 x polycarbonate screen
- 4 x EPDM rubber grommets
- 1 x left hand mounting bracket
- 1 x right hand mounting bracket
- 4 x stainless hex head machine screws
- 4 x washers

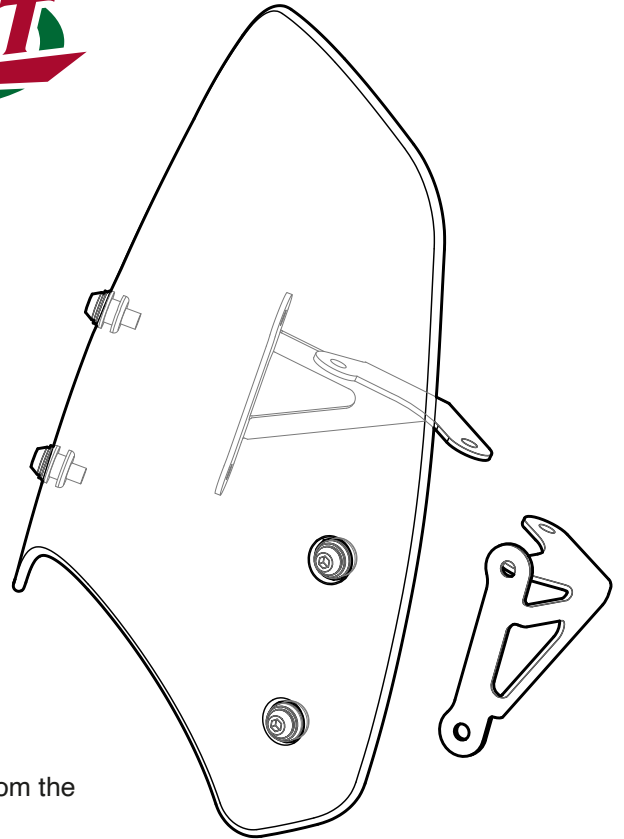

- 1 Fit the grommets to the screen - this is best achieved from the back of the screen blade.
- 2 Remove the four dome nuts which hold the instruments onto the instrument mounting bracket.
- 3 Fit the screen mounting brackets (see illustration above for orientation) onto the instrument studs, refit the washers and original dome nuts. Tighten these as normal - there is a positive stop to prevent overtightening.
- 4 With both brackets fixed, hold the screen blade in position and loosely fit the bottom two hexagon head machine screws with their washers, ensuring that they engage in the captive nuts on the brackets. Do not tighten these yet.
- 5 Fit the top two machine screws. Once everything is in position, gradually tighten all the screws evenly until they are seated on the brackets.
- 7 Double check that everything is sufficiently tight and if so, fitting is now complete!

MAINTENANCE: No special maintenance is required. Do not use solvents to clean - just warm soapy water. Many proprietary glass cleaners are suitable for polycarbonate - check the label before trying.

IMPORTANT NOTICE: Whilst the screen provides a good level of impact protection, it is not warranted unbreakable. It is NOT a substitute for eye protection, which should be worn at all times while riding.