




Dart flyscreen fitting instructions SUZUKI TU250

Thank you for purchasing a Dart flyscreen. It has been carefully designed and manufactured to suit a specific motorcycle model and by following these instructions you should encounter no problems with fitting. The kit should comprise the following:

- 1 x polycarbonate screen
- 4 x EPDM rubber grommets
- 1 x left hand mounting bracket
- 1 x right hand mounting bracket
- 2 x M8 x 40mm stainless hex head machine screws
- 4 x stainless hex head machine screws
- 4 x washers

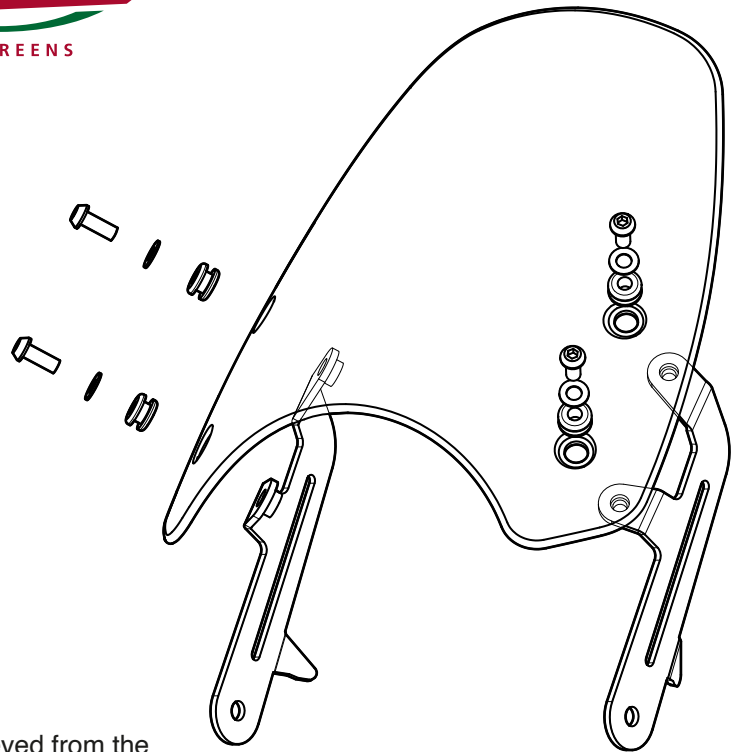

- 1 Fit the grommets to the screen - this is best achieved from the back of the screen blade.
- 2 Remove the headlamp unit from the bowl by unscrewing the 4mm hex screws either side of the headlight bowl. Undo the 12mm nut and remove the bolt which holds the headlamp to the right hand headlamp bracket.
- 3 Fit the right hand screen mounting bracket on the outside of the headlamp bracket and fit the supplied M8 x 40mm screw. Refit the original nut and tighten. Ensure that the triangular step at the back of the screen mounting bracket is resting fully on the headlamp bracket before tightening.
- 4 Repeat operation for left hand side.
- 5 With both brackets fixed, hold the screen blade in position and loosely fit the bottom two hexagon head machine screws with their washers, ensuring that they engage in the captive nuts on the brackets. Do not tighten these yet.
- 6 Fit the top two machine screws. Once everything is in position, gradually tighten all the screws evenly until they are seated on the brackets. Now refit the headlight unit.
- 7 Double check that everything is sufficiently tight and if so, fitting is now complete!

MAINTENANCE: No special maintenance is required. Do not use solvents to clean - just warm soapy water. Many proprietary glass cleaners are suitable for polycarbonate - check the label before trying.

IMPORTANT NOTICE: Whilst the screen provides a good level of impact protection, it is not warranted unbreakable. It is NOT a substitute for eye protection, which should be worn at all times while riding.