

OCHAIN · E

OCHAIN · E: elastomers replacement*



Elastomers

Elastomers play an important role in OCHAIN·E and they need to be replaced every 150 hours of use on your emtb in order to preserve the product and to keep high standards of performance.

OCHAIN·E comes with a ready to ride 9° setup plus an extra replacement kit.

You will find our elastomers replacement kits on our online store or at the local bike shop where you bought this product.

Warranty is guaranteed only if this service is provided.



Elastomers replacement


Remove your driveside crank and OCHAIN·E from the motor according to the manufacturer's instructions or to a professional bicycle mechanic.

For a quick elastomers replacement is possible to do this work without removing the chainring from OCHAIN·E.


Clean OCHAIN·E perfectly from dust and mud with a clean cloth.

NOTE: Please do not use any chemical products to preserve our environment.

Place the OCHAIN·E over the elastomers replacement tool included in the packaging, on a clean, flat and stable working surface.

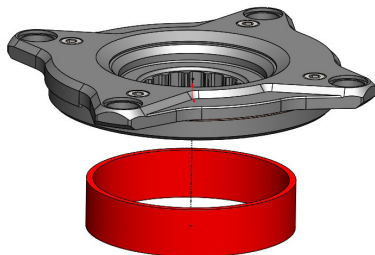

Unscrew all four m4x8 mm bolts using a 2.5 mm hex wrench.

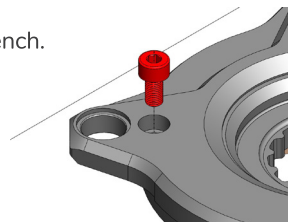



IMPORTANT!

Place one finger on the inner surface, here shown in red.



Only then, you can lift and remove the OCHAIN · E upper element.

If you fail this passage, you probably will need to entirely reassemble your OCHAIN · E following the instructions at www.ochain.bike/service

Every time you open OCHAIN · E take the opportunity to wipe it with a clean cloth from eventual dirt and old grease, then regrease with commercial lithium grease as shown on maintenance video at www.ochain.bike/service

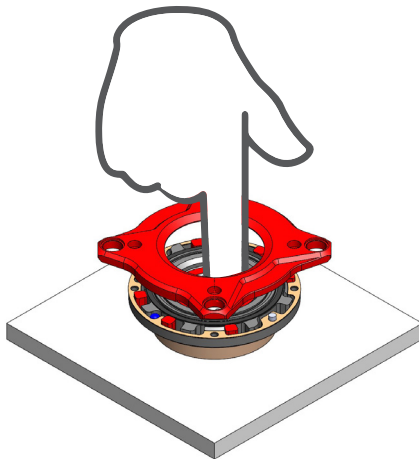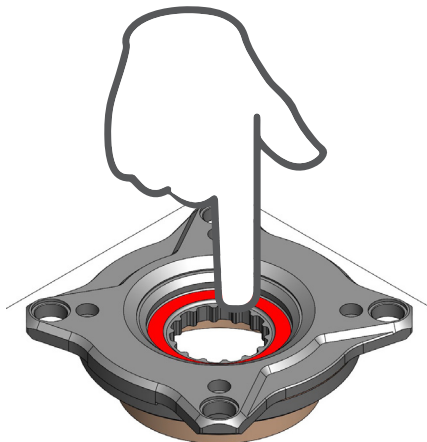

Replace all six elastomers with new ones, placing them as shown.

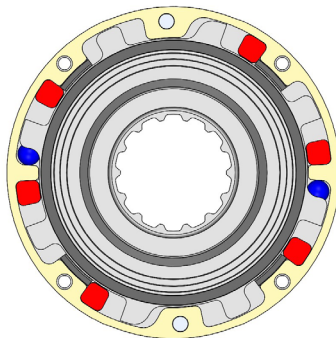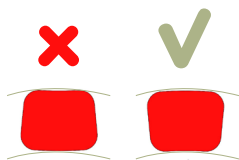

Close OCHAIN·E referring to lasered alignment marks "▲"

IMPORTANT!

You don't need to replace the paper seal each time you change elastomers, so handle it with care.

Check OCHAIN·E is perfectly closed with paper seal in correct position.

Use Loctite medium on bolts. Tighten all four m4x8 mm bolts with 4Nm using a 2,5 mm hex wrench.

Store the elastomers replacement tool in a safe place.

Finally re-assemble your OCHAIN·E and driveside crank referring to the manufacturer's manual or to a professional bicycle mechanic.

*You can find the video instructions at www.ochain.bike/service