



SCORE C DESIGNER BASIN Installation Guide

SPARE PARTS

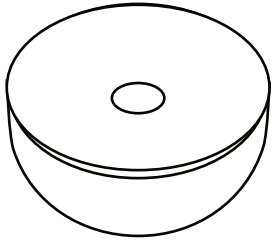


SCORE C DESIGNER BASIN

TOOLS REQUIRED (NOT INCLUDED)



CAULKIN GUN

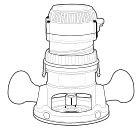

ROUTER SAW



MEASURING TAPE



DRILL



FAUCET




ADJUSTABLE
FAUCET




PENCIL


LINE UP THE POSITION OF THE BASIN

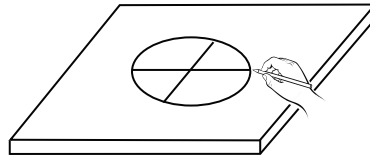


MAKE THE CUT

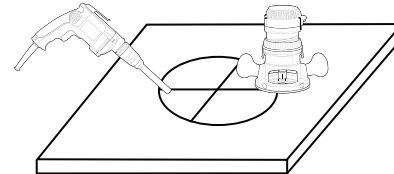



DRILL HOLE FOR FAUCET

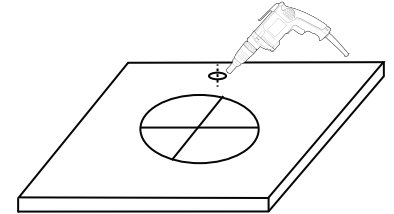


FIX THE BASIN ON THE MABLE TOP

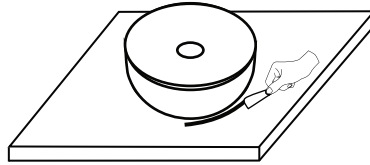


CLEAN THE MABLE

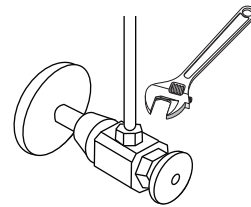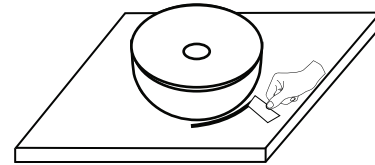

CONNECT THE HOSE TO
THE ANGLE VALVE

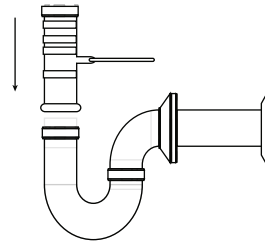

CONNECT WASTE PIPE

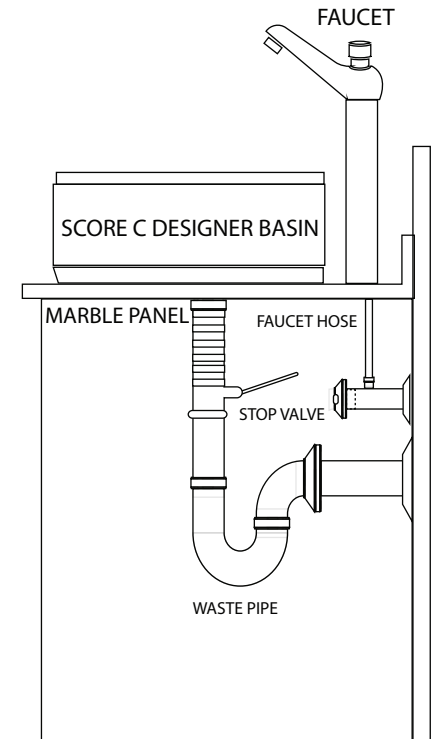

NOTICE

- 1.- Make sure the ware supply valve is shut off before installation.
- 2.- Make sure that you have access to all plumbing and drain fittings, door clearence and other obstructions

MAINTENANCE

Use soft moist cloth for cleaning the basin. Do not use abrasives and hard cloth. Regular cleaning with a soap solution is recommended, do not use strong bleaching agents. In case acid liquids penetrate on the surface remove them immediately with soft cloth.