



SPARE PARTS

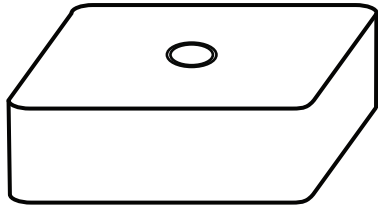

SCORE R DESIGNER BASIN

TOOLS REQUIRED (NOT INCLUDED)



CAULKING GUN



ROUTER SAW



MEASURING TAPE



DRILL



FAUCET




ADJUSTABLE
WRENCH




PENCIL


LINE UP THE POSITION OF THE BASIN

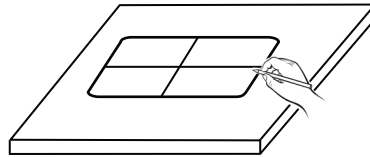


MAKE THE CUT

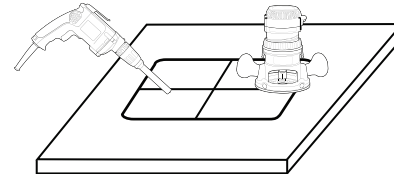



DRILL HOLE FOR FAUCET

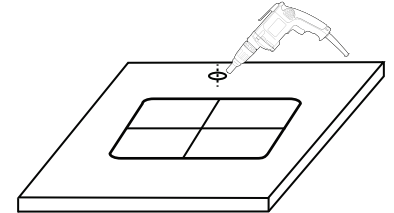


FIX THE BASIN ON THE COUNTERTOP

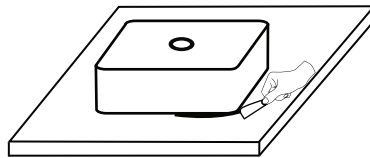


CLEAN THE COUNTERTOP

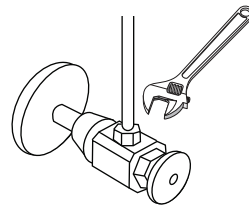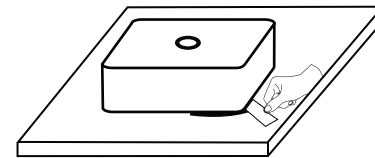

CONNECT THE HOSE TO THE STOP VALVE

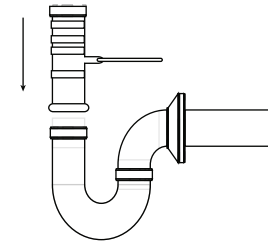

CONNECT WASTE PIPE

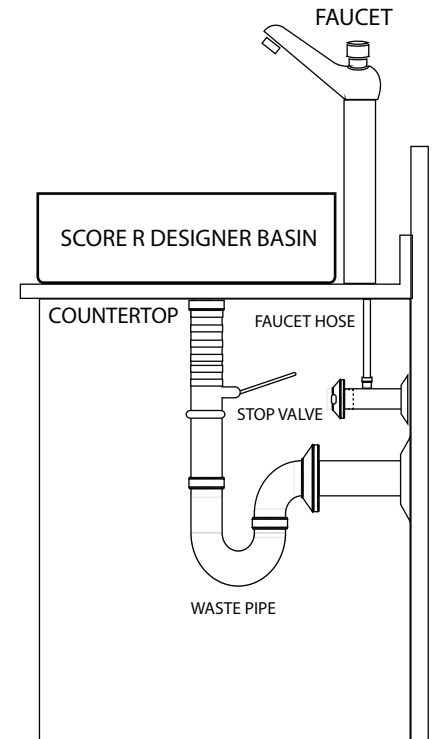

NOTE

1. Make sure the water supply valve is shut off before installation.
2. Make sure that you have access to all plumbing and drain fittings, door clearance and other obstructions.

MAINTENANCE

Use a soft moist cloth for cleaning the basin. Do not use abrasives and hard cloth. Regular cleaning with a soap solution is recommended, do not use strong bleaching agents. In case acid liquids spill on the surface wipe it off immediately with a soft cloth.