


INSTALLATION INSTRUCTIONS

TRADITIONAL

If you feel you can't install your wallpaper yourself, please contact us. We will arrange a team of installers for you

WHAT YOU NEED

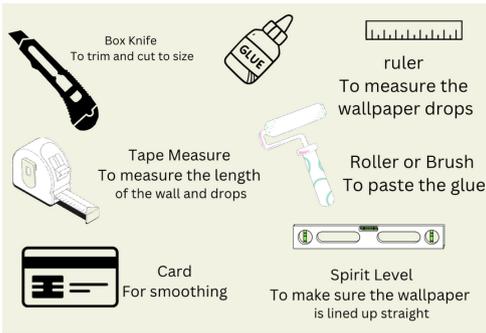

IMPORTANT! BEFORE YOU START

All our orders are produced with a **Overlap** to ensure the quality of our wallpapers.

"Overlap" one on top of the other till the design lines up. You will place the next panel 1 full cm over the previous one.

As our designs are custom printed to size, we do not accept returns, please check your wallpaper before installing for any production issues.

1. WALL PREP IS EVERYTHING

Your wall needs to be painted and DRY for a successful install. Recently painted walls need to dry for 4 to 6 weeks. If working on new walls you don't need to paint the wall, a coat of primer is sufficient

Wallpaper will NOT stick to washable paint, if you think you have washable paint, you will need a coat of bonding liquid

The wall needs to be in good condition and clean, no cracking paint, humidity spots, stains, or dust. wash with a cloth & luke warm soapy water. Get into those corners & don't cut corner on your cleaning

Walls should be smooth, free of texture or decorative finishes. Do not use a wallpaper to cover old wallpaper. They can either fall off, or stick so strong you won't be able to remove it. The outcome can be unpredictable

2. YOU READY LETS GET GOING!

Measure the width of your wallpaper panel. On the wall beginning on the left side, measure out the width of the wallpaper panel & draw a mark.

From the mark draw a vertical line ceiling to floor. This is the Guide Line for your 1st panel. Never align a wallpaper to a corner or ceiling they might be uneven

Hanging wallpaper is a 2 people project. For best results start and finish installation in a single session, don't leave the project unfinished for next day. Reserve 1 hour per panel to install

Make sure your pattern is right side up. Apply an even coat of adhesive on the fabric side of the material using a stiff bristle brush, roller.

Apply the panel to the top of the wall, allow a bit of excess to overlap the ceiling. Check if the wallpaper is straight, align the right side with the Guide Line. If not straight lift and repeat this step.

3. LETS KEEP GOING!

Glue the next panel, checking the right side is matching with the Guide Line. If you need to move the wallpaper to align it you have 30min before the glue starts to dry.

remove bubbles moving from the centre outwards.

Select your next panel of wallpaper and apply it so that its left side overlaps the right edge of the previous panel matching the repeat. Find a friend to help with the alignment. Using the same procedure apply more panels.

Smooth each panel during installation, and after finishing smooth all the arrangement again. If possible repeat the step a few days later.

4. THE LAST STEPS

After installation trim the excess paper along the ceiling and baseboard. Always use a sharp knife to cut, try not to lift your knife when making long cuts.

Our Wallpapers are washable, to clean them you can use a wet sponge, kitchen towel or damp cloth; use only mild detergents. Don't use abrasive cleaners & don't scrub the paper.

To remove

Using a steamer, scrape the wallpaper off with a scraper. If the steam doesn't penetrate the wallpaper, use a scoring tool to make small holes in the paper. Continue the process of steaming and scraping until all the wallpaper is removed

