

### YOU WILL NEED:

- 2 Pieces of A4 sized paper or card
- Scissors
- Pencil
- Metal Tape-measure


#### Blinds Type

#### Headrail Depth

Roller (Standard) Top-Fix	5 cm
Roller (Standard) Face-Fix	8 cm
Roller (Deluxe) Top-Fix	7.5 cm
Roller (Deluxe) Face-Fix	9 cm


1

Locate your blind type in the table on the right and note the corresponding headrail depth. If your window has handles or vents that extend from the frame, measure how far they protrude and add this to the headrail depth. The combined total will be used as measurement (A).

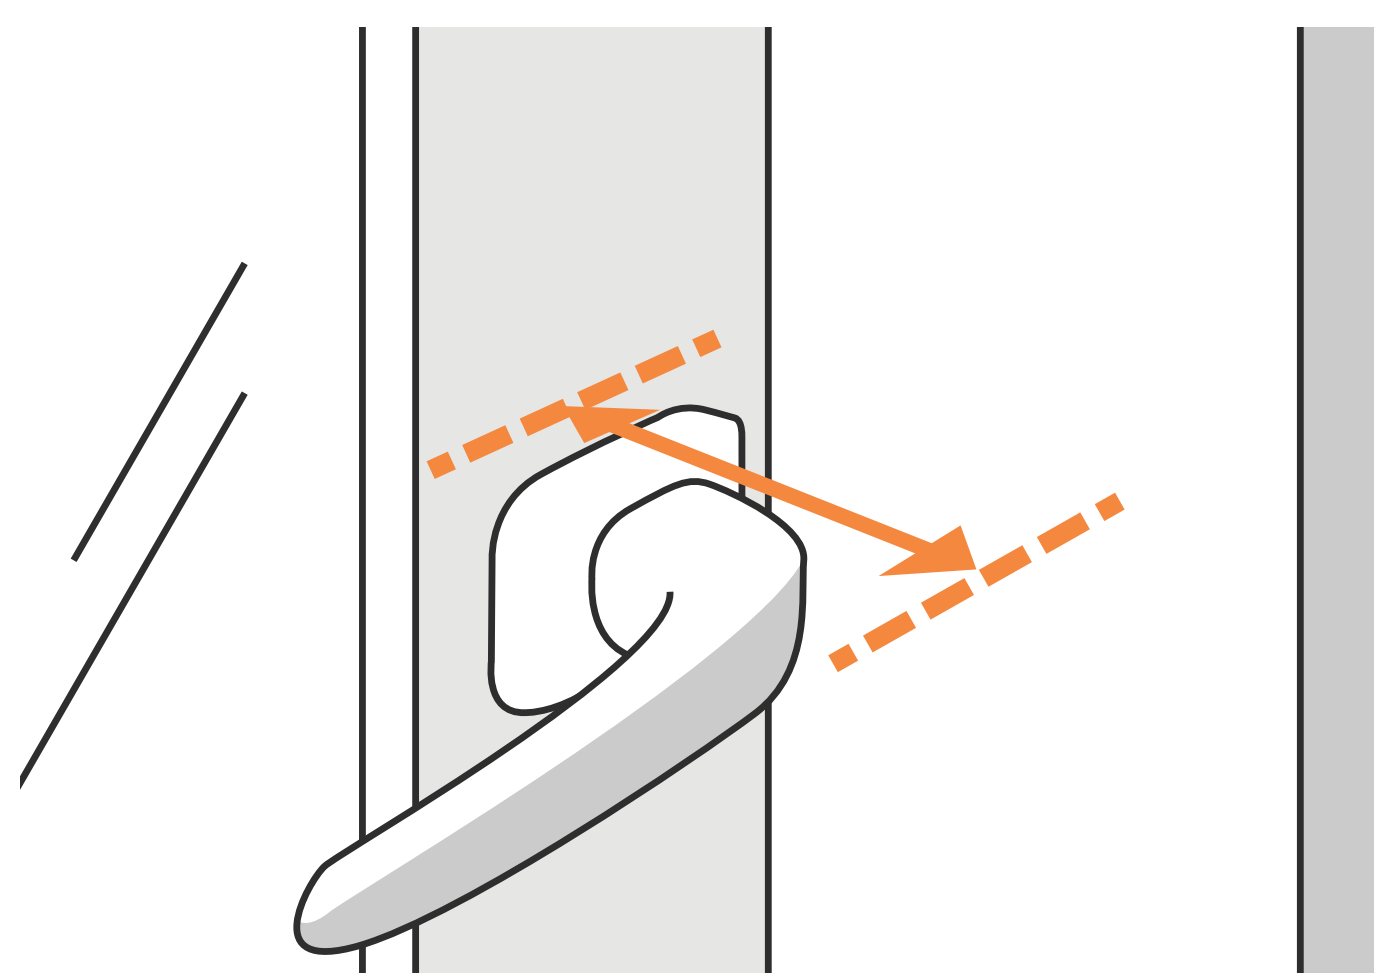


2

Take two pieces of paper, align their edges, and mark both at the specified measurement (A).

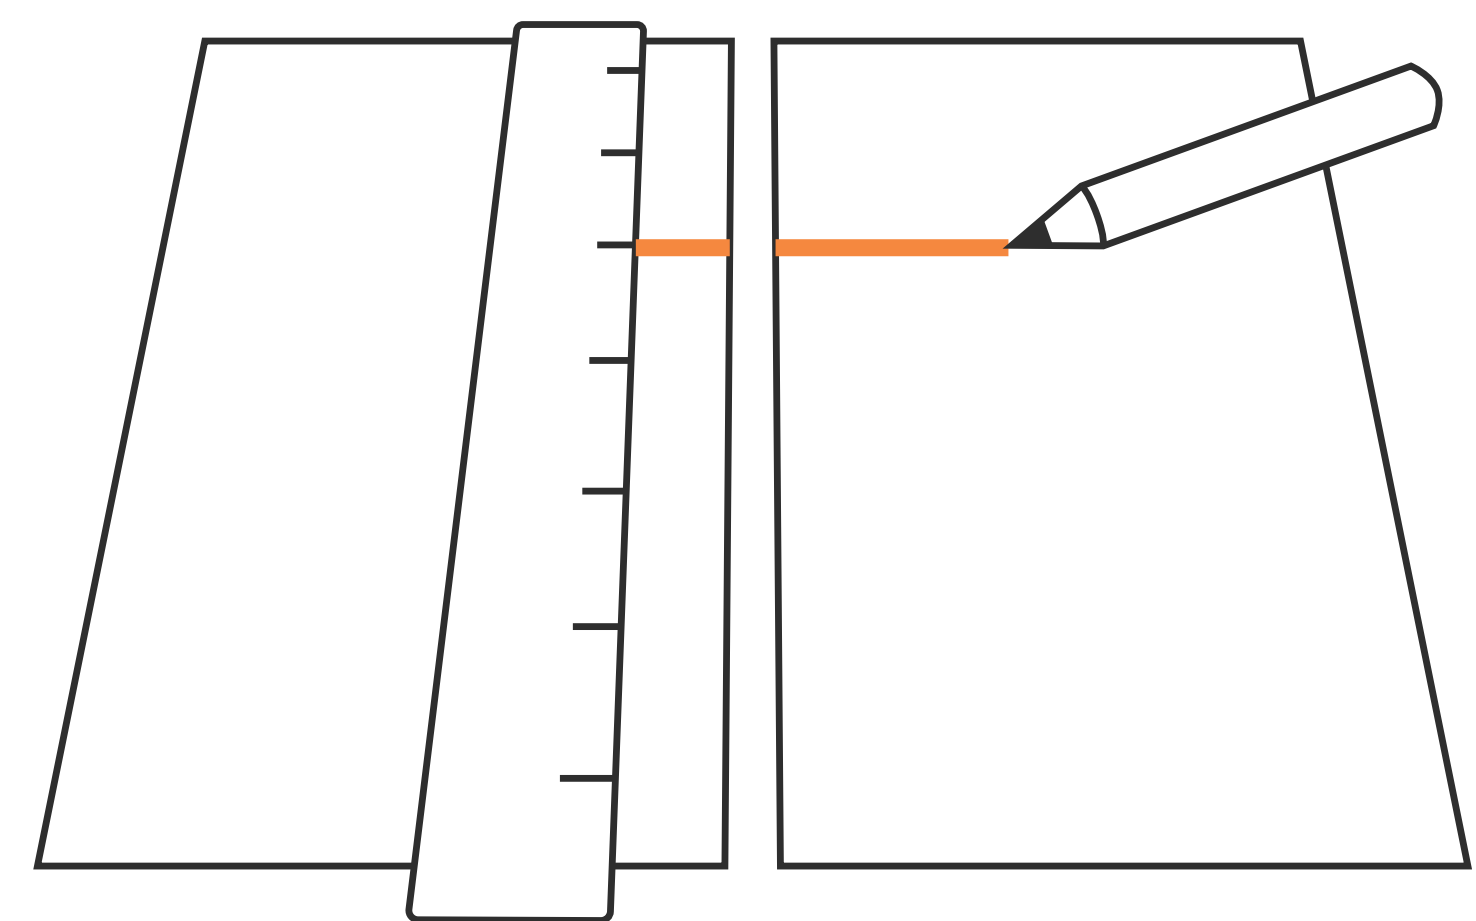


3

Slide the two pieces of paper along the window sill until the marks align.

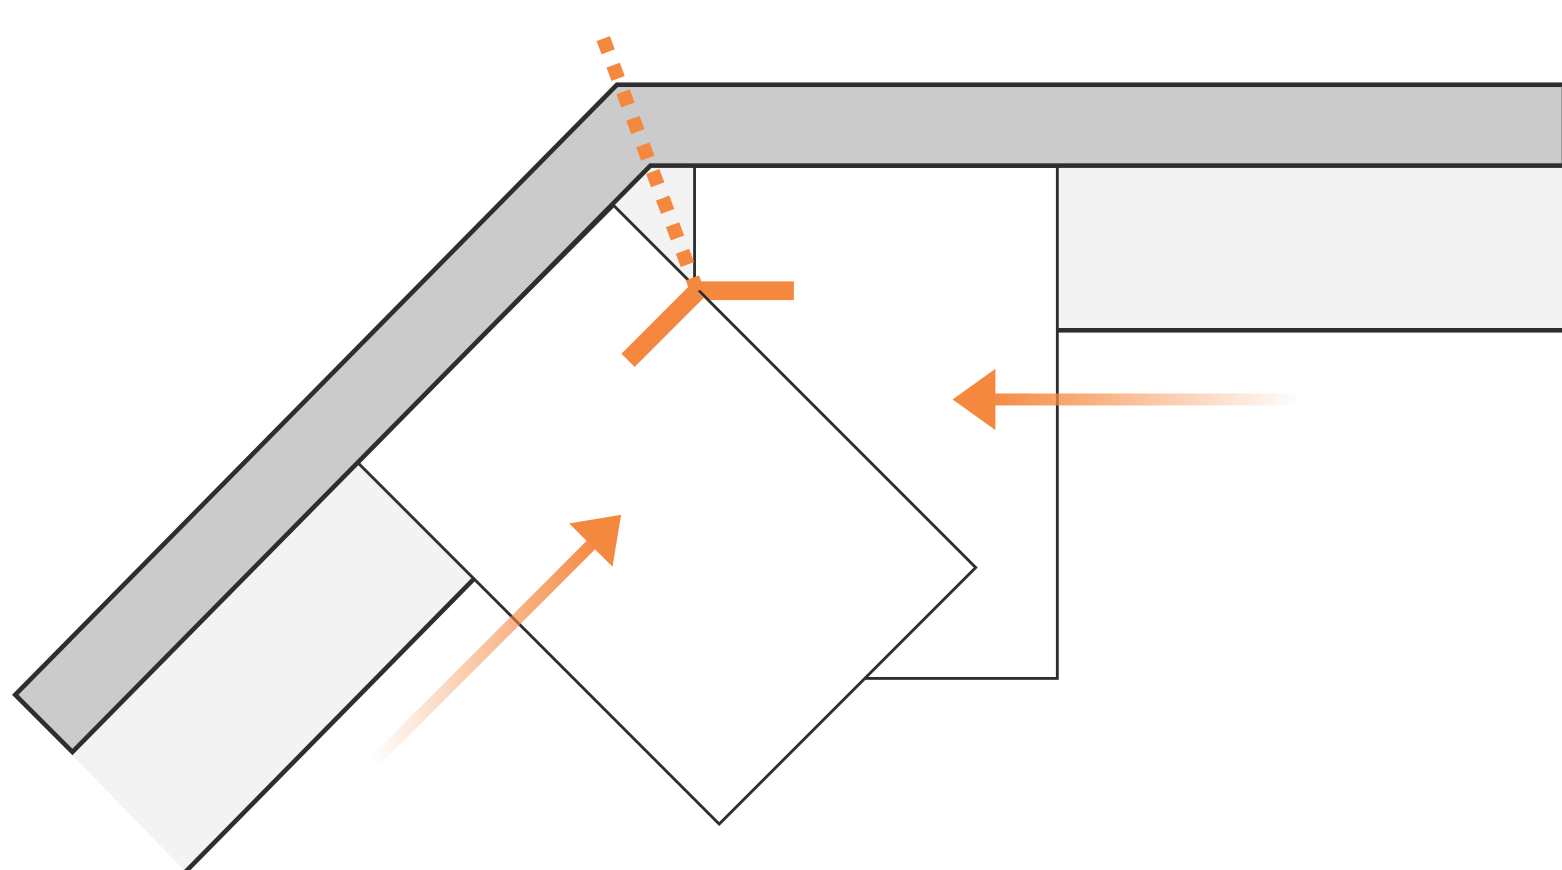


4

Use a pencil to mark the spot on the window sill where the paper meets the window frame.

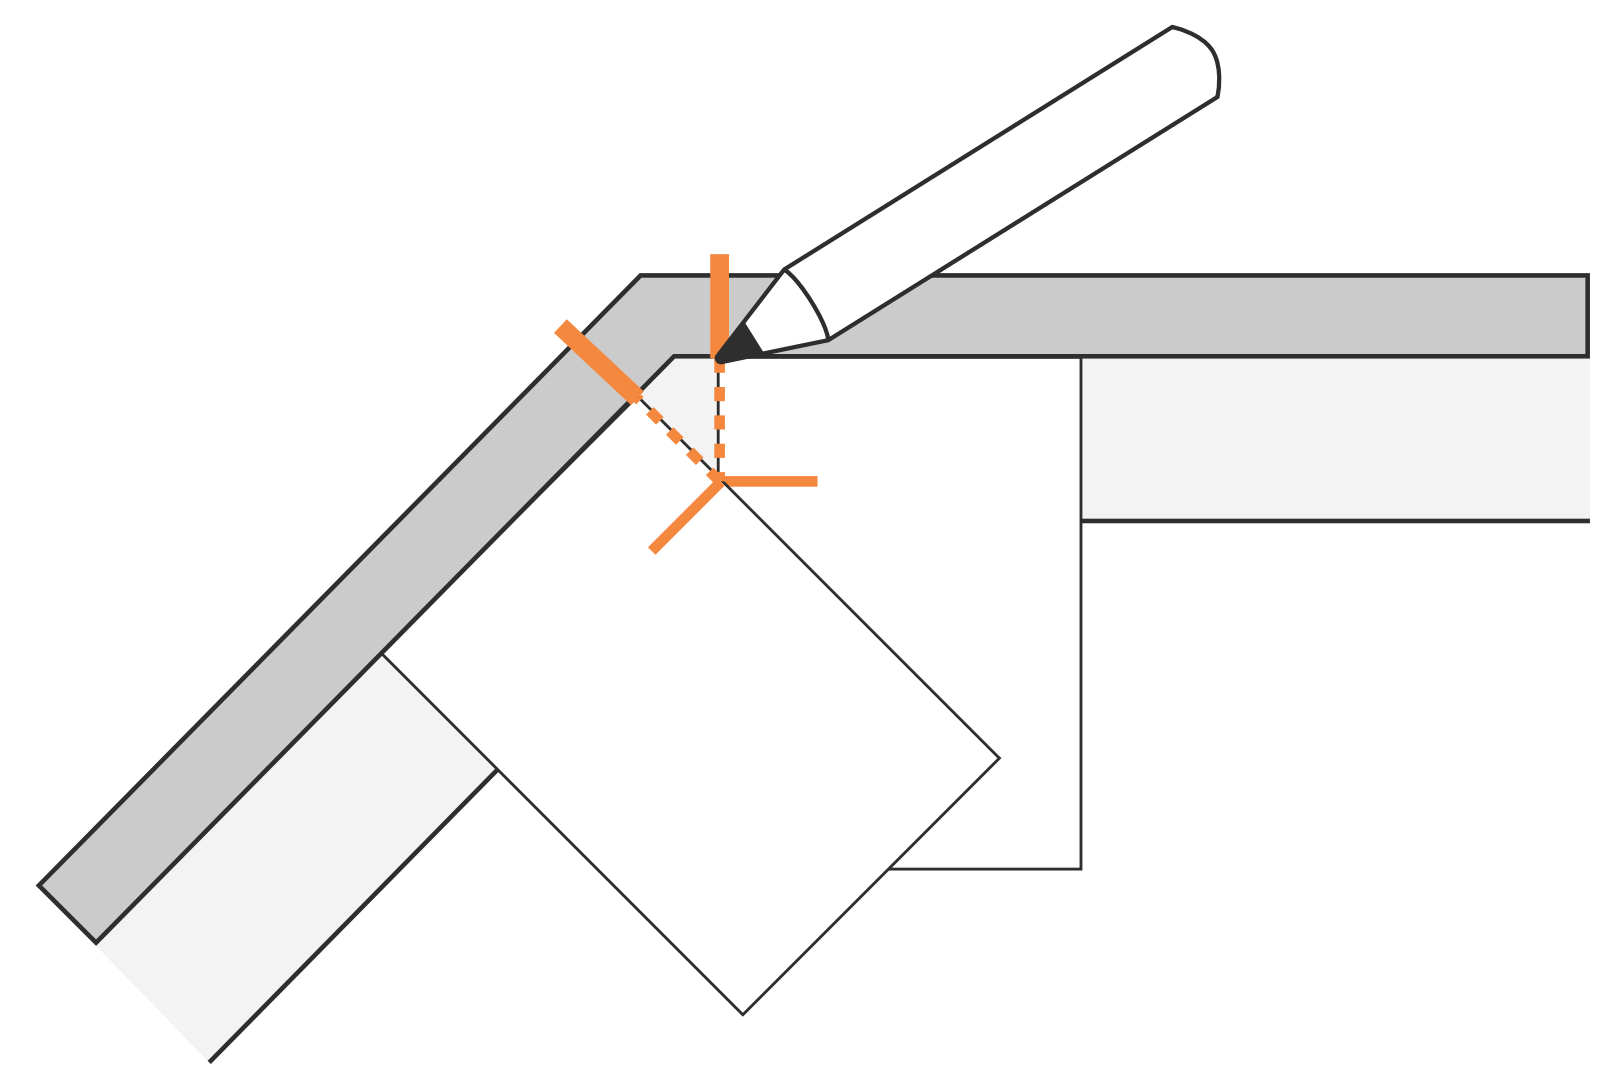

5

Measure the distance between the marks as shown in the diagram. This will determine the width of the blind you need to order.

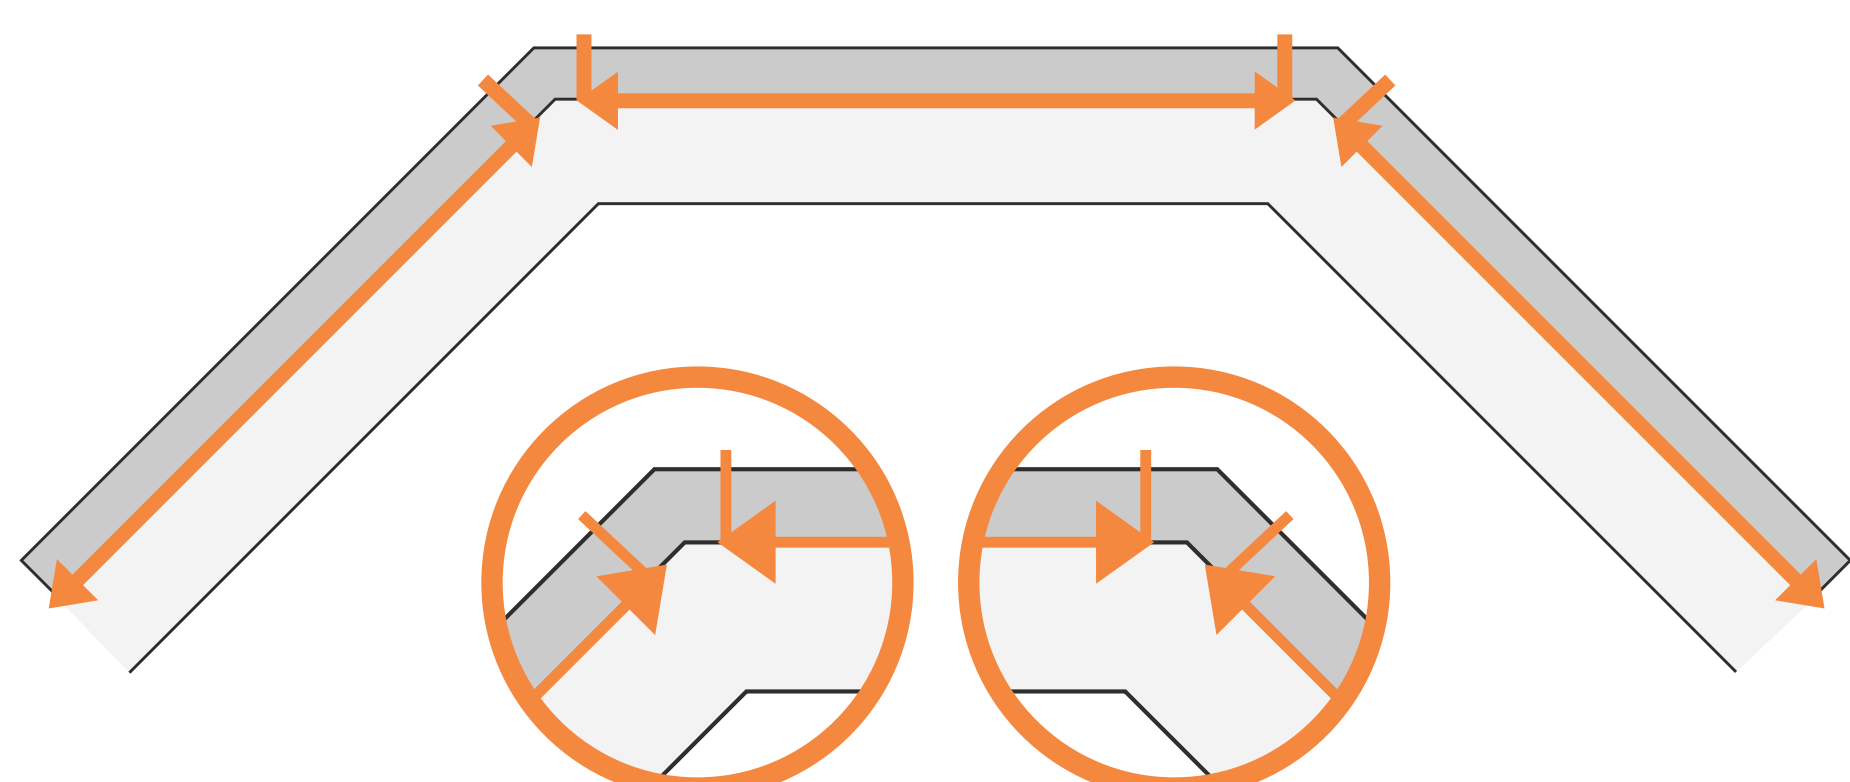

6

Measure the height from where the top of the blind will be positioned down to the desired endpoint (usually the window sill). Ensure all blinds are ordered as 'Exact Fitting'.

