


# TRAC-A-ROD #1080 / 1084

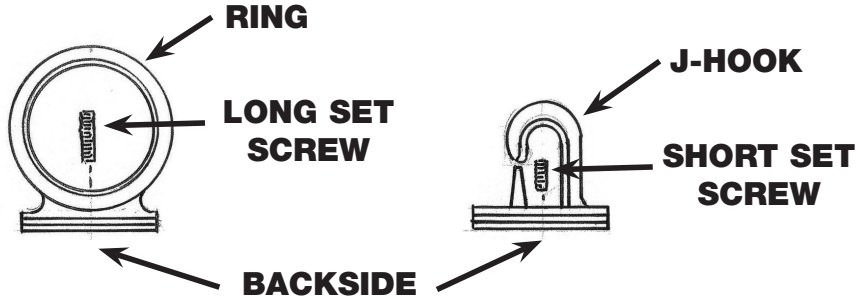

Made in USA

## ASSEMBLY & MOUNTING INSTRUCTIONS

1. Screw in the set-screws ( "Long Set-Screws" into "Rings" and "Short Set-Screws" into "J-Hooks".)  
**NOTE: Screwing set-screws in from the backside will make this process easier. Be sure the head of the screw inserts away from trac so you can use wrench to secure in trac.**
2. Locate position of Trac on wall, ceiling, overhead, etc.
3. Pre-drill holes based on holes in trac. Use drywall anchors if a stud in not available.
4. Now slide "Rings" onto bottom Trac sections. You will repeat these steps on the top Tracs using the "J-Hooks" instead of the "Rings".

**NOTE: We recommend using #8 wood or sheet metal screws, flat or oval head.**

### Surface - Screw Choice

- Wood Surface = Wood Screws
- Fiberglass Surface = Sheet Metal Screws
- Drywall = Drywall Screws
- Cement Surface = Anchor Screws with Insert.



DUBRO FISHING  
P.O. Box 310  
480 Bonner Rd.  
Wauconda, IL 60084  
(877) 776-3474  
[www.dubrofishing.com](http://www.dubrofishing.com)