



KWIK TWIST (MUSKIE LEADER KIT) - 1091 & 1149

Caution: When working with any tool, wear safety glasses.


[SEE DEMO](#)

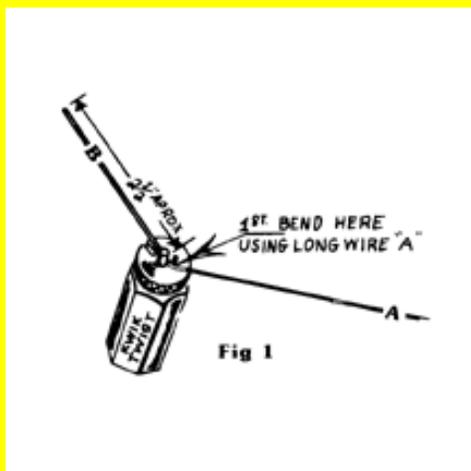

1) Place wire on top of knurled end of Kwik Twist between pins. Extend "B" section of wire about 2 1/2" as illustrated in Fig. 1. This centers the eye of the leader you are now making.

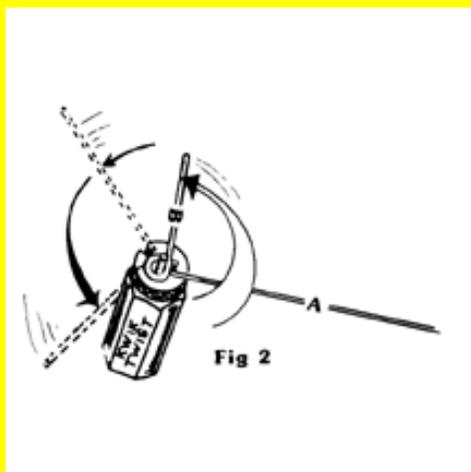

2) Now take "B" and start forming the eye of the leader by turning the wire around the center pin. Be sure to pass over the top of the small pin to complete this bond. Illustrated in Fig. 2. remove wire from tool. Now put snap or swivel on loop.

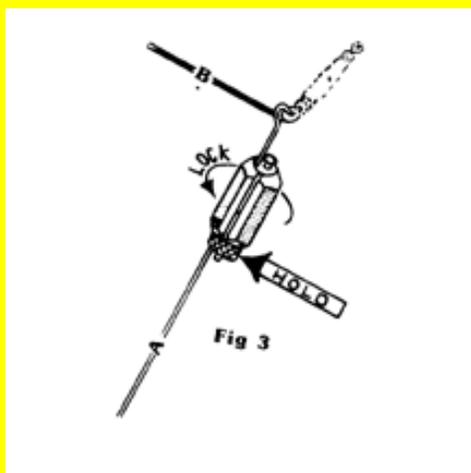

3) Turn Kwik Twist over and insert wire in slot along side of Kwik Twist tool. Lock wire into position by holding knurled end with one hand and turn hex with other hand as illustrated in Fig. 3.



4) Turn tool approx. 4 to 6 turns while holding eye with pliers or tool provided in kit. Holding eye of leader with pliers is the best way when learning to make your own barrel wrap leaders. Illustrated in Fig. 4.



5) Remove from tool by unlocking tool opposite direction of Fig. 3. To break off wire clean, shape wire into "L", Fig. 5. Using "L" shaped handle to hold wire, rotate close to main shaft of leader and wire will snap off clean.

6) Repeat procedure on other end of leader.

[Back to Fishing Instructions](#)