

KWIK TIE HOOK SNELLER - 1116

Caution: When working with any tool, wear safety glasses.

How to Tie a Nail Knot:



1) Hold line in place with thumb. Allow at least 12" of line in front of tool for winding. Form a 1" loop and thread line through opening behind line keeper.



2) Wrap line clockwise around loop and hollow post, bringing line in front of line keeper.




3) With index finger holding wraps, continue wrapping six to eight times. Feed end of line through hollow post and pull tight.



4) Hook loop on nail or boat cleat. Holding both ends of line snug with thumb, slip tool backwards to release knot from tool.

5) Pull both ends of line tight and trim off excess line.

Add Hook Snap or Swivel

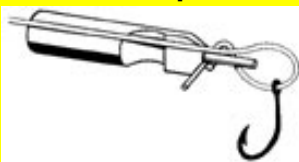

When forming a 1" loop, thread line through eye of hook, snap, or swivel. Now thread line through line keeper. Follow step 2 through 5.

How to Snell Hooks



1) Place hook in tool as shown, holding in place with thumb. Feed 15" of line through eye of hook and thread line through opening behind line keeper.



2) Wrap line around hook, line, and hollow post, bringing line in front of line keeper.



3) Hold wraps with index finger and continue wrapping six to eight times. Feed end of line through hollow post and pull line tight.



4) Hook line on nail or cleat. Hold line snug with thumb and slowly slip tool backwards until free of tool. Pull lines tight and trim off excess line.


How to Make Trailing Hooks




Follow instructions for snelling hook but add 3" to step 1. Do not trim after step 4. Use this extra length to snell trailing hook and repeat step 1 - 4.

How to Tie Two Lines Together

1) Lay one line (A) in tool as shown. Leave approximately 12" - 15" in front of tool. Feed 15" of second line (B) over first line and through line keeper.

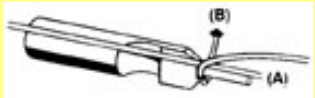

2) Wrap line around hollow post, first line (A) and in front of line keeper.

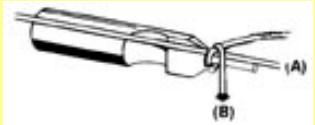

3) With index finger holding wraps, continue wrapping six times around hollow post. Now, feed end of line (B) through hollow post.



4) To release knot from tool, pull both ends of both lines tight and trim excess off line two (B).



5) Lay line two (B) in tool as shown and feed short end of line one (A) over line two (B) and through line keeper. Repeat steps 2 through 4.

[Back to Fishing Instructions](#)