

Avantgarde Divan Base Assembly Instructions

Carefully unpack your divan.
Do not use a knife to cut through packaging.




Top tips, important safety information and recommendations

Assembly: 2 person

Required area: 2.5 x 2 metres

Required tools: Cross head screwdriver, Scissors

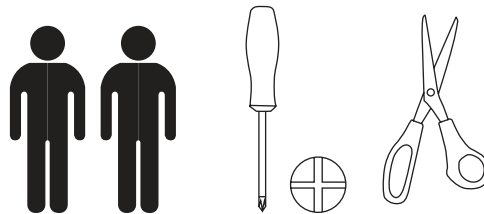

Important:

Please check that all the parts are present and read the instructions thoroughly before commencing with assembly and retain them for future reference.

It is important to inspect all items BEFORE assembly, if for any reason you need to return this item, you must return it in its original packaging. Assembled items CANNOT be returned.

Tips before you start:

We recommend that all items are assembled close to the place they will be in use and on a protective surface to avoid any unnecessary movement or contact that may damage the product.

For ease during assembly identify the parts required before commencing each step, taking care to avoid over-tightening the fittings as this may damage the furniture.

The Divan bases are universal, therefore it is very important to ensure you have the divan positioned correctly, before fitting the headboard (if applicable). Failing to ensure the divan is correctly positioned/orientated, can result in the headboard being fitting at the wrong end. This can result in the base fabric being pierced at the wrong end!

Safety:

Take extreme care when handling and lifting heavy products to avoid personal injury or damage to the item. Keep children well away from the assembly area due to the heavy products as well as choking hazard from small components.

Warning:

Please use this product for the specified purpose only, it is not to be stood on. If parts are missing, broken, damaged or worn stop using the product until fully repaired.

Failure to follow safety and warning information could result in serious injury.





Recommendations:

Please periodically check all fittings and re-tighten if necessary.

To avoid fire risks, warping and surface de-lamination keep away from strong heat sources and never allow liquid to remain on your furniture. To clean, lightly dampen a soft cloth and wipe, For use with buffing with a dry clean cloth.

Supplied Fittings

For use with headboards

A	B	H	G
<p>Base Connector</p>  <p>Pre-Fitted Only applicable to: 120 - 180cm Bed x 2</p>	<p>connector</p>  <p>Pre-Fitted Only applicable to: 120 - 180cm Bed x 2</p>	<p>Castor</p>  <p>90cm Bed x 6 120 - 150cm Bed x 8 180cm Bed x 12</p>	<p>Headboard Bolt</p>  <p>90 - 150cm Bed x 4 180cm Bed x 8</p>

Please check you have the correct fittings and read through before commencing with assembly.


Step 1



Turn both base units upside down, insert castors (H) into the sockets. This can be achieved by using the palm of your hands and applying pressure.

Do not hit with a hammer!

Step 2

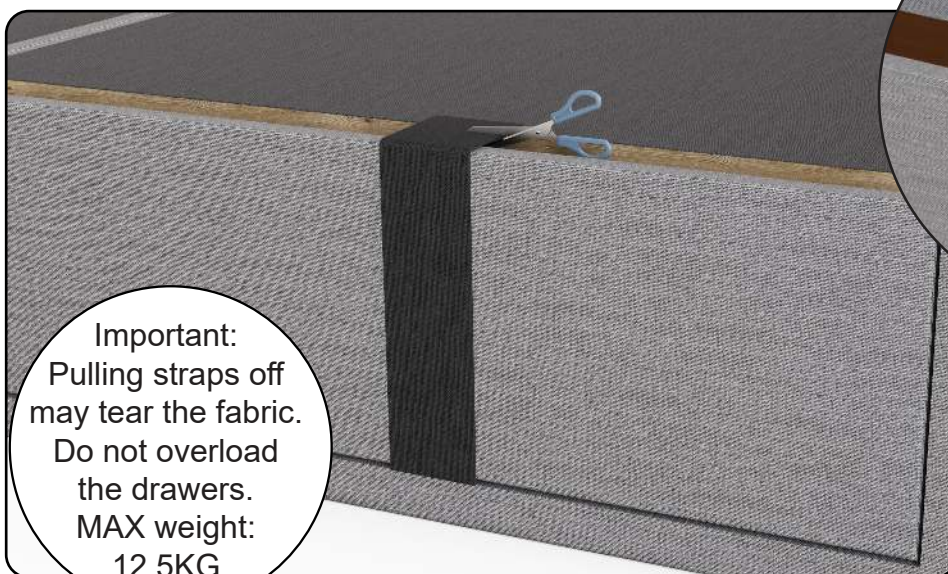

To release drawers; carefully cut restraining straps and trim the excess.

Carefully turn over the two bed sections

Note: this is a two person lift

Important:
Pulling straps off
may tear the fabric.
Do not overload
the drawers.
MAX weight:
12.5KG

Step 3



Use 2x bolt (B) to fit each base connector (A)

Rotate connector into position and tighten bolt