


Upholstered Divan Ottoman Base Assembly Instruction Guide


Carefully unpack your Divan Ottoman.
Do not use a knife to cut through packaging.

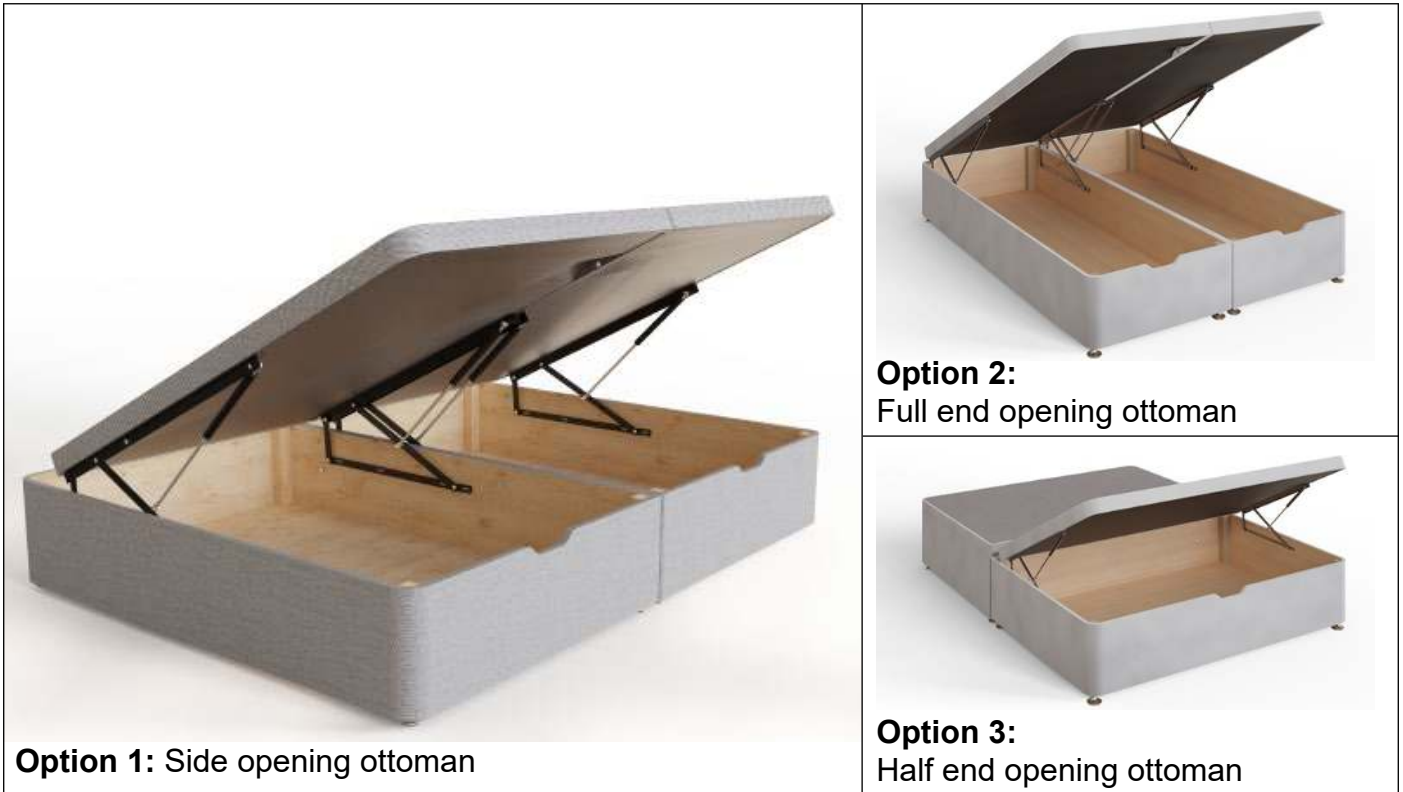

Top tips, important safety information and recommendations

Assembly: 2 person

Required area: 2.5 x 2 meters

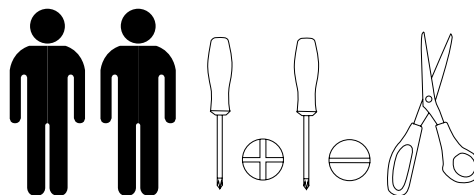

Required tools: Cross headed screwdriver, Flathead screwdriver, scissors

Important:

Please check that all the parts are present and read the instructions thoroughly before commencing with assembly and retain them for future reference.

It is important to inspect all items BEFORE assembly, if for any reason you need to return this item, you must return it in its original packaging. Assembled items CANNOT be returned.

Tips before you start:

We recommend that all items are assembled close to the place they will be in use and on a protective surface to avoid any unnecessary movement or contact that may damage the product.

For ease during assembly identify the parts required before commencing each step, taking care to avoid over-tightening the fittings as this may damage the furniture.

The Ottoman bases are universal, therefore it is very important to ensure you have the divan positioned correctly before fitting the headboard (if applicable). Failing to ensure the divan is correctly positioned/ oriented can result in the headboard being fitted at the wrong end. This can result in the fabric being pierced at the wrong end.

Safety:

Take extreme care when handling and lifting heavy products to avoid personal injury or damage to the item. Keep children well away from the assembly area due to the heavy products as well as choking hazard from small components.

Warning:

Please use this product for the specified purpose only, it is not to be stood on. If parts are missing, broken, damaged or worn stop using the product until fully repaired.

Failure to follow safety and warning information could result in serious injury.

Recommendations:




Please periodically check all fittings and re-tighten if necessary.

To avoid fire risks, warping and surface de-lamination keep away from strong heat sources and never allow liquid to remain on your furniture. To clean, lightly dampen a soft cloth and wipe, buffing with a dry clean cloth.






Supplied Fittings

33SR-16 2019-10-17




End Lift Ottoman

C	P	F
<p>Glides</p>  <p>90cm Bed x 4 120 -180cm Bed x 8</p>	<p>35mm Pozi Bolt</p>  <p>90cm x N/A 120 - 180cm x 2</p>	<p>50mm M8 Headboard Bolt</p>  <p>90cm x 4 120 - 180cm x 5 180cm x 9</p>

Side Lift Ottoman

C	P	E	G	F
<p>Glides</p>  <p>90cm Bed x 4 120 -180cm Bed x 8</p>	<p>35mm Pozi Bolt</p>  <p>90cm x N/A 120 - 180cm x 2</p>	<p>Headboard Spacer Block</p>  <p>90 - 150cm x 4 180cm x 8</p>	<p>90mm M8 Headboard Bolt</p>  <p>90 - 150cm x 4 180cm x 8</p>	<p>50mm M8 Headboard Bolt</p>  <p>90cm x N/A 120 - 180cm x 5</p>

Half End Lift Ottoman


C	D	F
<p>Glides</p>  <p>120 -180cm Bed x 8</p>	<p>U Clips</p>  <p>120 - 180cm x 2</p>	<p>50mm M8 Headboard Bolt</p>  <p>90cm x 150cm x 4 180cm x 8</p>

Please check you have the correct fittings and read through before commencing with assembly.

Quick Tip: Position your ottoman base in your desired location.

Side Lift Ottoman: Ensure you have the opening on the correct side before carrying on with the assembly.

Step 1

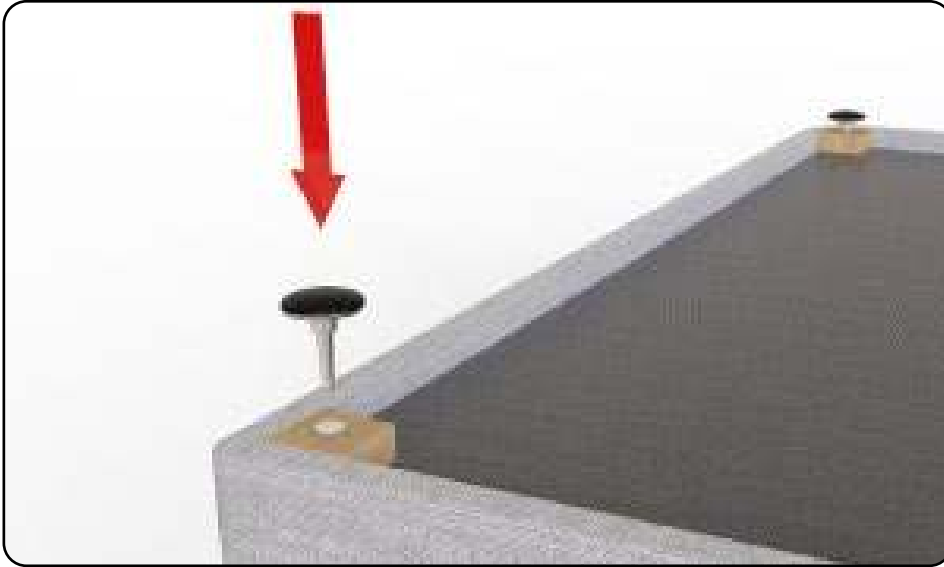


Turn both base units upside down, insert glides (C) into sockets. Use the heel of your hand to push the glide into the socket.

Do not hit with hammer!

Carefully turn your bed over
Note: this is a two person lift


Note: Steps 2 & 3 only apply to Half End Opening Ottoman

Step 2

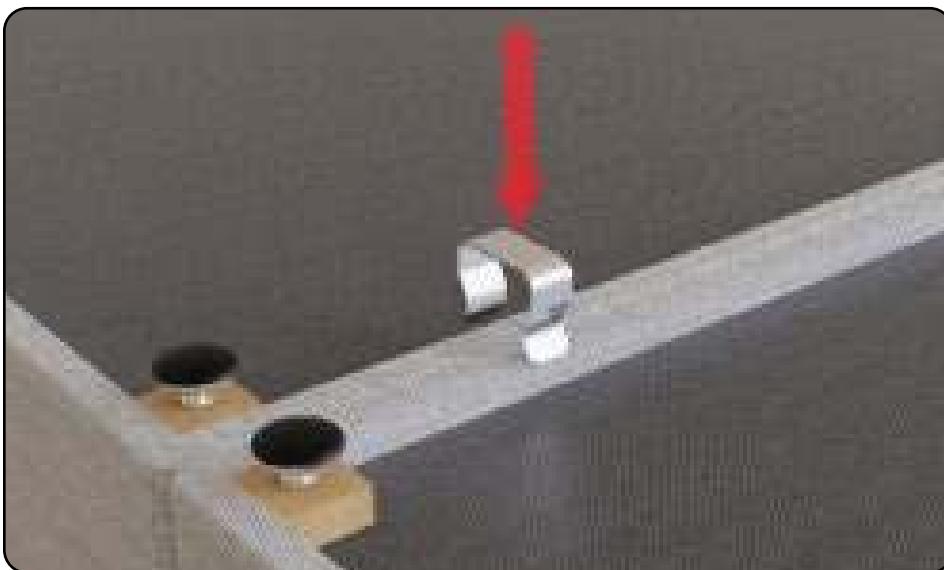

Using the heel of your hand push 2x connector (D) into position.

Step 3

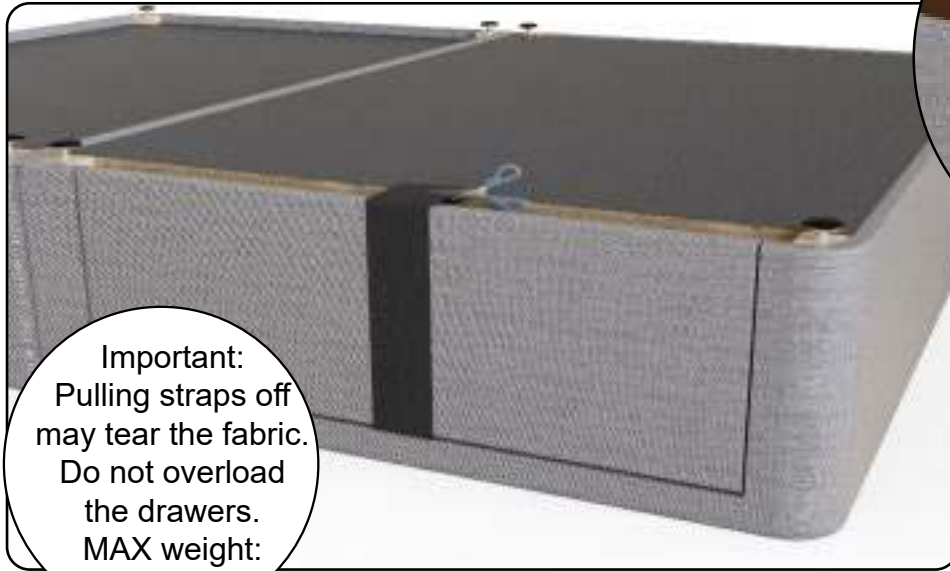


Important:
Pulling straps off
may tear the fabric.
Do not overload
the drawers.
MAX weight:
12.5KG

To release drawers carefully
cut restraining straps and trim
the excess.

Carefully turn your bed over
Note: this is a two person lift

Step 4

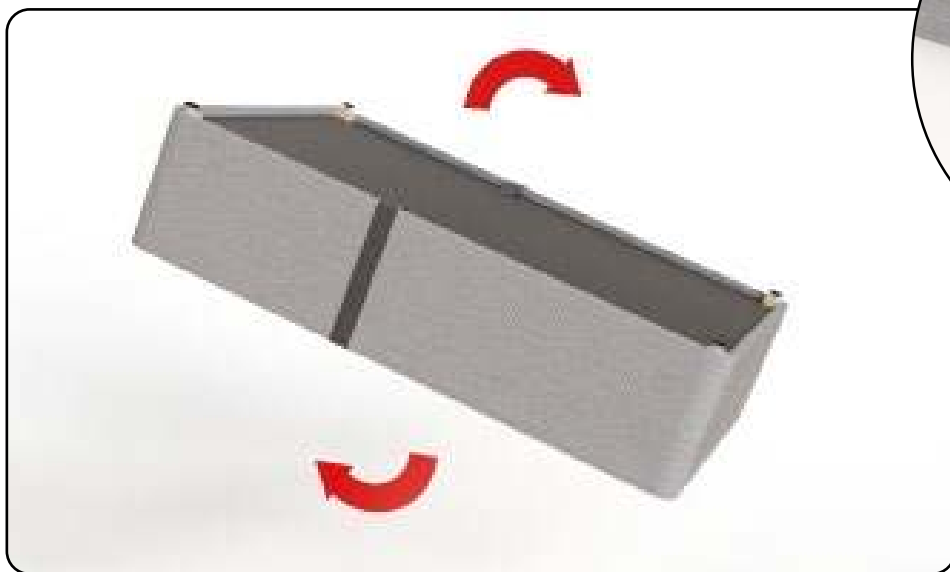


Flip bed sections over so
they are the correct way up,
then cut the straps at the
bottom of the base. (This is
a two man lift)

**Do not pull off as this
could damage the fabric**

Quick tip:

Please note that gas pistons will not function without the mattress being positioned on the base. The gas pistons require weight to be applied, before they will function. Do not try to pull the ottoman lid down, without the mattress. The ottoman lid will not come down and you risk damaging the bed.



Step 5

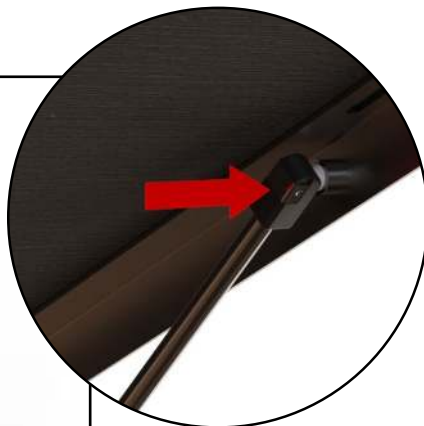

Lift the tops up and attach the gas struts by pushing onto fitting.

Note: Steps 6 & 7 only apply to Side Opening Ottoman & Full End Opening Ottoman

Step 6

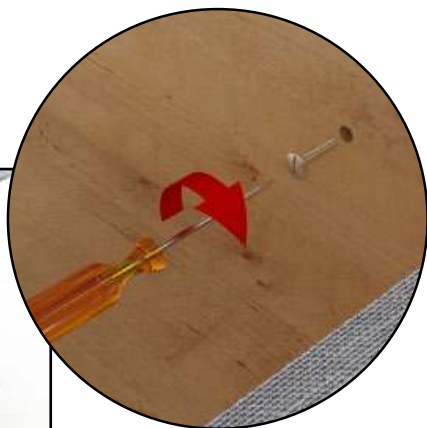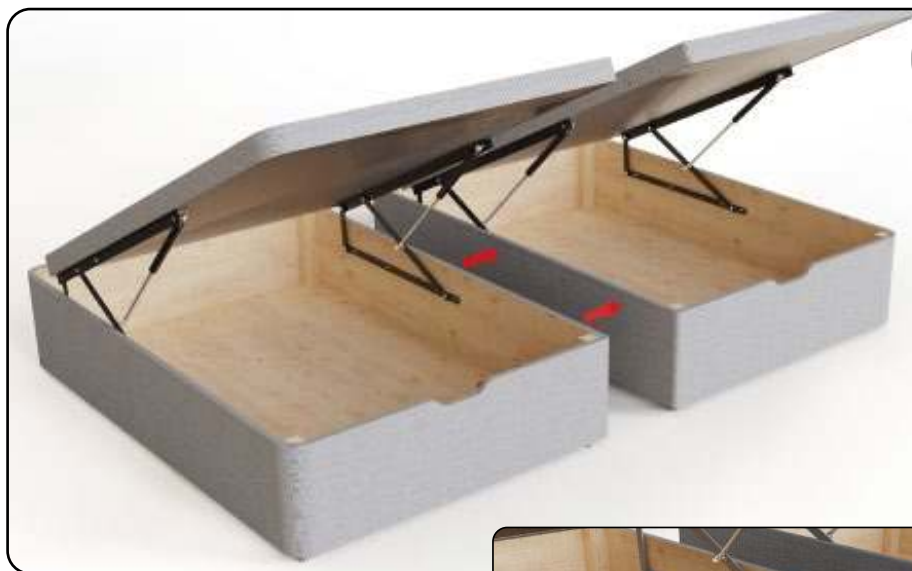

Using the screwdriver connect bases into position using 2x bolts (P).




Step 7 only applies to End Lift & Side opening Ottoman



Secure top using Bolt (F).

Note: Step 8 only applies to Side Opening Ottoman

Step 8

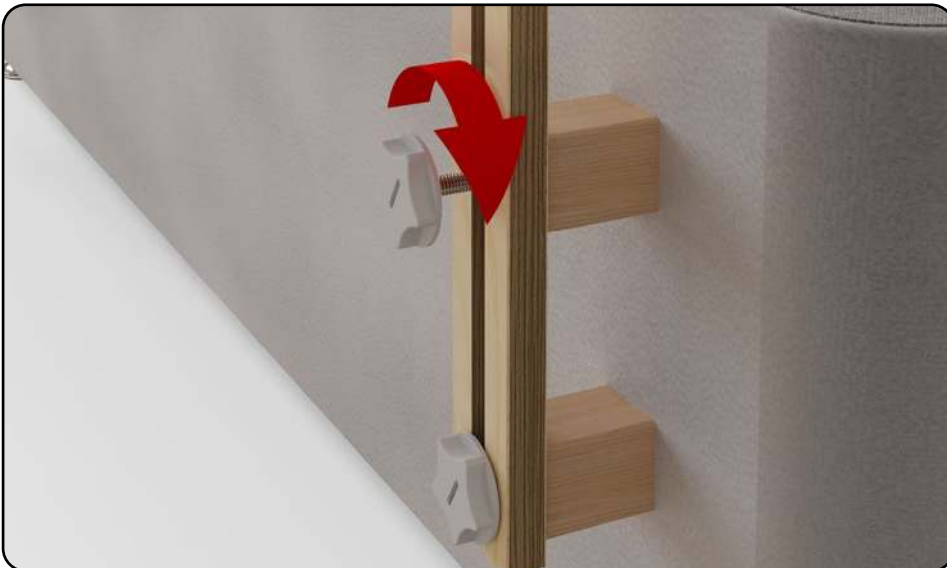

Secure Headboard using Bolts (G). Hand tighten.

How to disconnect gas pistons:



Using a flathead screwdriver, push outer lever upwards and pull the strut from the fitting.