

Serene Premium Bed Collection

Assembly Guide

Carefully unpack your frame.
Do not use a knife to cut through packaging.




Top tips, important safety information and recommendations

Assembly: 2 person

Required area: 2 x 2.5 metres

Required tools: Cross head screw driver and Scissors

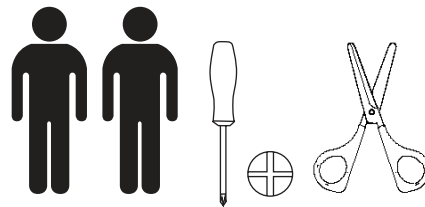

Important:

Please check that all the parts are present and read the instructions thoroughly before commencing with assembly and retain for future reference.

It is important to inspect all items BEFORE assembly, if for any reason you need to return this item, you must return it in its original packaging. Assembled items CANNOT be returned.

Tips before you start:

We recommend that all items are assembled close to the place they will be in use and on a protective surface to avoid any unnecessary movement or contact that may damage the product.

For ease during assembly identify the parts required before commencing each step, taking care to avoid over-tightening the fittings as this may damage the furniture.

Safety:

Take extreme care when handling and lifting heavy products to avoid personal injury or damage to the item. Keep children well away from the assembly area due to the heavy products and choking hazard from small components.

Warning:

Please use this product for the specified purpose only, it is not to be stood on. If parts are missing, broken, damaged or worn stop using the product until fully repaired.

Failure to follow safety and warning information could result in serious injury.









Recommendations:

Please periodically check all fittings and re-tighten if necessary.








To avoid fire risks, warping and surface de-lamination keep away from strong heat sources and never allow liquid to remain on your furniture. To clean, lightly dampen a soft cloth and wipe, buffing with a dry clean cloth.

Bed Parts

SBF01-01C-21-08

A	B	C	D
			
Headboard x1	Footboard x1	Side Rail x2	Legs x4
E	F	G	H
			
Slats Pack x1 (Pack of 10)	Centre Rail X1 (150/180cm only)	Right Wing x1	Left Wing x1


Supplied Fittings

A	B	C	D	E	F	G
						
M8 20mm (pre-fitted) x28	40mm 120-135cm x32 150-180cm x34	Spanner x1	Metal Corner Bracket x4	Wooden Corner Section x4	Slats Spacer x1	M8 100mm Pozi Bolt x6

Pozi Bolts (Only applicable, to be used to fit wings)


Please check you have the correct fittings and read through before commencing with assembly

Step 1

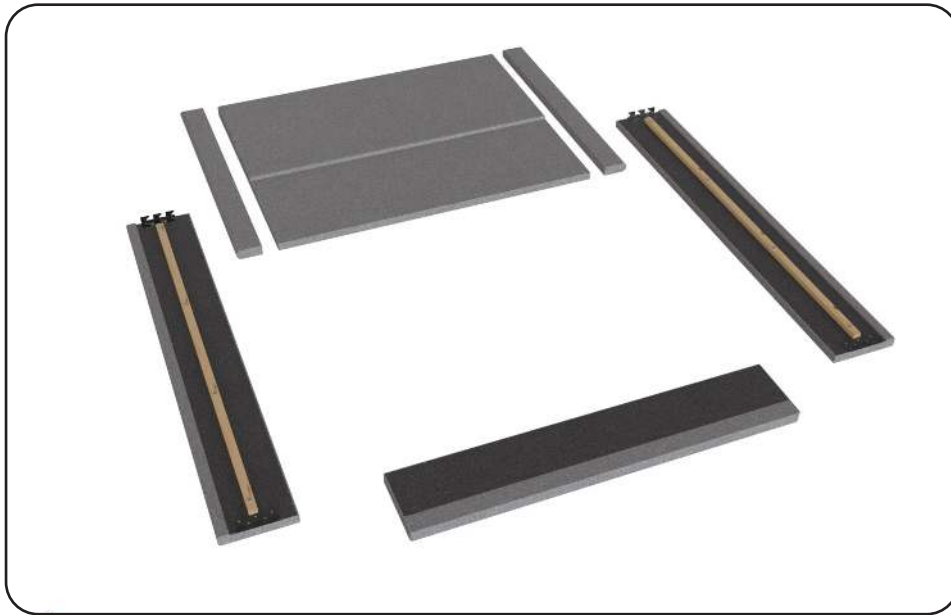

Unpack components and layout, ready for assembly

Step 2

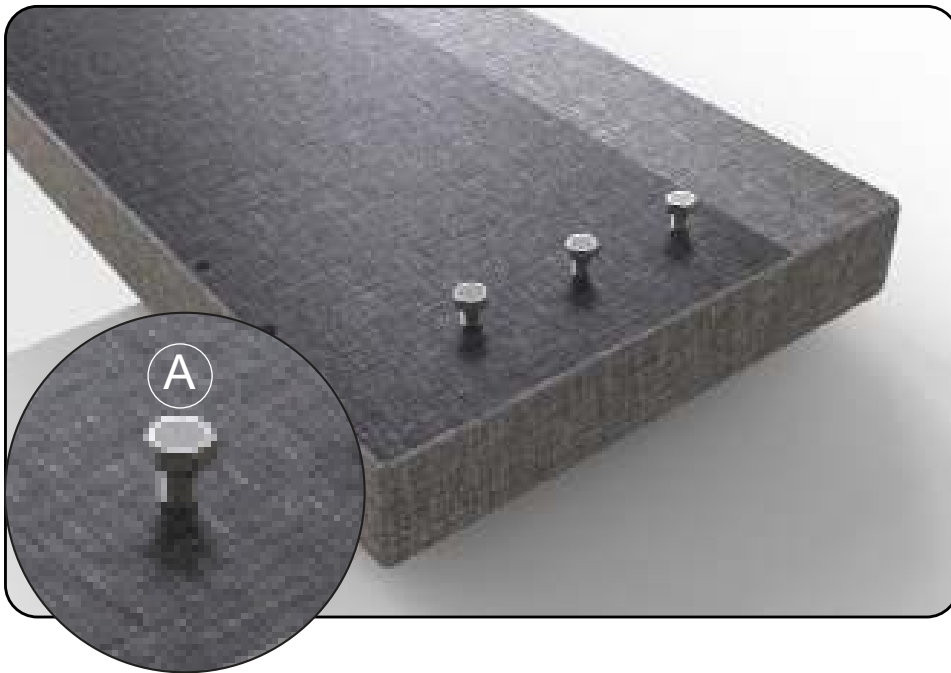


Loosen M8 nuts to the headboard and footboard in each corner

Step 3a




Hook on side rails to headboard and footboard, all 4 corners.

Step 3b

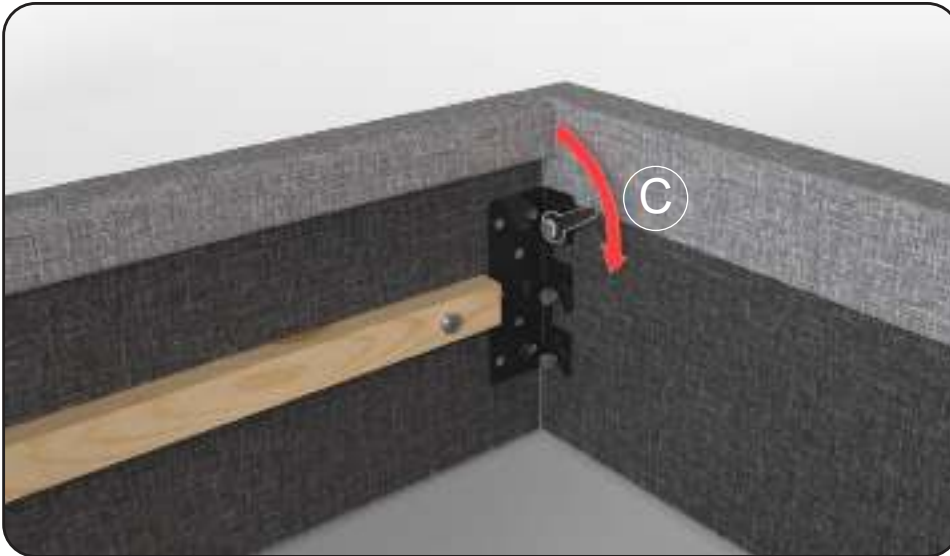

Tighten all bolts with 13mm spanner (C)

Step 4

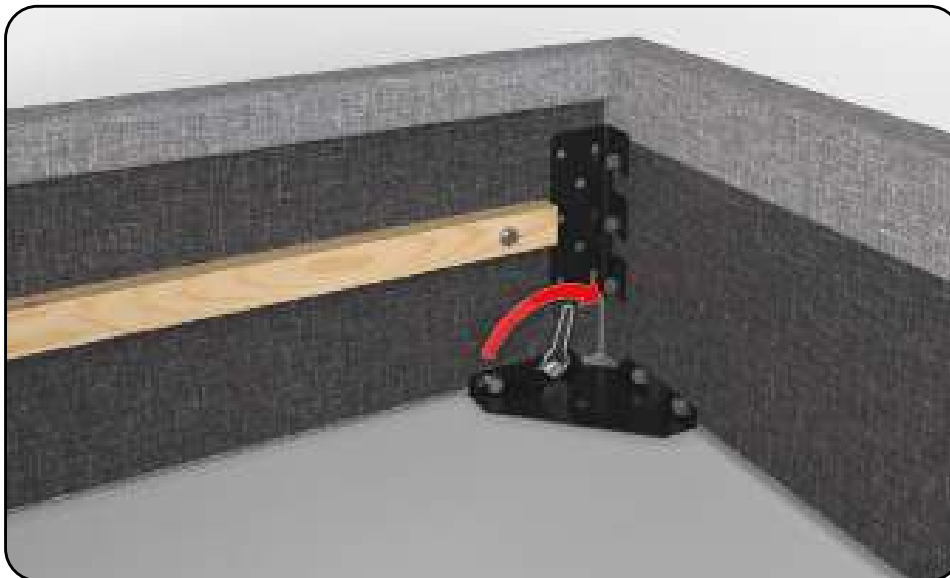


a. Fit corner bracket to all four corners, using M8 x 20mm hex bolts.(A)

Tip: Fit all four brackets with bolts slightly loose.

b. Fully tighten all M8 x 20mm hex nuts to the corner brackets.

Step 5

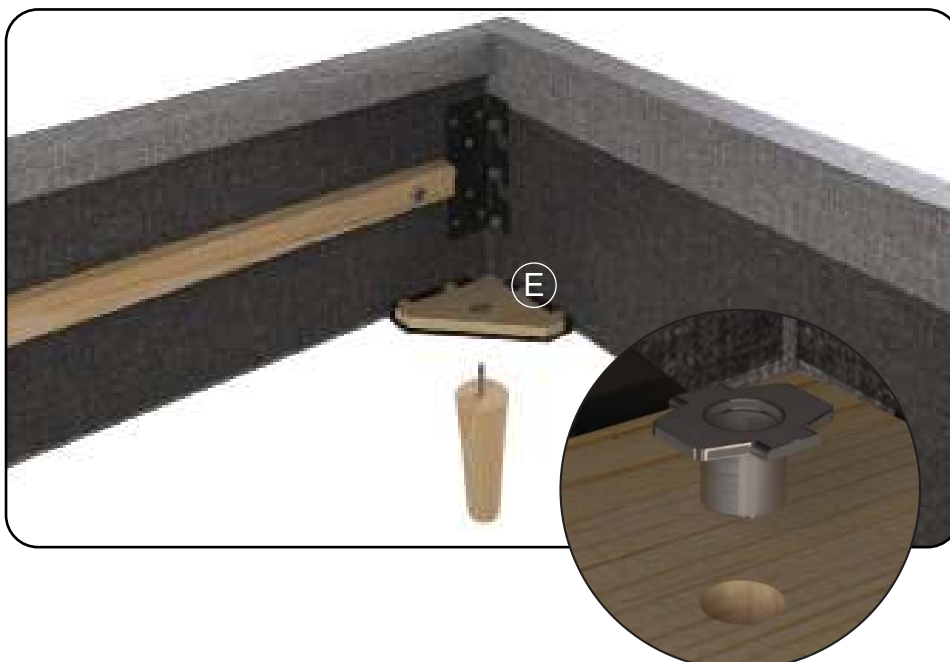


1. Place wooden corner piece above the metal corner bracket, in all four corners.

2. Lift bed in each corner, and commence to screw in leg-do not fully tighten at this stage. Repeat in all four corners.

3. Now fully tighten all 4 legs, ensuring that the legs are straight.

Tip: Please ensure the t-nut is facing up.

Step 5b

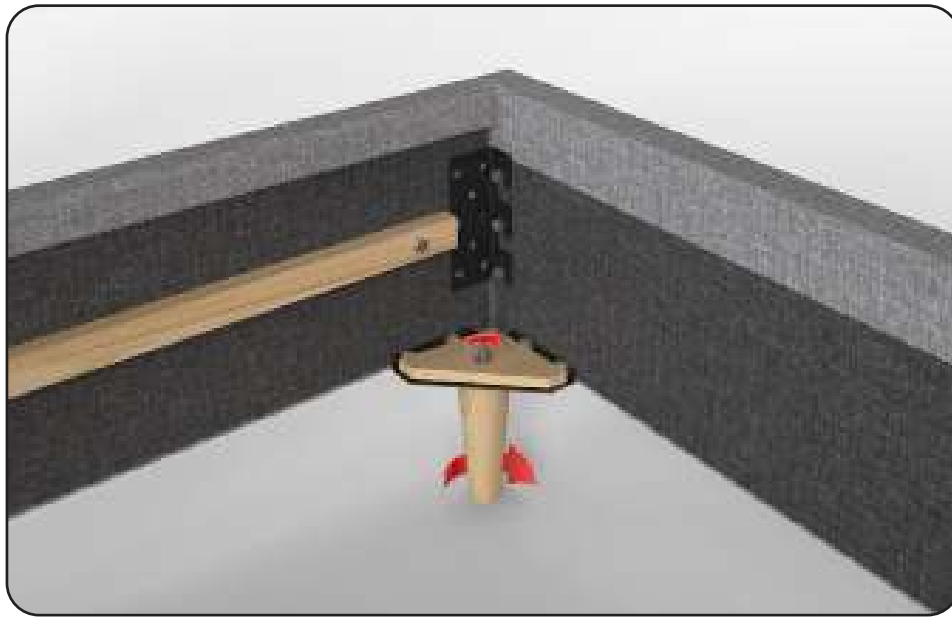


Ensure the legs are straight before fully tightening.

Step 6




If your bed has wings, please bolt the wings to the headboard. Use the M8 100m Pozi Bolts to mount the wings.

Step 7a (only applicable to 150 and 180cm beds)

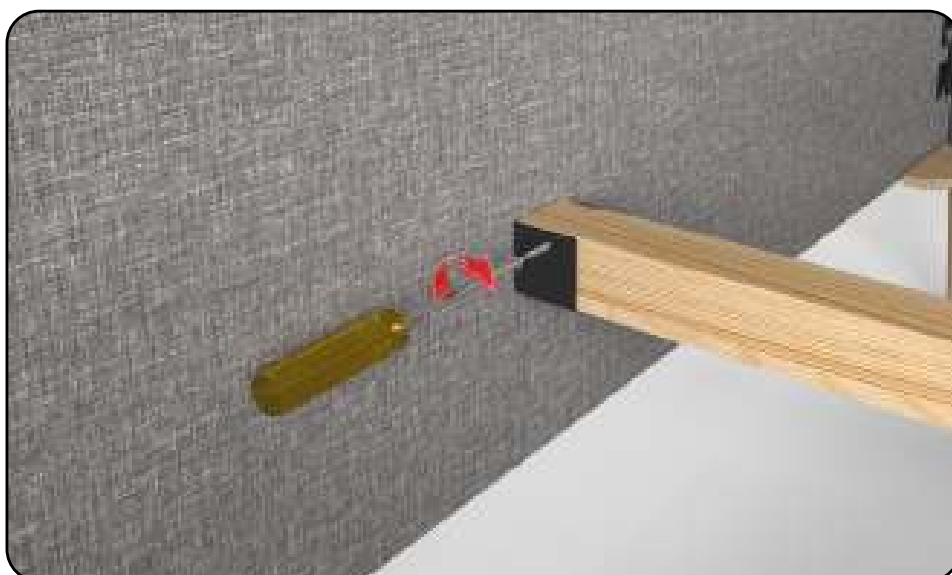

a. Position the centre rail into the centre of the bed, slotting the wood at each end into the bracket mounted on the headboard and footboard.

Step 7b

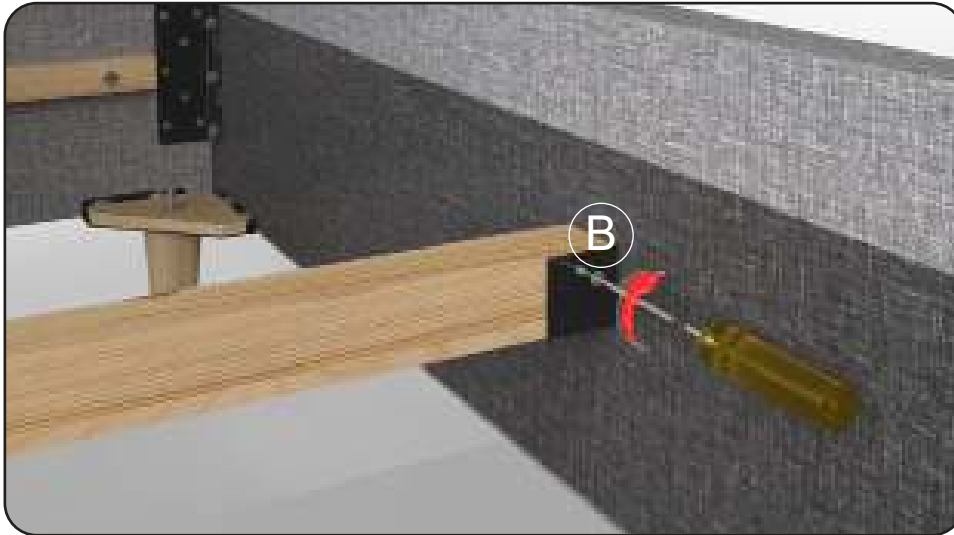


Screw in 1 x 40mm wood screw (B) into the side of the bracket pilot hole, straight into the wood. This is to be repeated at both ends


Step 8



Position bed slats across the base, use the spacer provided to evenly place the slats.
Tip: End slats should sit flush to the support rail end.

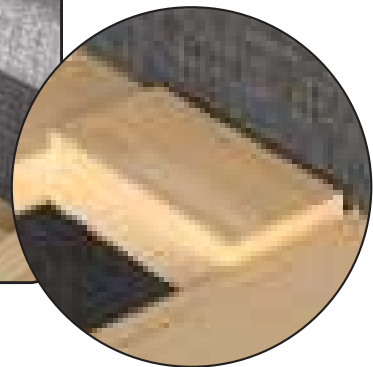

Step 9

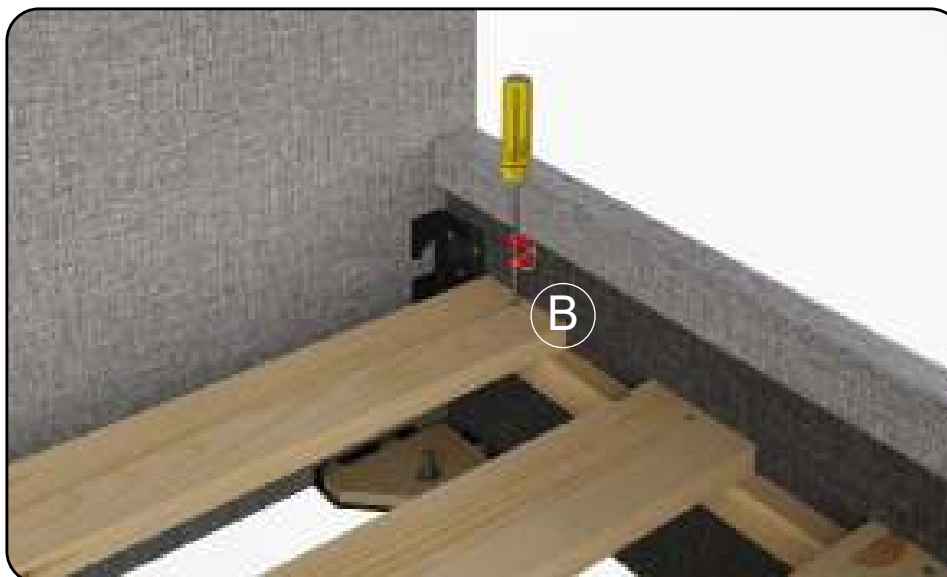

Screw in the slats, using the 40mm wood screws provided.(B)
Please ensure slats are evenly distributed, before securing them.

Congratulations, assembly is now complete



You can carefully position the bed in its final position, before placing the mattress and bedding.