

# Tall Headboard Assembly Instructions




Carefully unpack your headboard.  
Do not use a knife to cut through packaging.

Assembly: 2 person

Required area: 1 x 2 metres

Required tools: cross head screwdriver

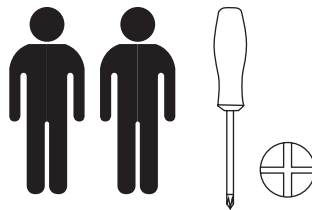

## **Important:**

Please check that all the parts are present and read the instructions thoroughly before commencing with assembly and retain them for future reference.

It is important to inspect all items BEFORE assembly, if for any reason you need to return this item, you must return it in its original packaging. Assembled items CANNOT be returned.

## Tips before you start:

We recommend that all items are assembled close to the place they will be in use and on a protective surface to avoid any unnecessary movement or contact that may damage the product.

For ease during assembly identify the parts required before commencing each step, taking care to avoid over-tightening the fittings as this may damage the furniture.

## Safety:

Take extreme care when handling and lifting heavy products to avoid personal injury or damage to the item. Keep children well away from the assembly area due to the heavy products as well as choking hazard from small components.

## Warning:

Please use this product for the specified purpose only, it is not to be stood on. If parts are missing, broken, damaged or worn stop using the product until fully repaired.


Failure to follow safety and warning information could result in serious injury.



## Recommendations:

Please periodically check all fittings and re-tighten if necessary.

To avoid fire risks, warping and surface de-lamination keep away from strong heat sources and never allow liquid to remain on your furniture. To clean, lightly dampen a soft cloth and wipe, buffing with a dry clean cloth.


# Supplied Fittings

<b>E 80mm M8 Pozi Bolt</b>		
	TALL HEADBOARD (without Wings)	
	Size	Bolt Quantity
	135cm	3
	150/180cm	4
	TALL WINGED HEADBOARD	
	Size	Bolt Quantity
	135cm	11
150/180cm	12	

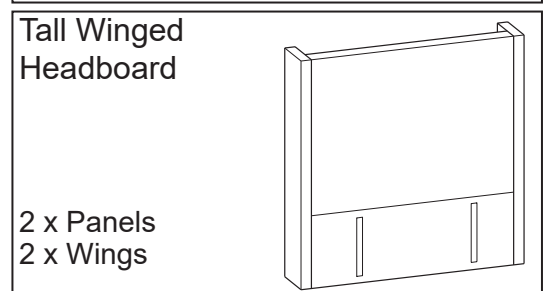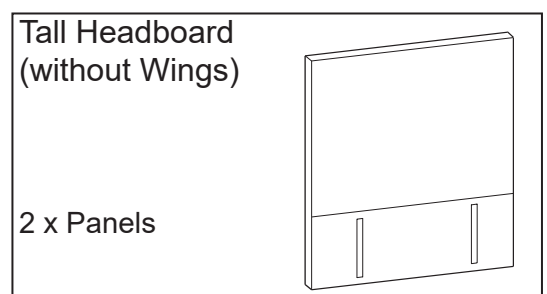

Please check you have the correct fittings and read through before commencing with assembly.

## Step 1

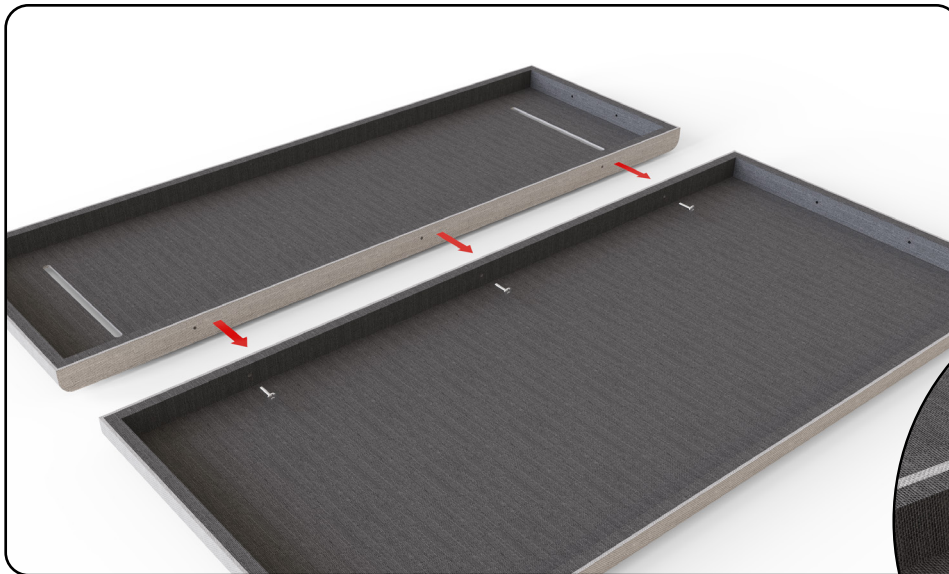


Align and secure headboard sections using bolts (E).

**Please Note:**

135cm requires x 3 (E)


150/180cm requires x 4 (E)

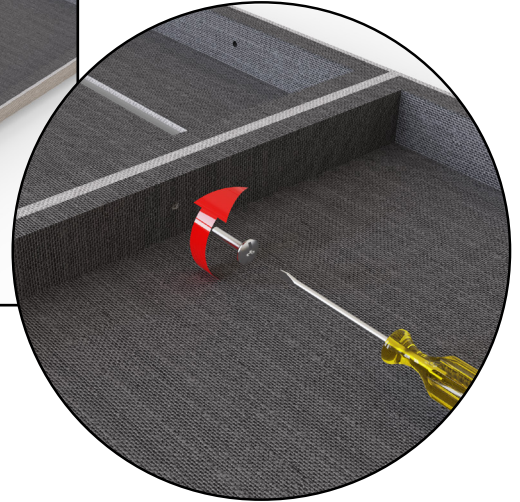

## Step 2



Fit headboard to bed base using the headboard bolts that were supplied with the bed base. These can be tightened by hand. Check your headboard is at preferred height and level before fully tightening.

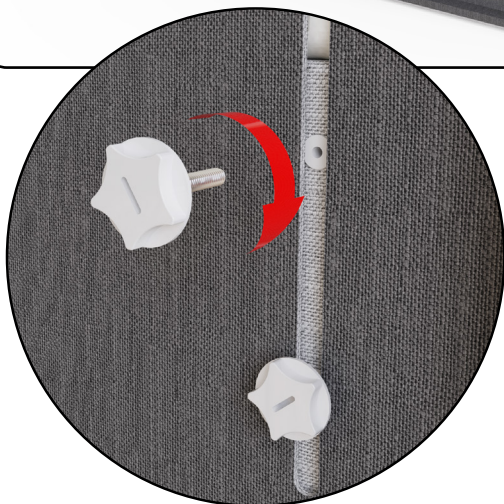


**Quick Tip:**


The metal insert may be covered with fabric - you may need to make a small hole with a bradawl to fit the bolts



### Step 3

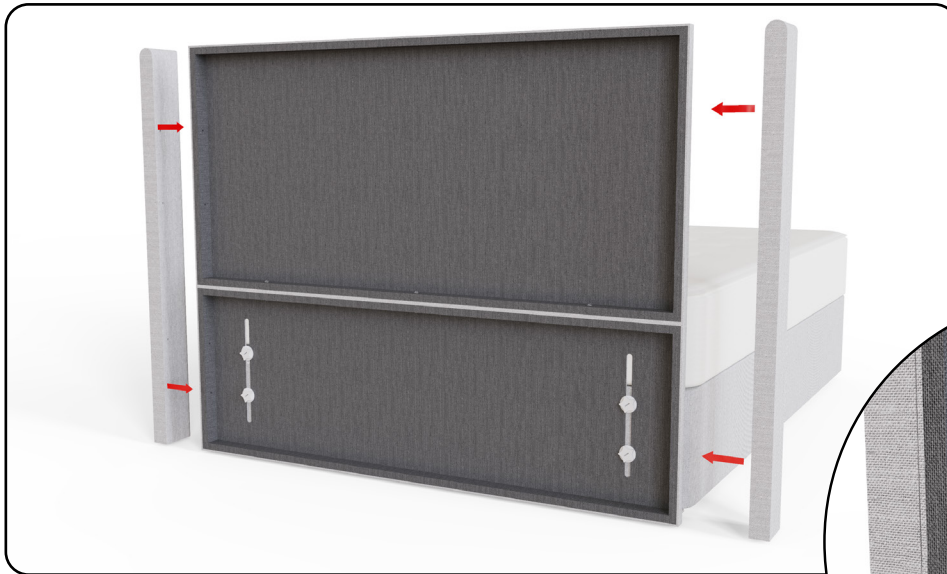

Attach wing sections using  
8x bolts (E).

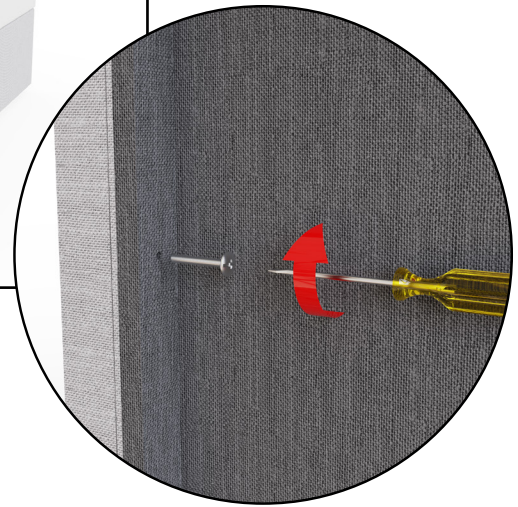

Manufactured by: Serene Beds and Furniture Limited  
Unit 1D, The Hill Top Estate, Shaw Street, West Bromwich, B70 0TX, United Kingdom