

3rd Gen 4runner/1st Gen Tacoma

DITCH LIGHT BRACKETS



Applications

installation instructions

These installation instructions apply to the following CBI Off Road products

T4R3-DLB – 1996-2002 Toyota 4Runner Ditch Light Brackets

T1-DLB – 1995-2004 Toyota Tacoma Ditch Light Brackets

IMPORTANT!

THANK YOU for purchasing this CBI product. Please read through this entire document before proceeding with installation. If you are not confident in your mechanical skills, please seek the help of a professional to perform the installation. Check your packages immediately upon arrival to ensure that everything listed is included, and to check for damage during shipping. ***If anything is missing or damaged, or if you need technical assistance with any aspect of this installation, call CBI at (208) 528-0664 as soon as possible.***

IMPORTANT!

If your CBI product comes as unpainted, bare steel or aluminum. You will want to either powder coat or paint prior to final installation, however it is very important to PRE-INSTALL the unpainted product first, following these instructions, BEFORE painting or powder coating any of the components! This will ensure that all parts are correct and any incidental trimming or drilling will have been done prior to coating. Also, it will give you a practice run to familiarize yourself with the process, to lessen the likelihood of damaging the finish during final installation. CBI Off Road is NOT RESPONSIBLE for paint or powder coating costs, damage to paint or powder coating, or costs associated with inadvertently painting or powder coating components that are defective or were shipped or assembled in error. It is the customer's responsibility to pre-install and verify that all parts are correct prior to paint or powder coat


Questions?

Call: 866-522-0697


Email: info@cbioffroadfab.com

Hardware 1:1 Scale View

A 4 – 8mm X 30mm X 1.25mm



B 4 – 3/8" SAE Washers

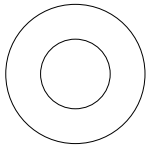

Exploded Product/Hardware View



1.



2.



Installation

1. It is necessary to remove the plastic cowl between the hood and windshield.
2. For ease of installation we recommend detaching the upper outer fender from the inner fender

Installation

- 3.**
Pull the fender to gain access to the hood hinge that is bolted to the inner fender




- 4 - 5.**
Remove factory hinge bolts and replace with supplied hardware




x2 per side



8mm X 30mm X 1.25mm



3/8" SAE Washers

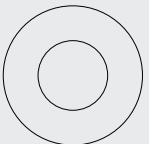

6.

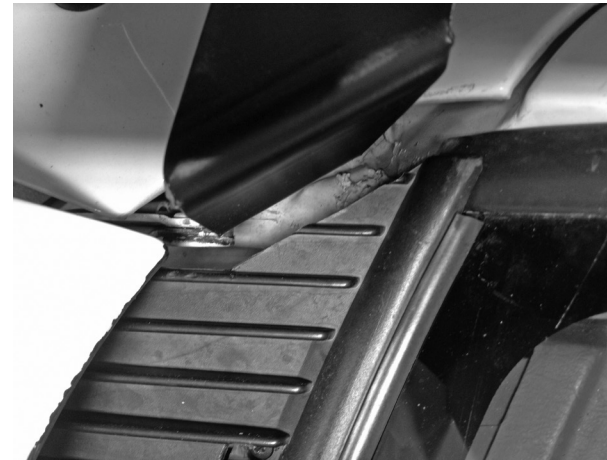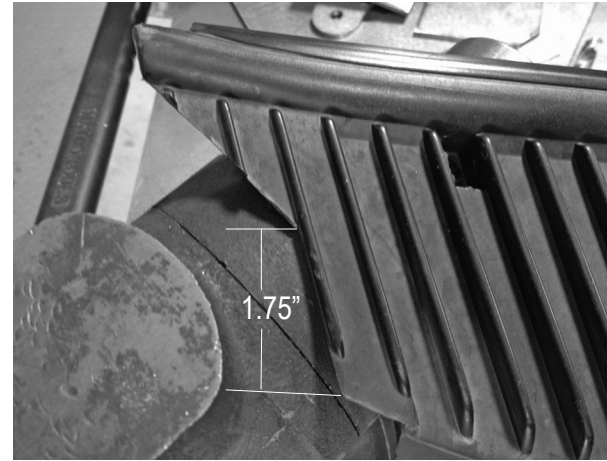

Installation

- 3.**
The plastic cowl will need to be trimmed to fit the Ditch Light Bracket.



792 E Iona Rd.
Idaho Falls, ID 83274
cbioffroadfab.com
208.528.0664