

C#PLUS®

MIDNIGHT TAIL LIGHT 2016+ TOYOTA TACOMA

PACKAGE CONTENTS



MID-NIGHT TAIL LIGHT X 1set






INSTALLATION PROCESS




01. Remove 2 screws.



02. Remove the Tail Lights.

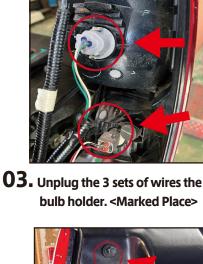

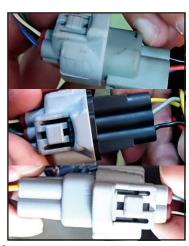

04. Then connect the plugs on the COPLUS tail lights respectively.



05. Combine the fitting socket of the 2 COPLUS tail lights and fit to the car body positioning hole. <Marked Place>



06. Tighten the 2 screws <Marked Place>